



SERENE

BED 5 ft.

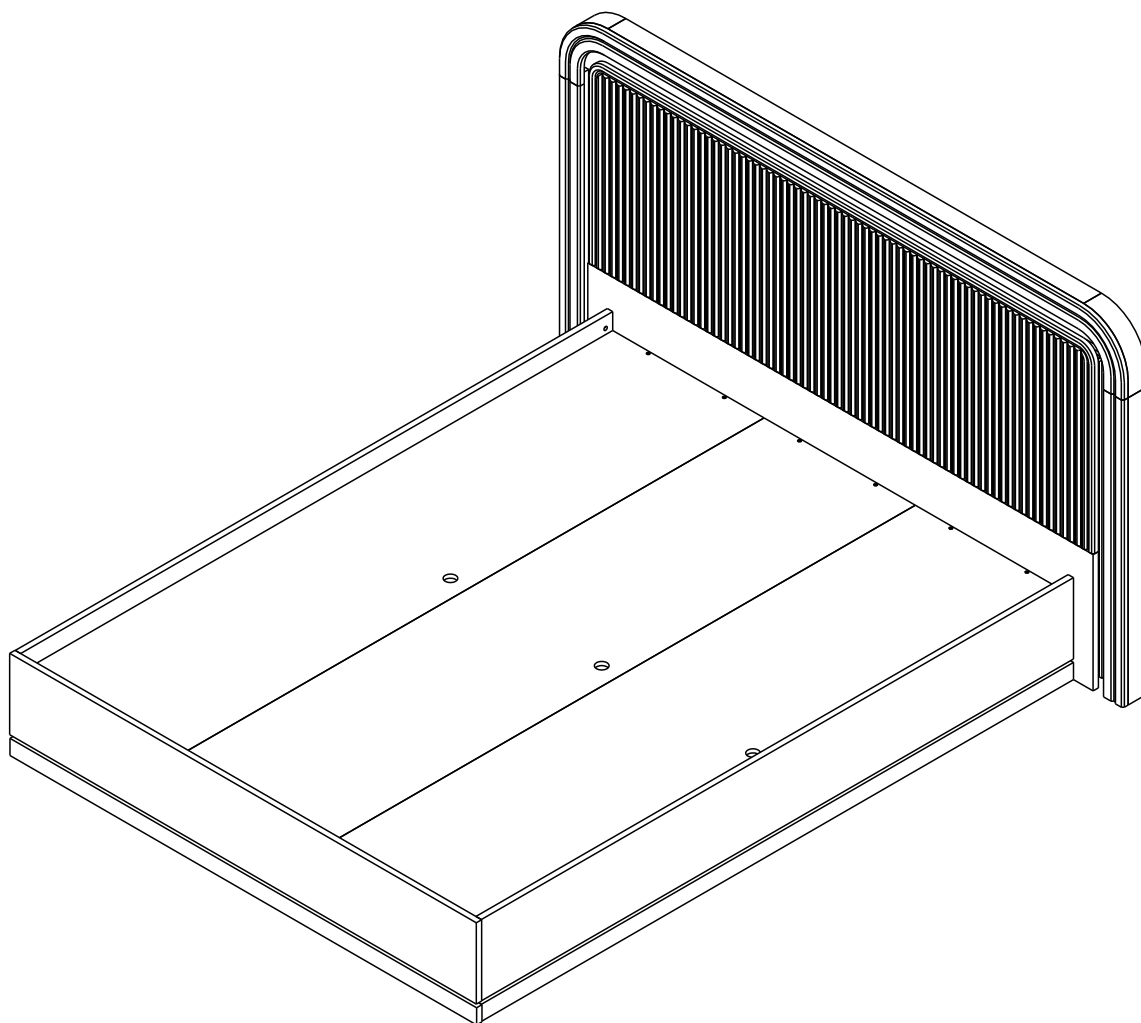


CONNECT SYSTEM


1

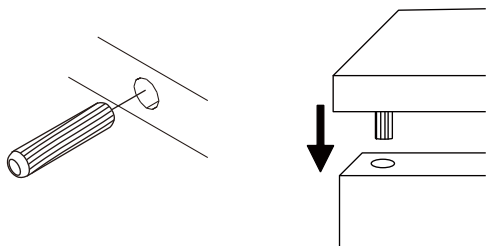



2

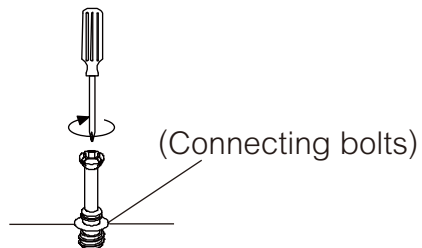




3

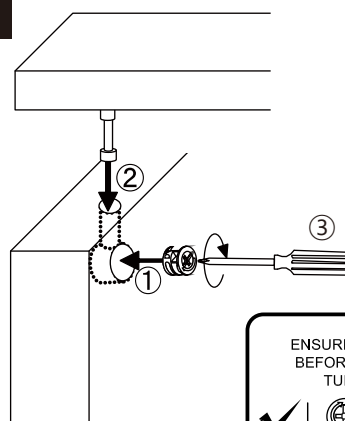

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE


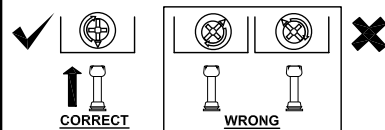


M4x16mm.


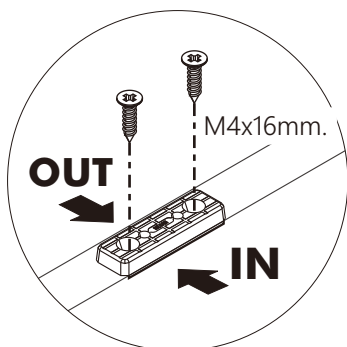








M6

M6

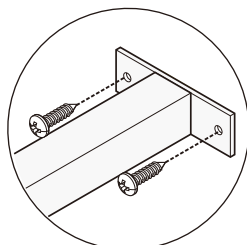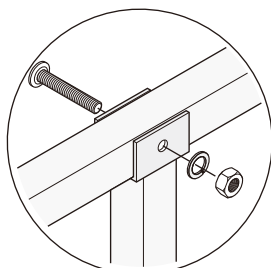


M4x16mm.

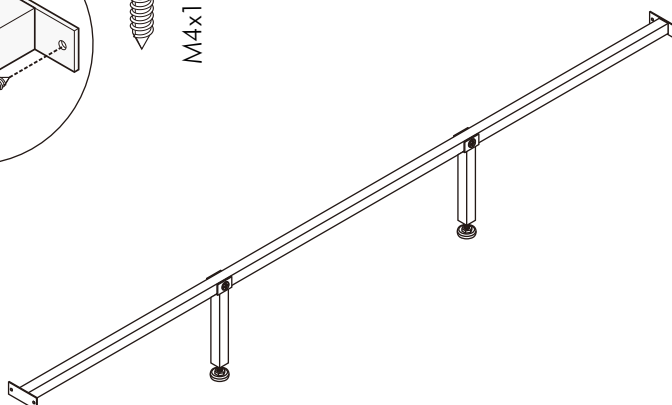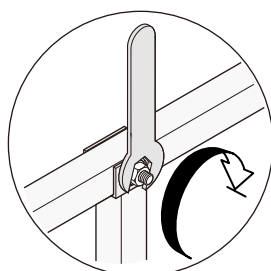

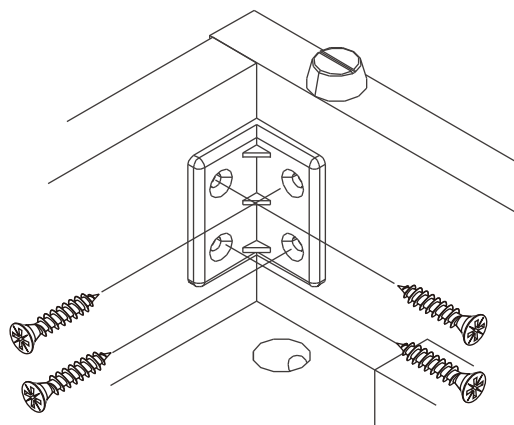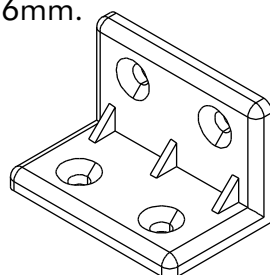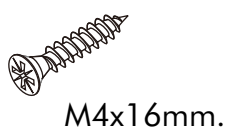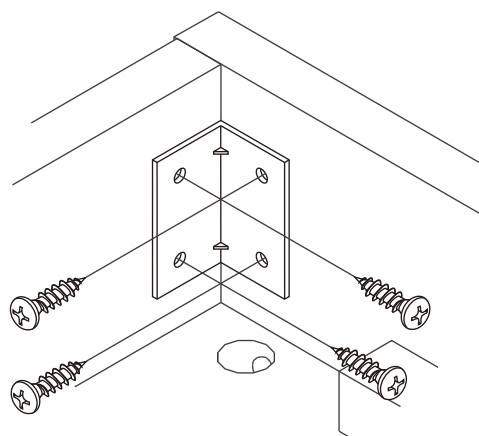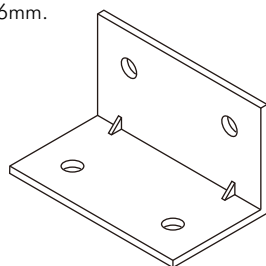

HARDWARE


-BODY SET




x 4




x 4




x 4



x 4

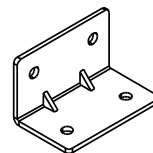

x 4



x 9



x 4




x 4




x 3



x 33




x 82

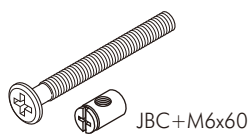

x 6



x 27



x 4




x 38


ASSEMBLY

-BODY SET





1.

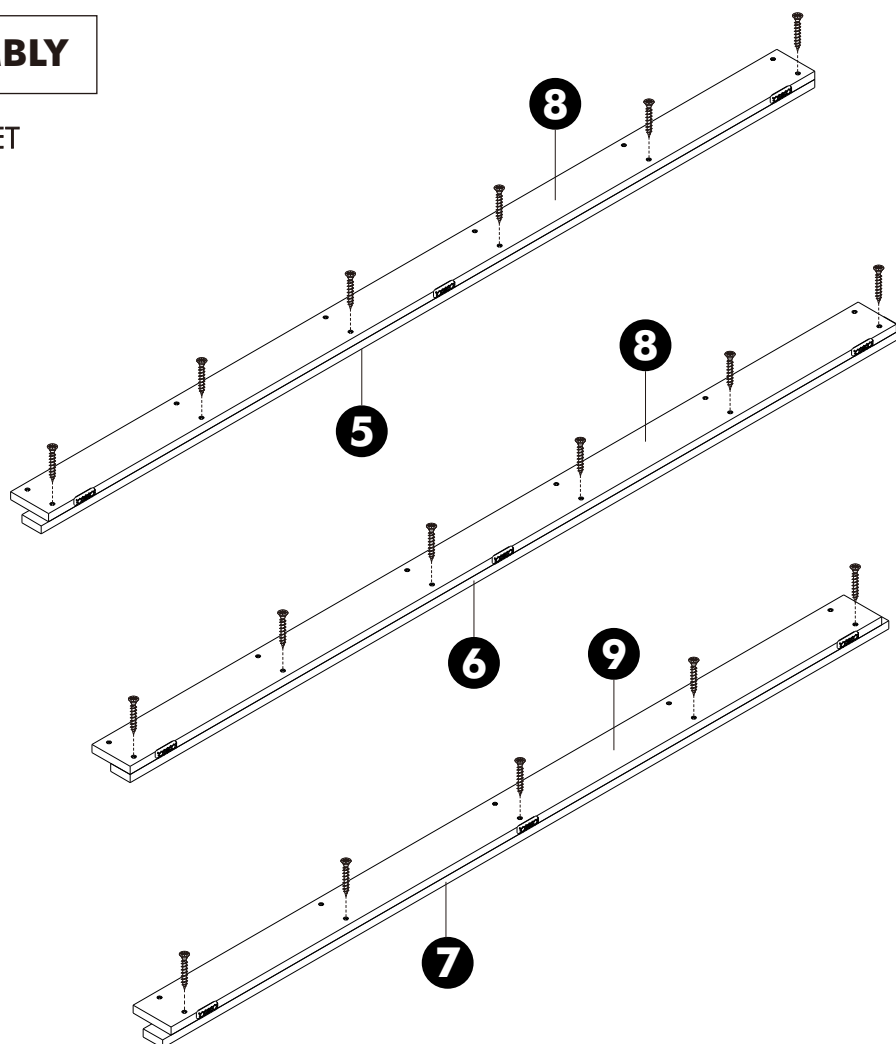








2.

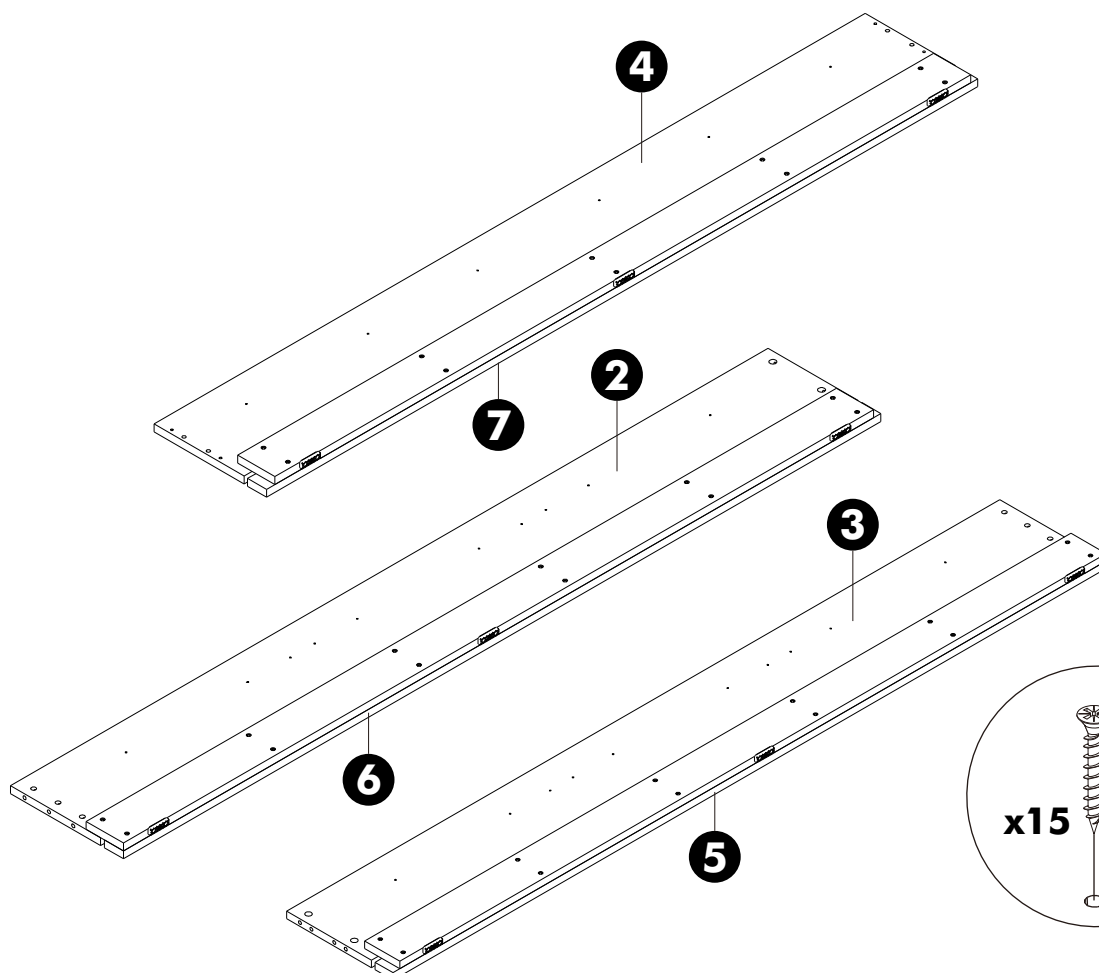


3.

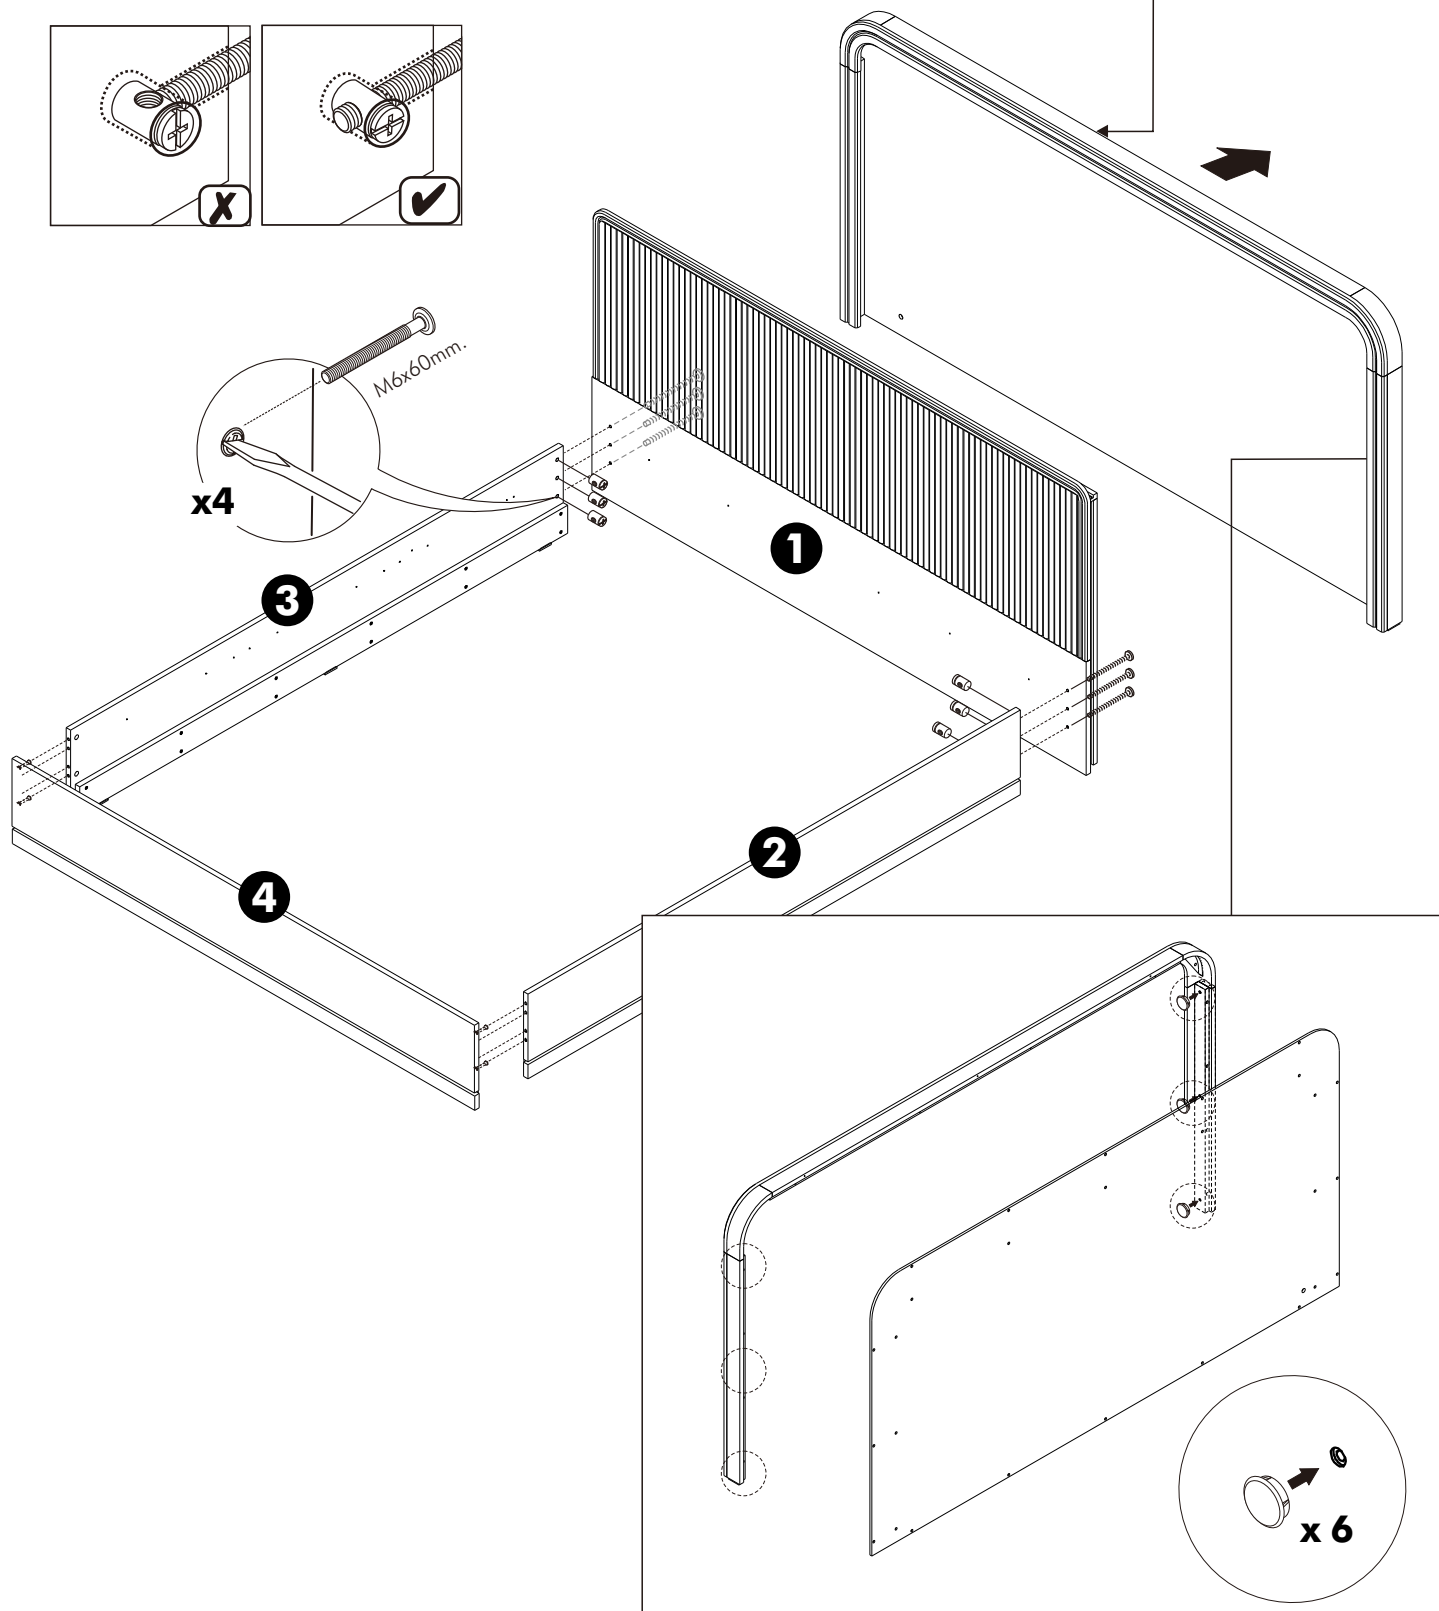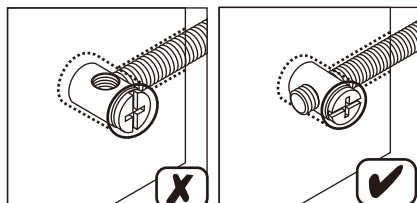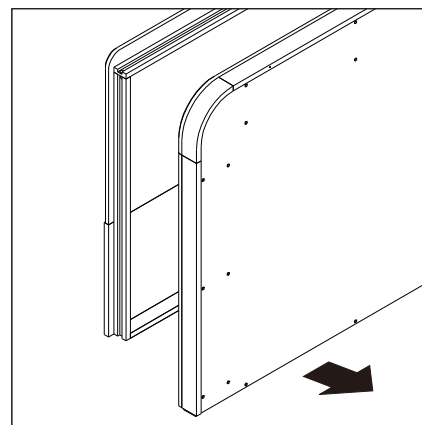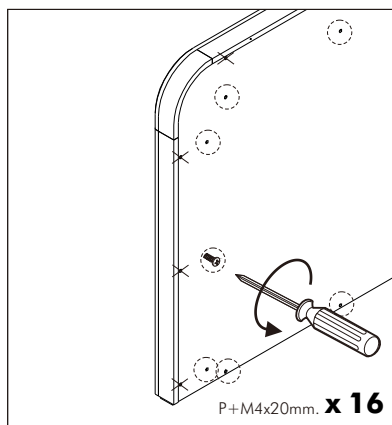


5.

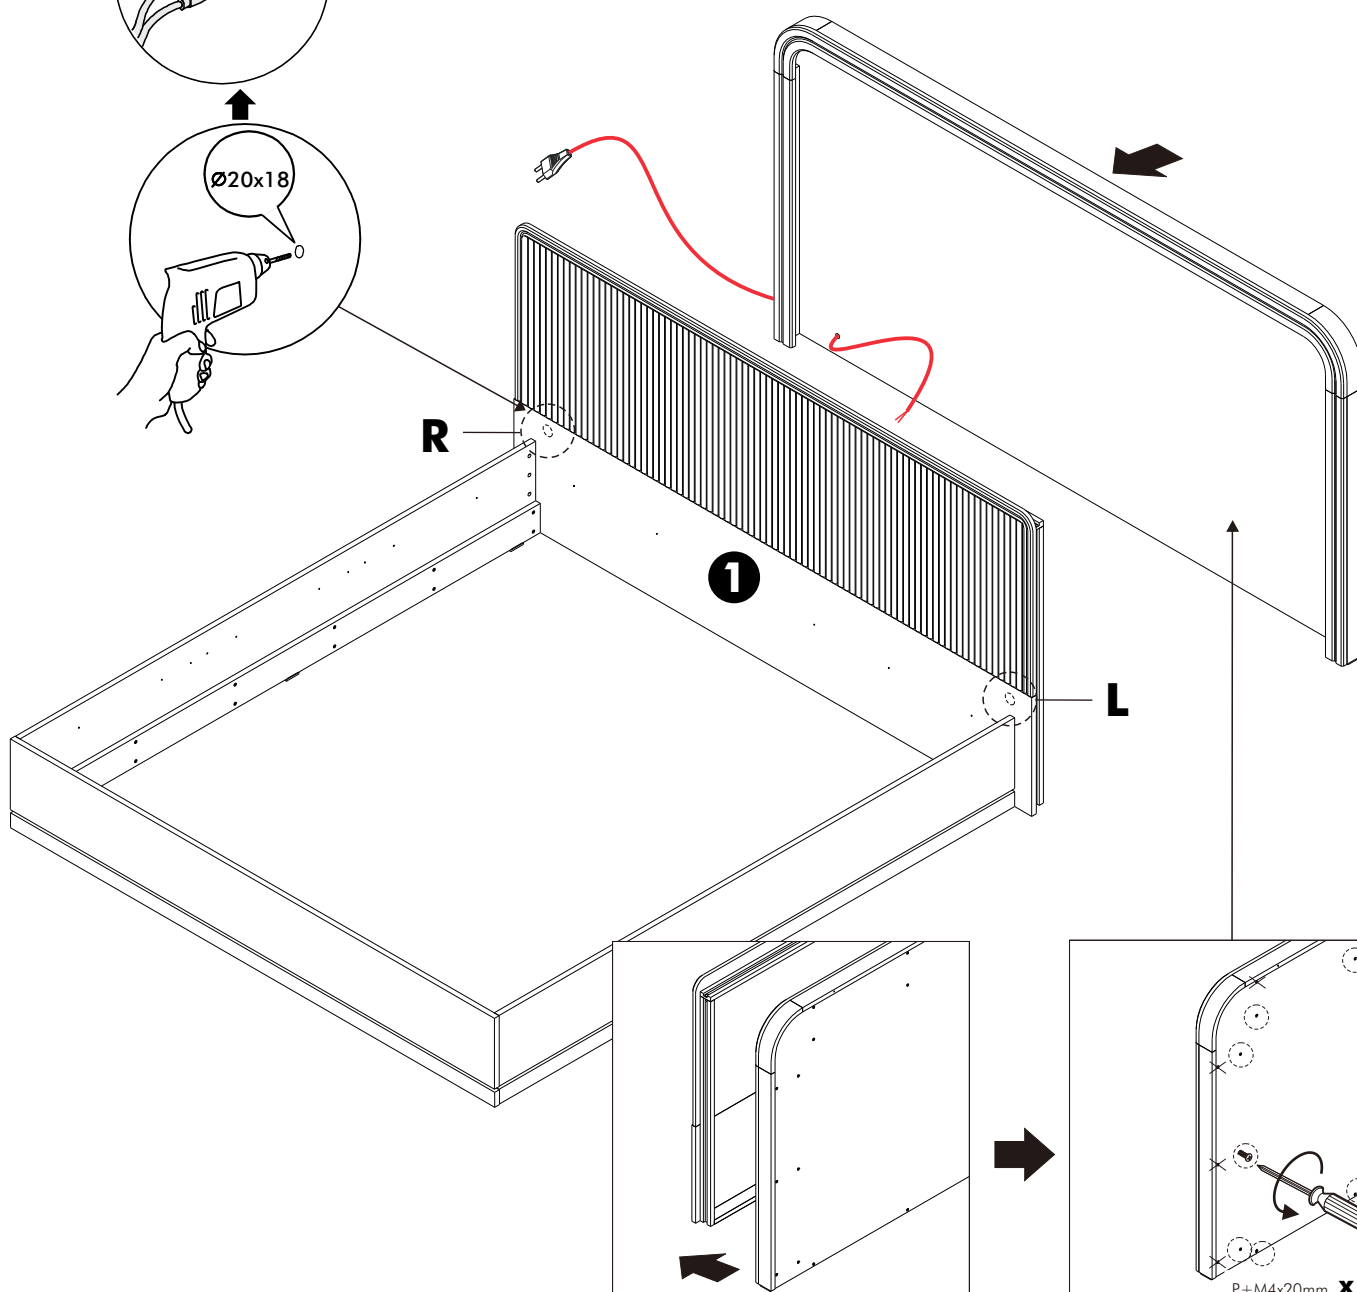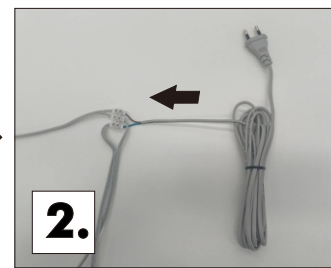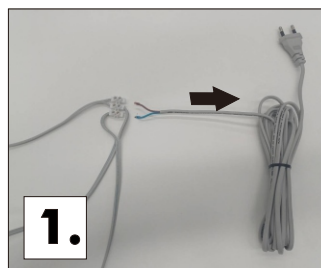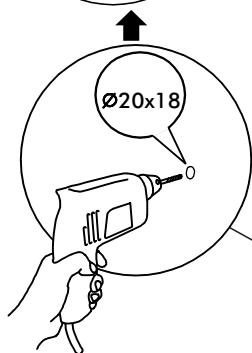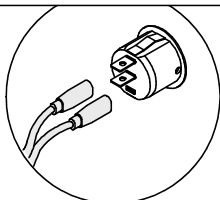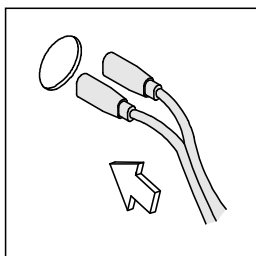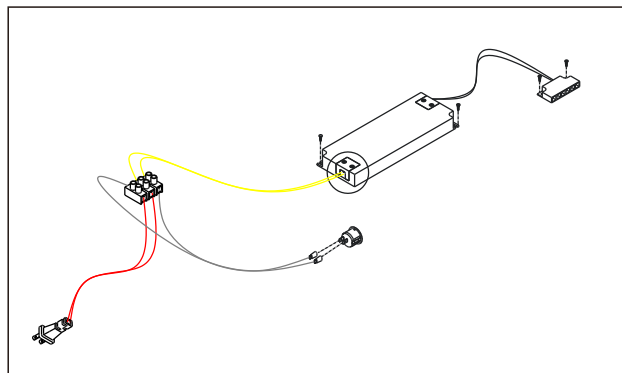

6.

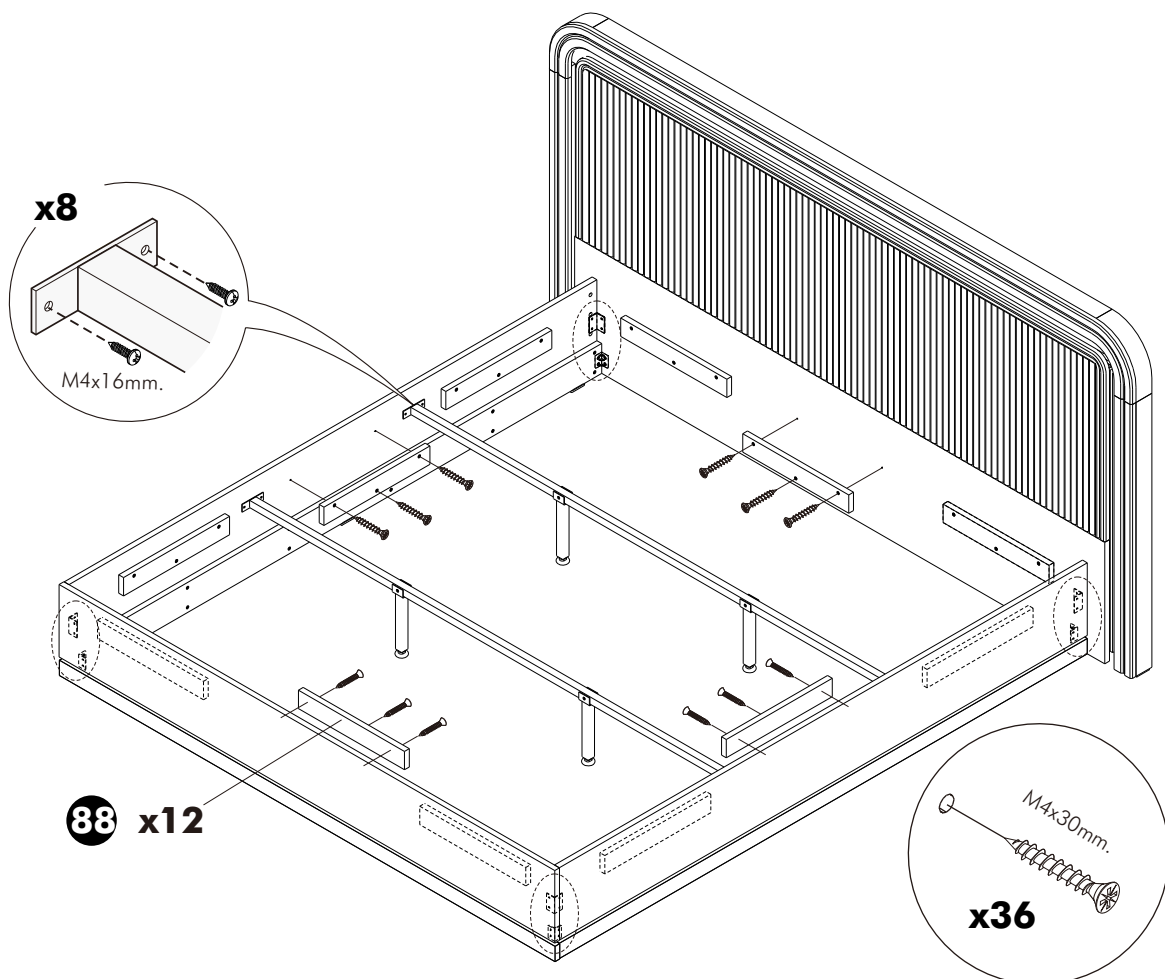

7.

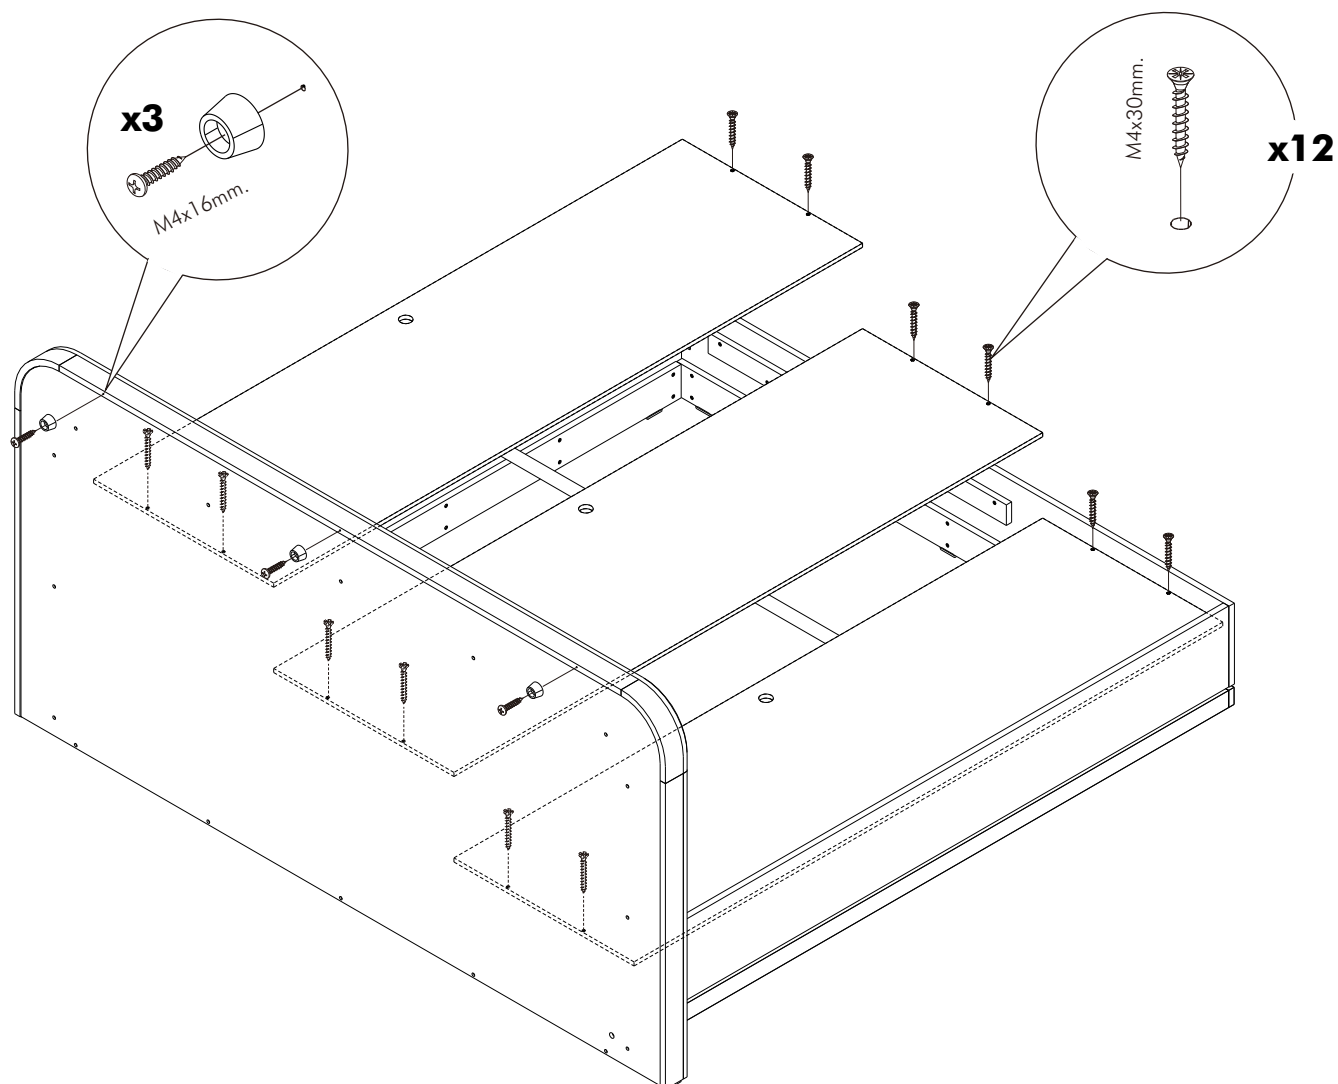

8.

