
SERENE


BED 5 ft.

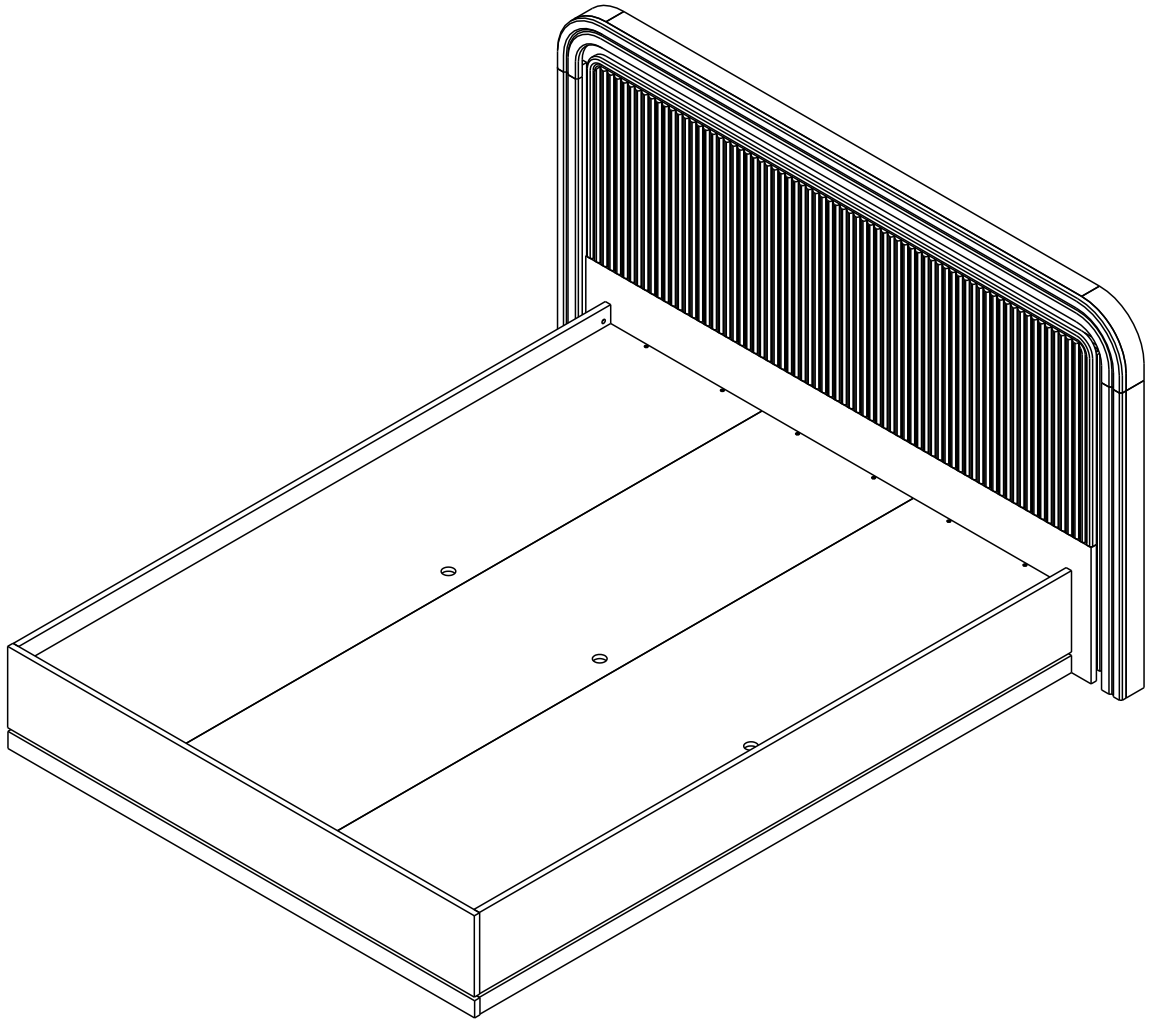


Indexlivingmall

CONNECT SYSTEM


1

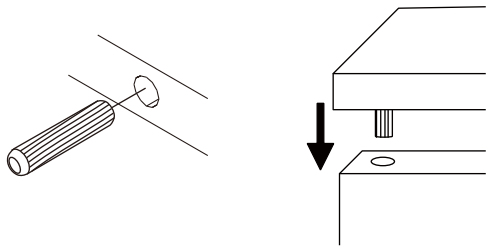


2

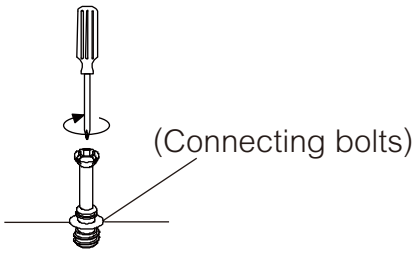


3

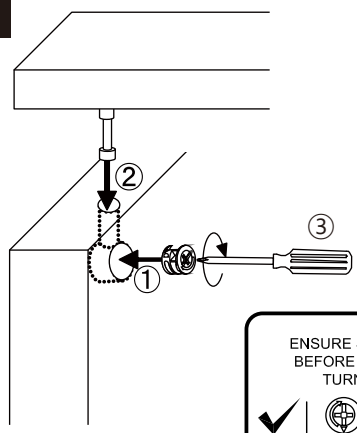



WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

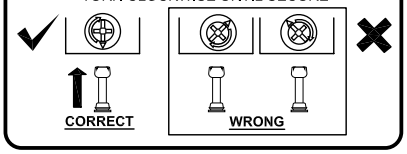




M4x16mm.

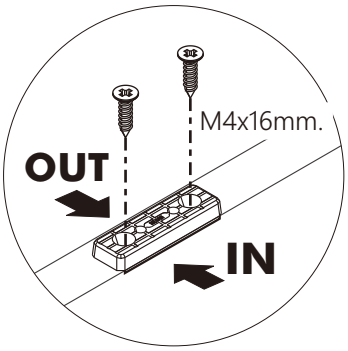

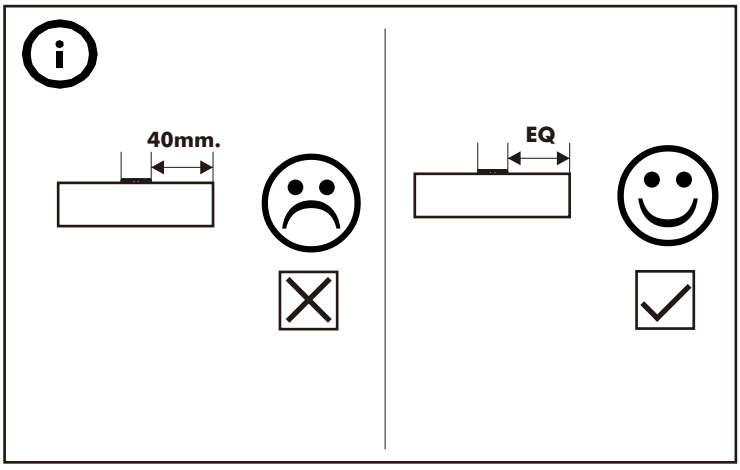





M6x45mm.

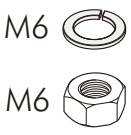


M6


M6

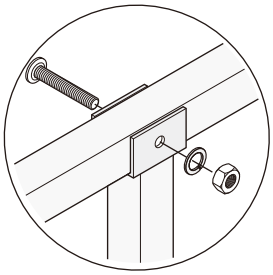


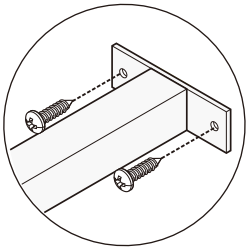






M4x16mm.

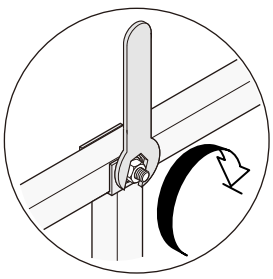


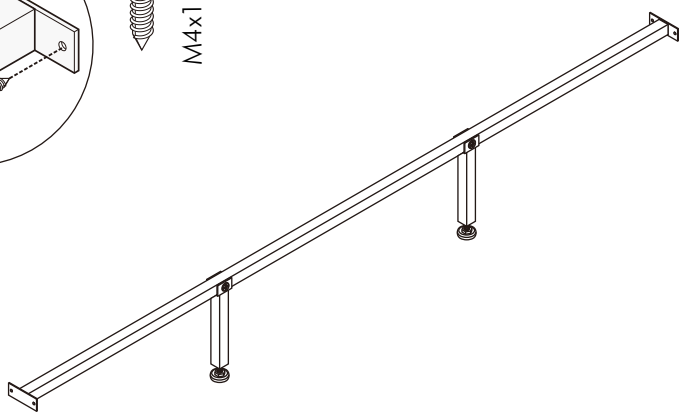


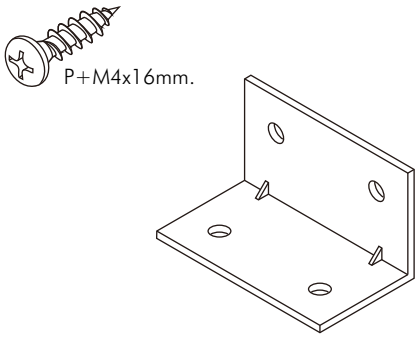
P+M4x16mm.

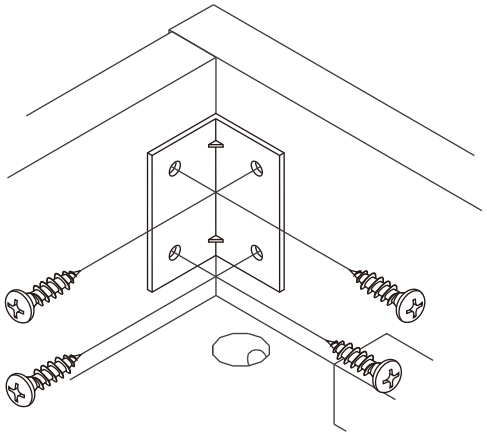



M4x16mm.

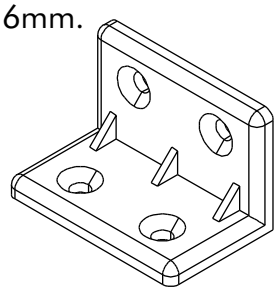

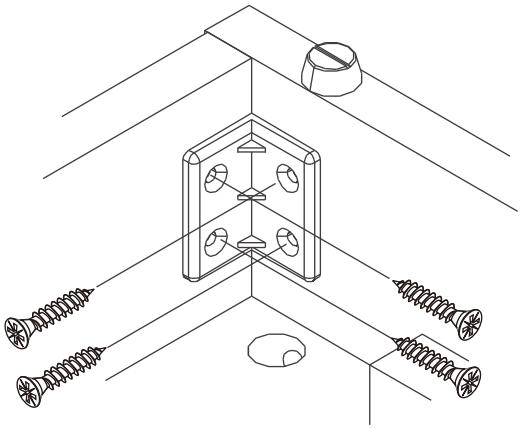

HARDWARE

-BODY SET




x 4




19mm.

x 4




#8x35


x 4



x 4

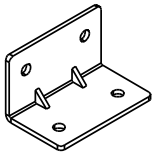

x 4



x 9



#M6

x 4



#M6

x 4




No.1

x 3




x 30



M4x30mm.

x 82

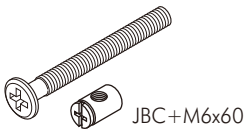


JBC+M6x60

x 6



M4x16mm.

x 27




TF+M6x45

x 4




M4x16mm.

x 38



x 4

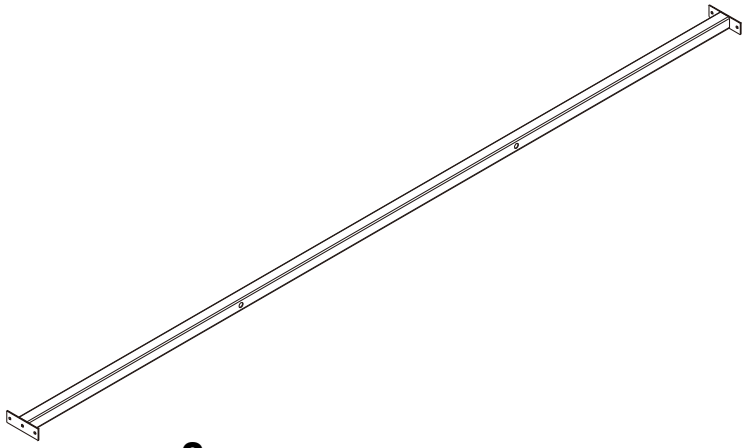



x 2

ASSEMBLY


-BODY SET


1.

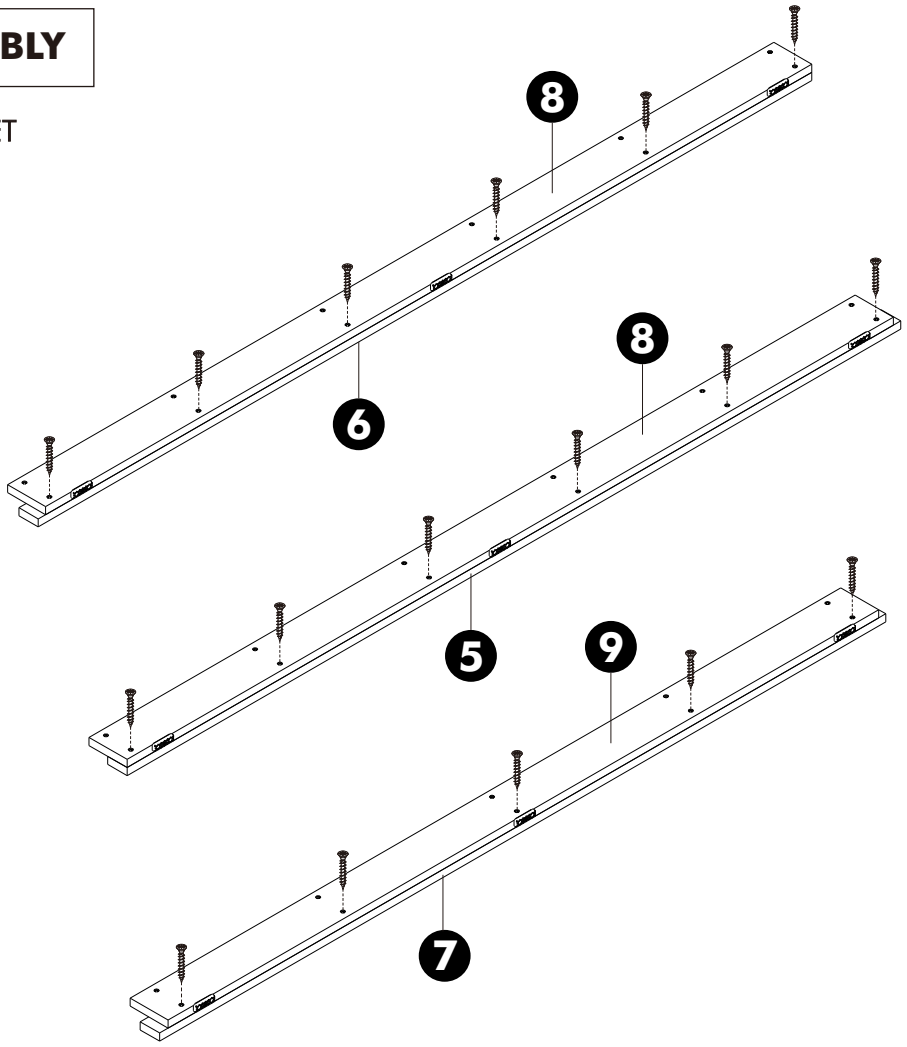


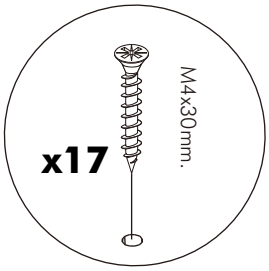


2.

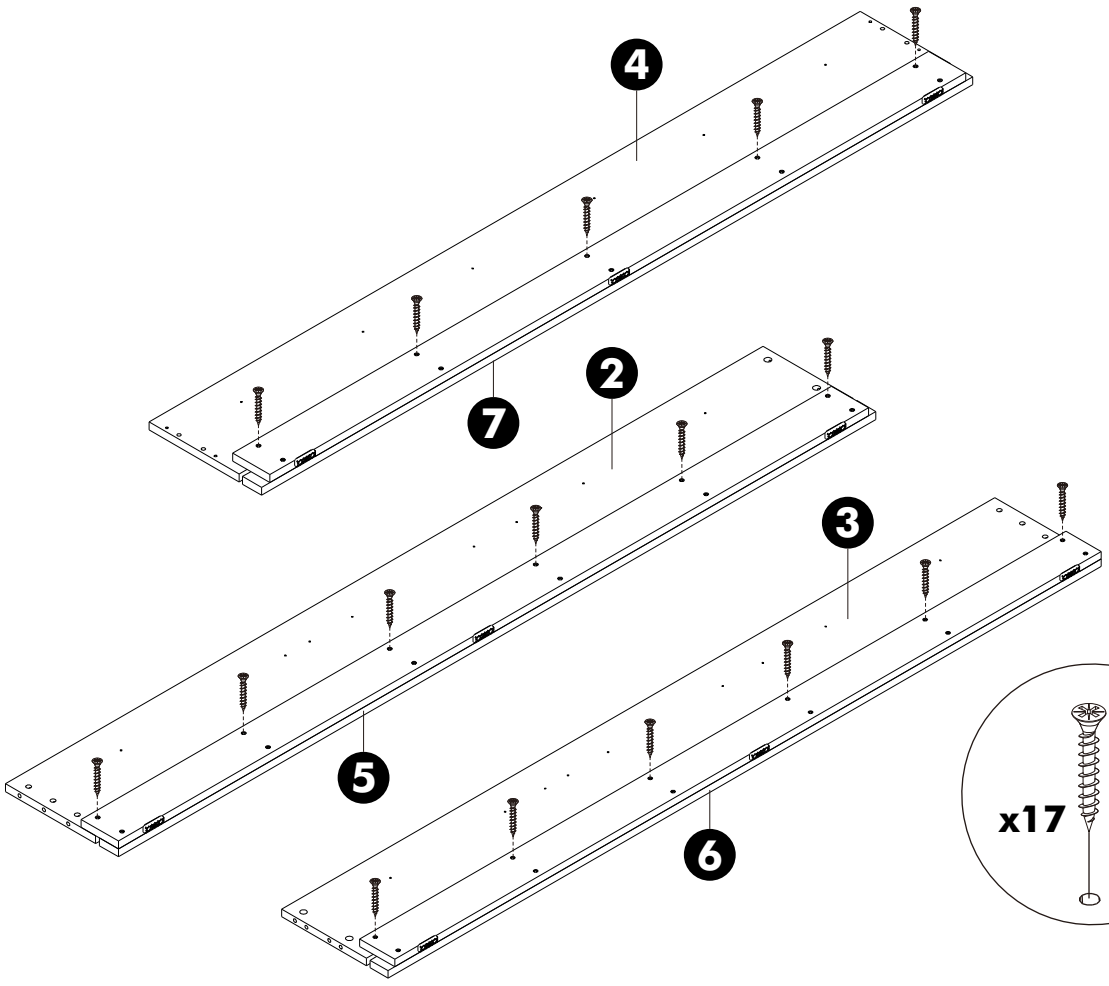

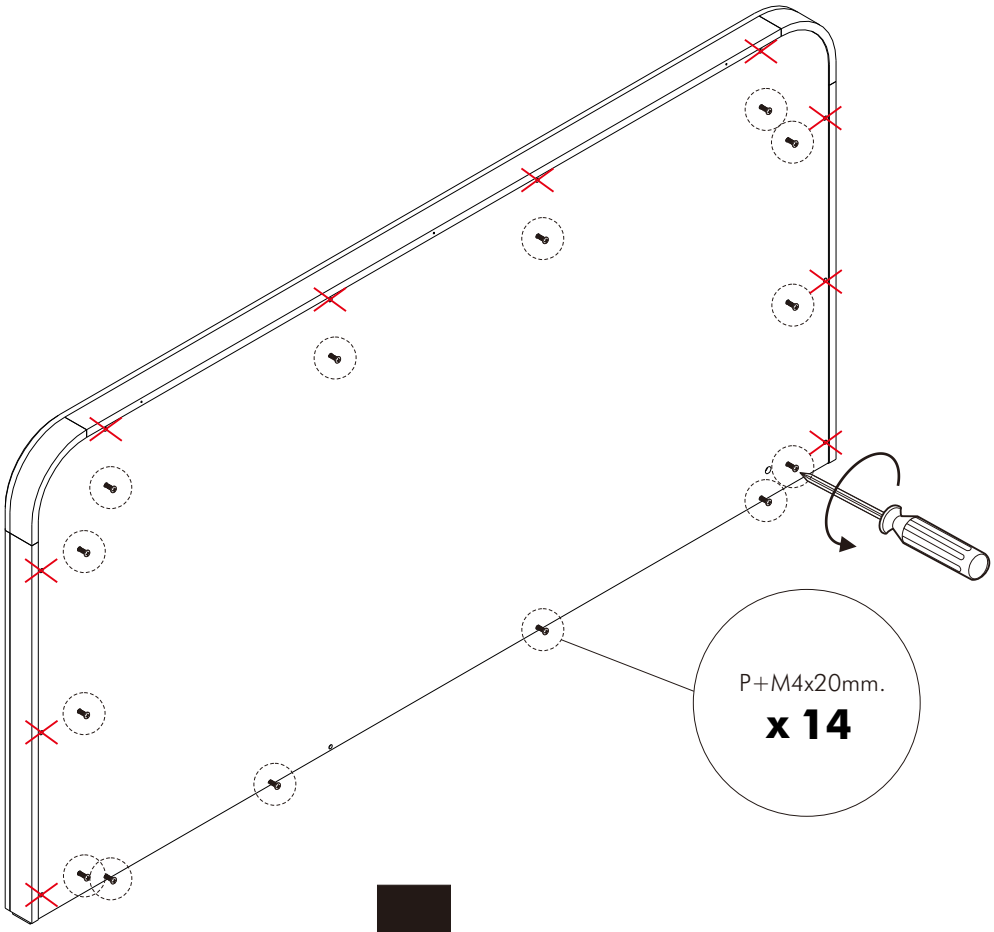

P+M4x20mm.
x 14

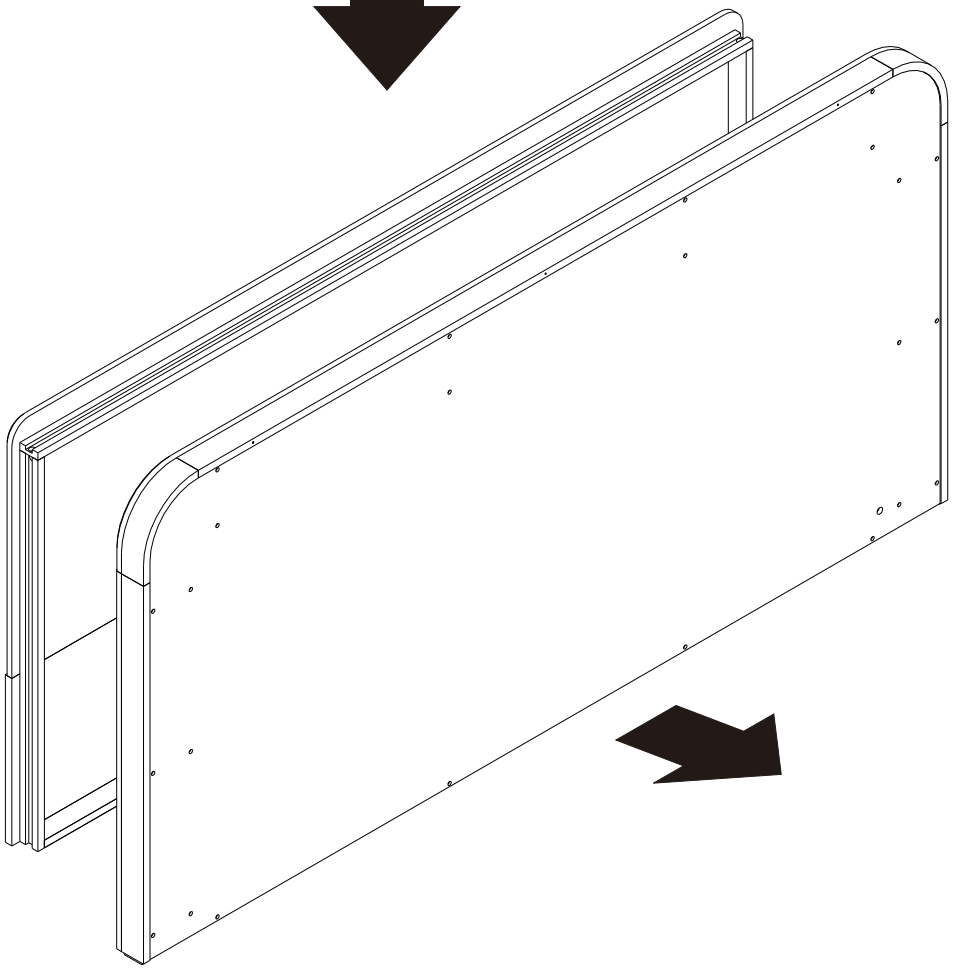



3.

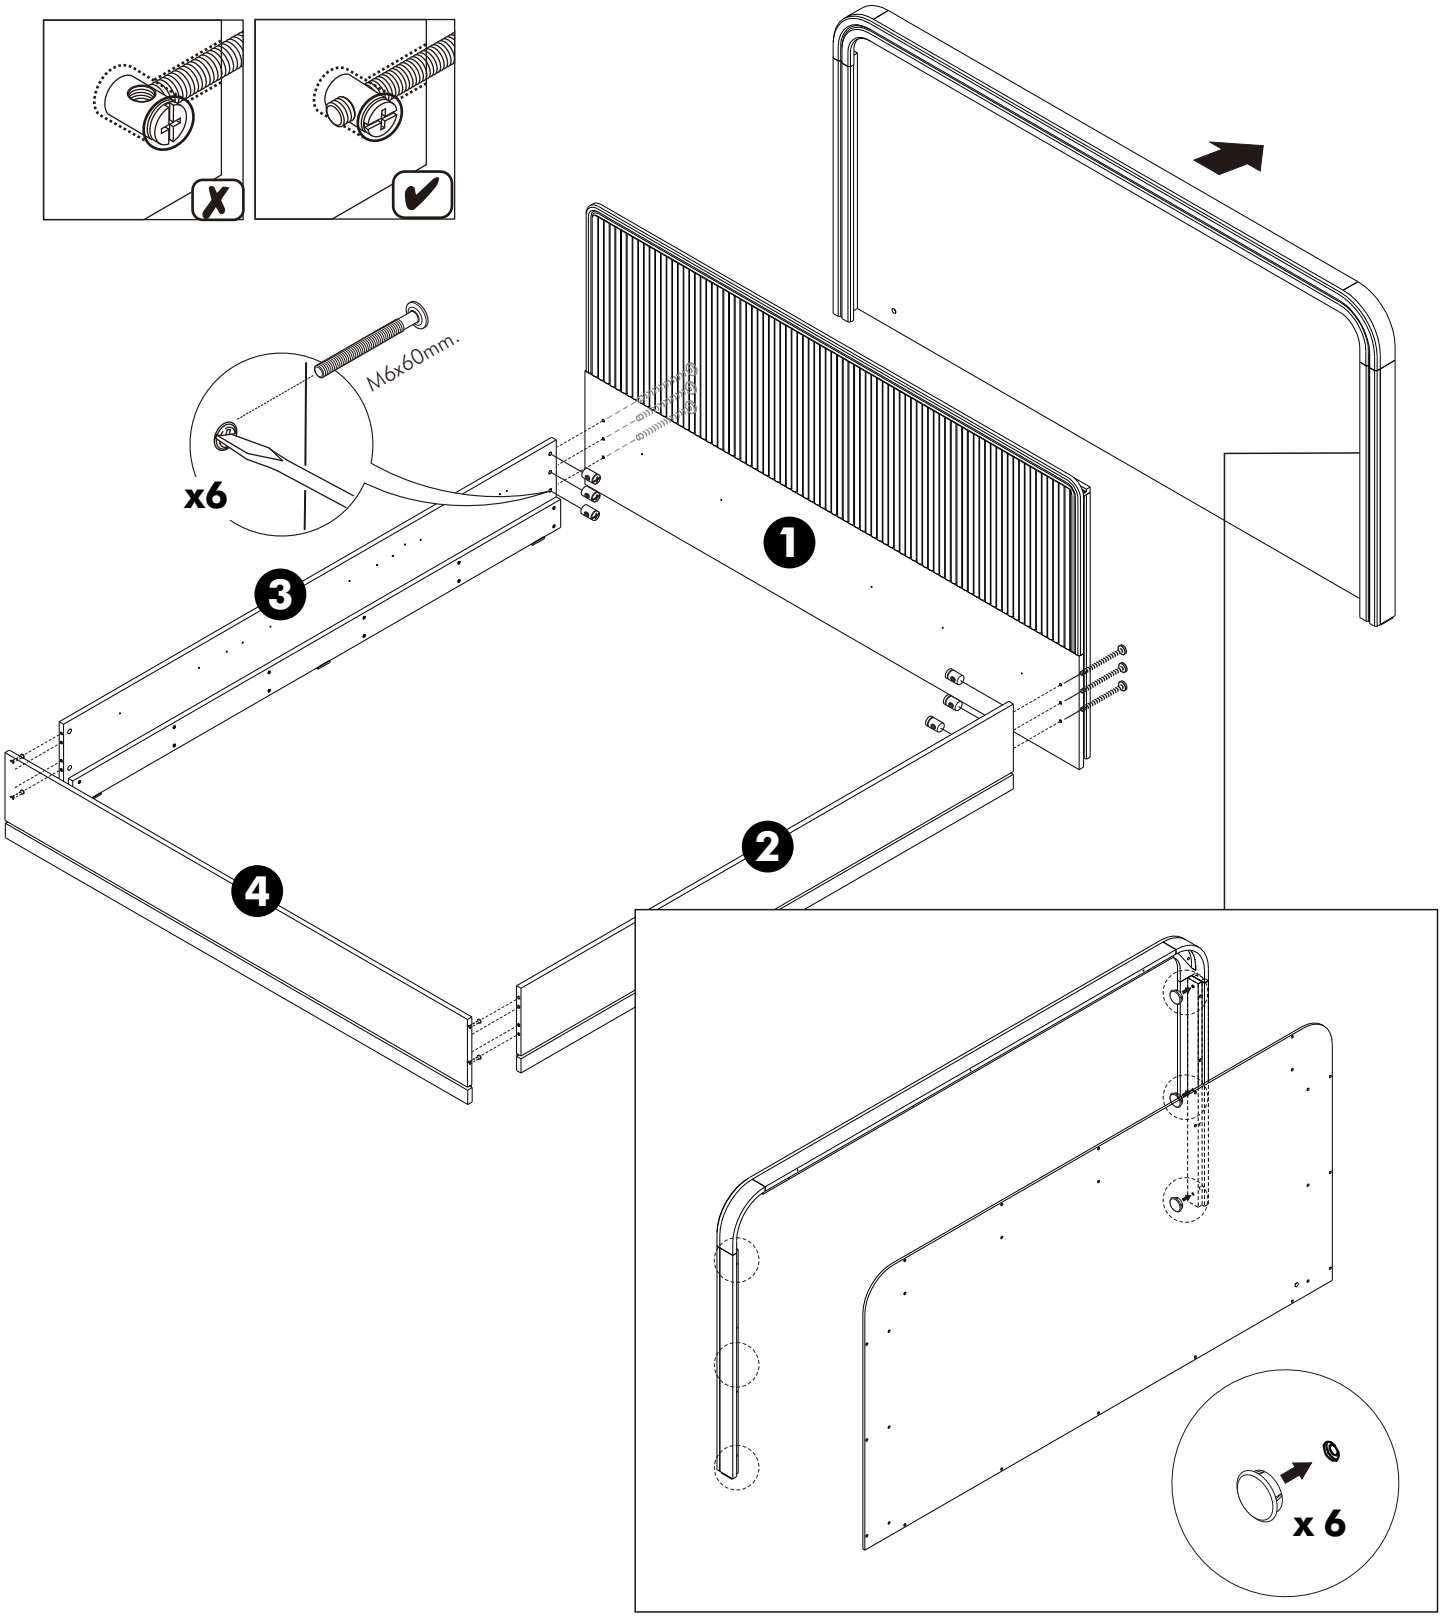



5.

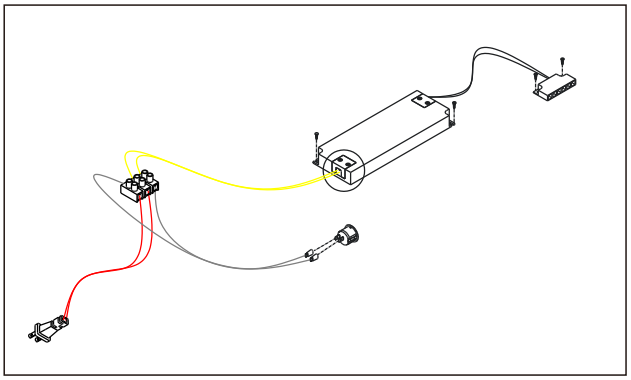


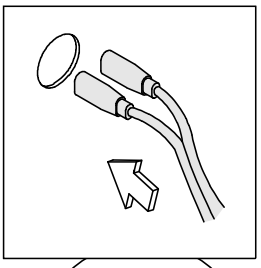

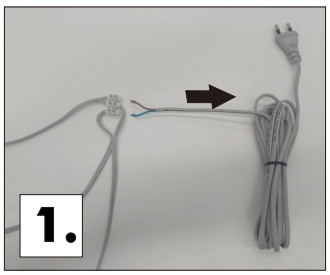


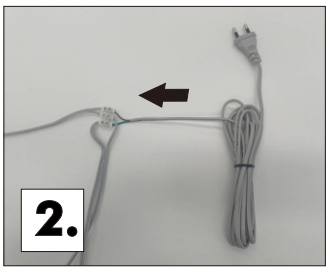

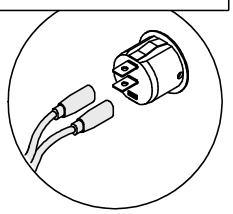


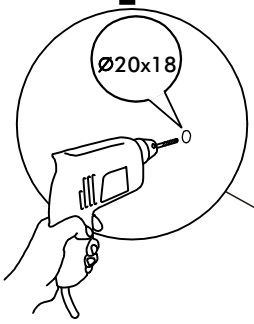

6.

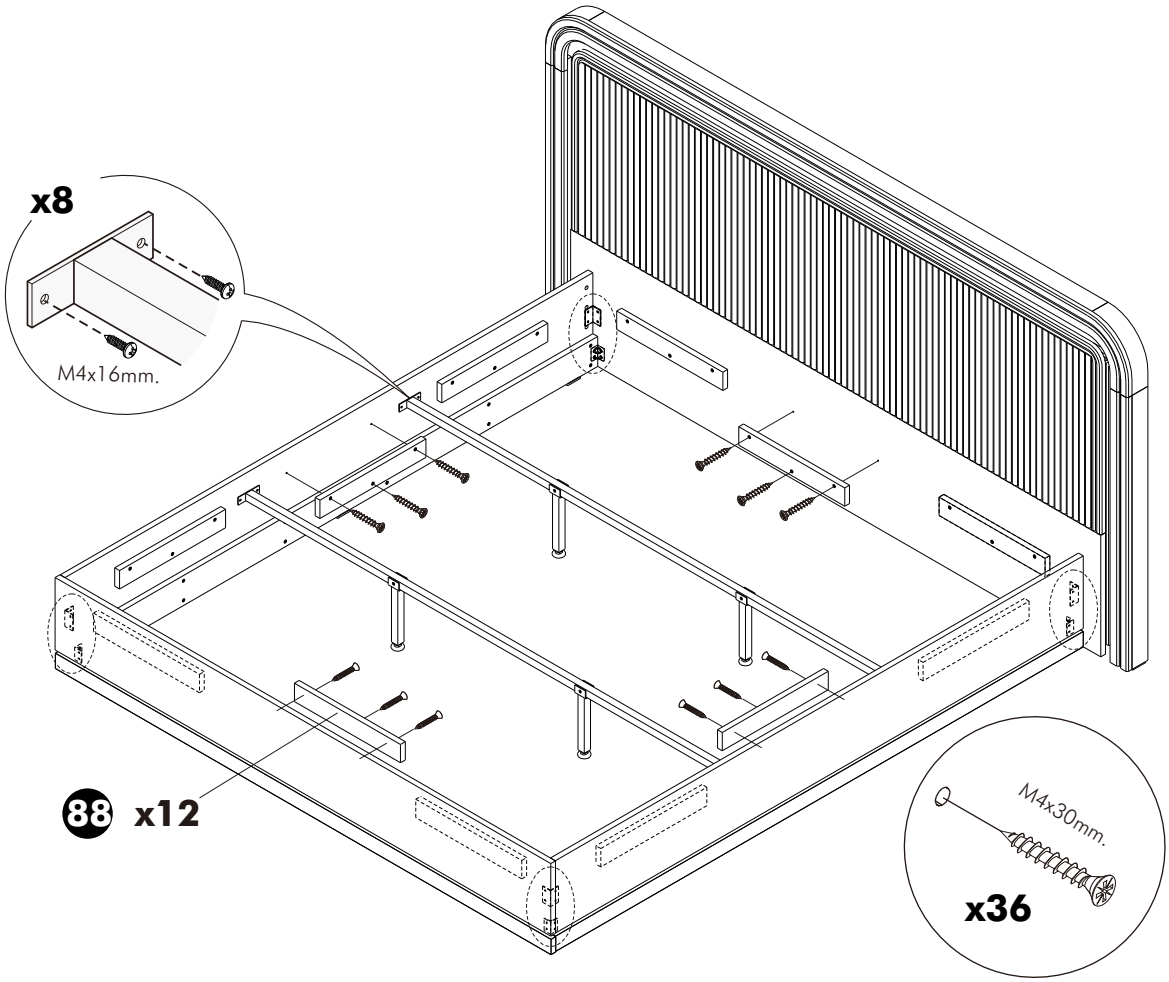

7.

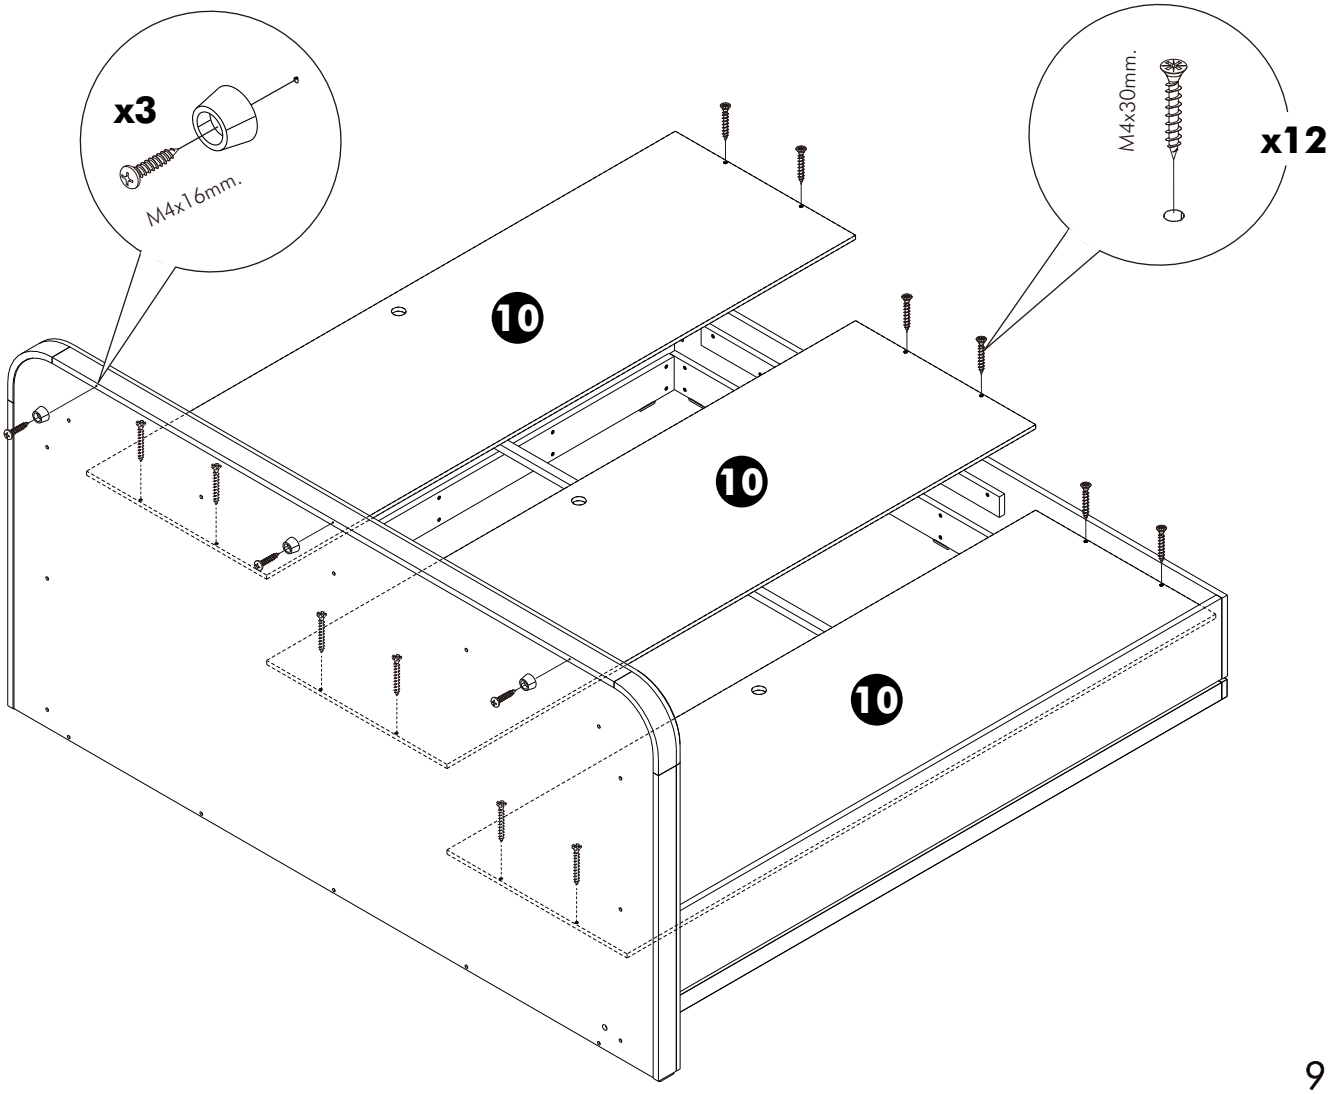

8.

