


BRUSSEL


BED 5 ft.

BED 6 ft.

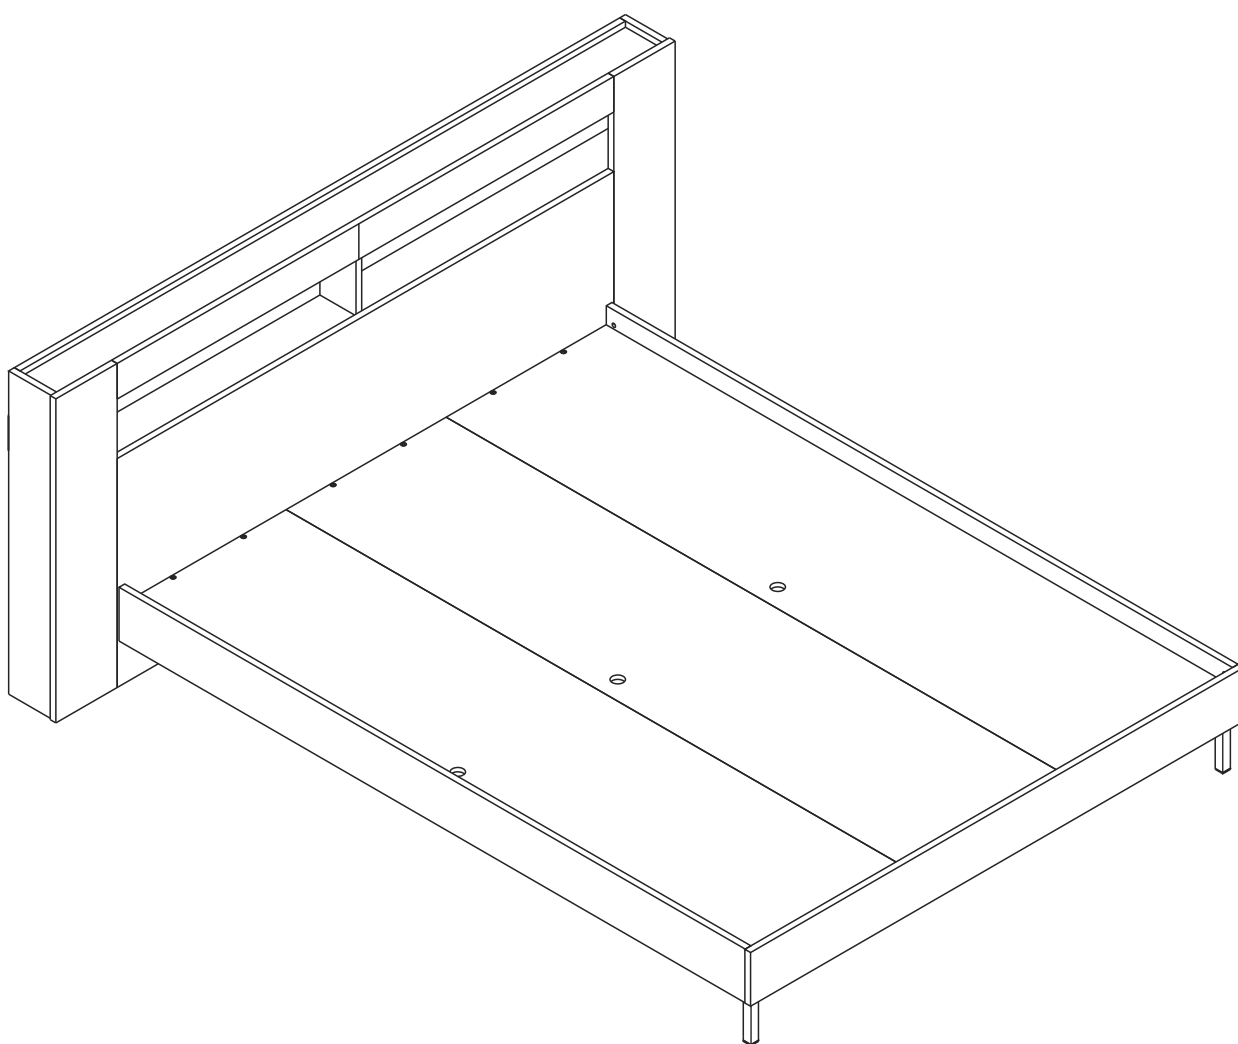


CONNECT SYSTEM


1

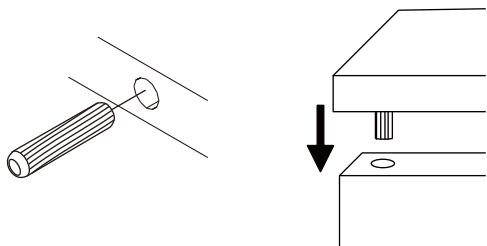





2

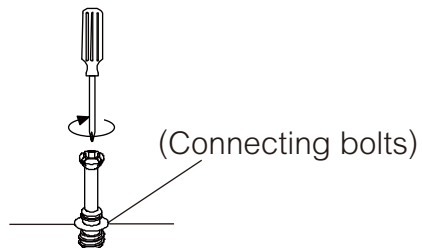


3

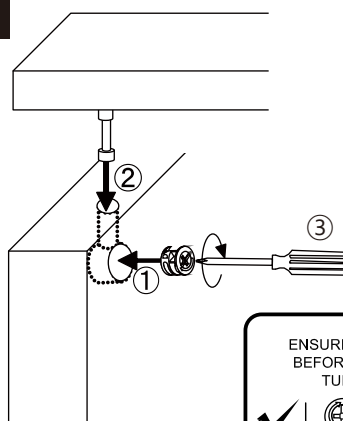

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

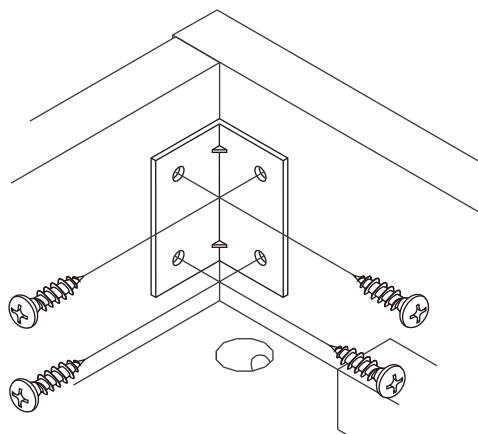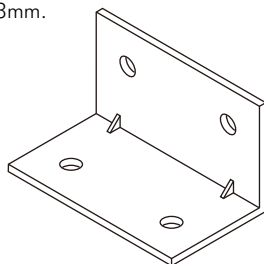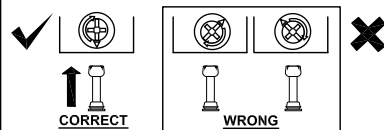





M6x45mm.





M6




M6

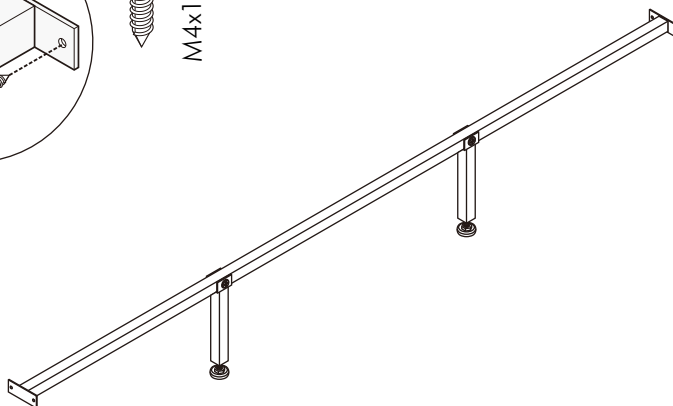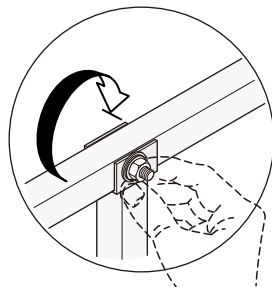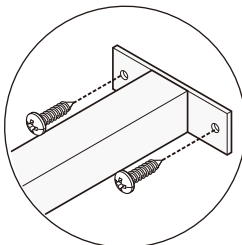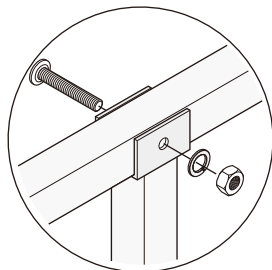

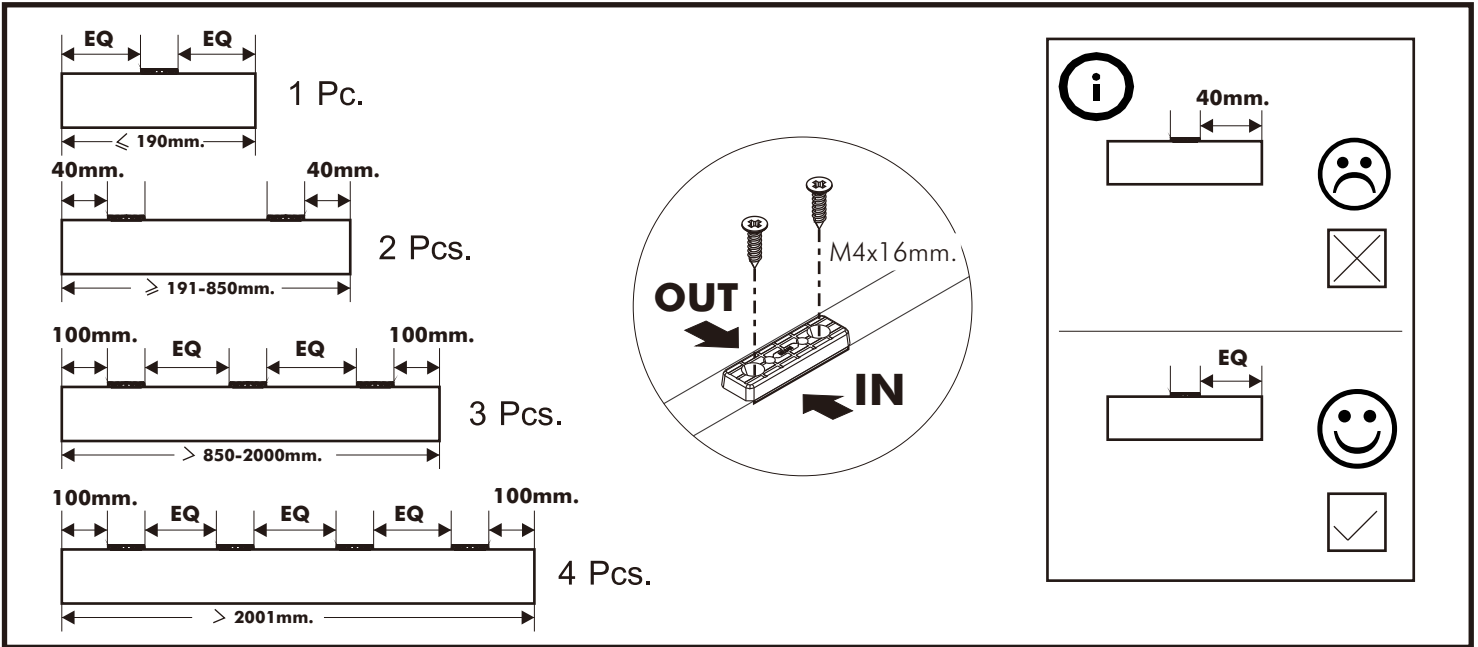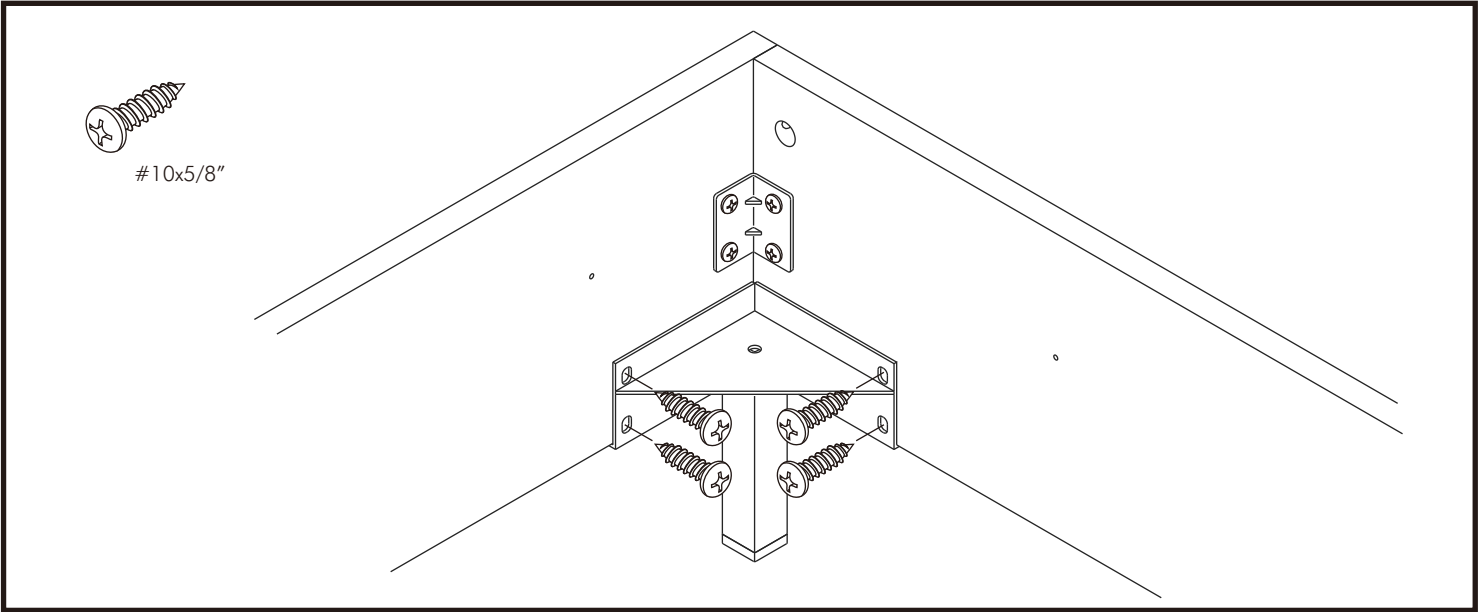

HARDWARE

-BODY SET




x 4



19mm.

x 4



#8x35

x 4




M4x16mm.

x 11



#10x5/8"

x 8



x 8




#M6

x 4



#M6

x 4



TF+M6x45

x 4




M4x16mm.

x 16



M4x30mm.

x 48

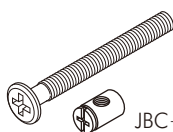


JBC+M6x60

x 6



No.1

x 3

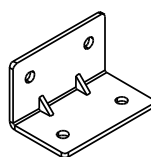

x 2





M4x13mm.

x 8


ASSEMBLY

-BODY SET

1.

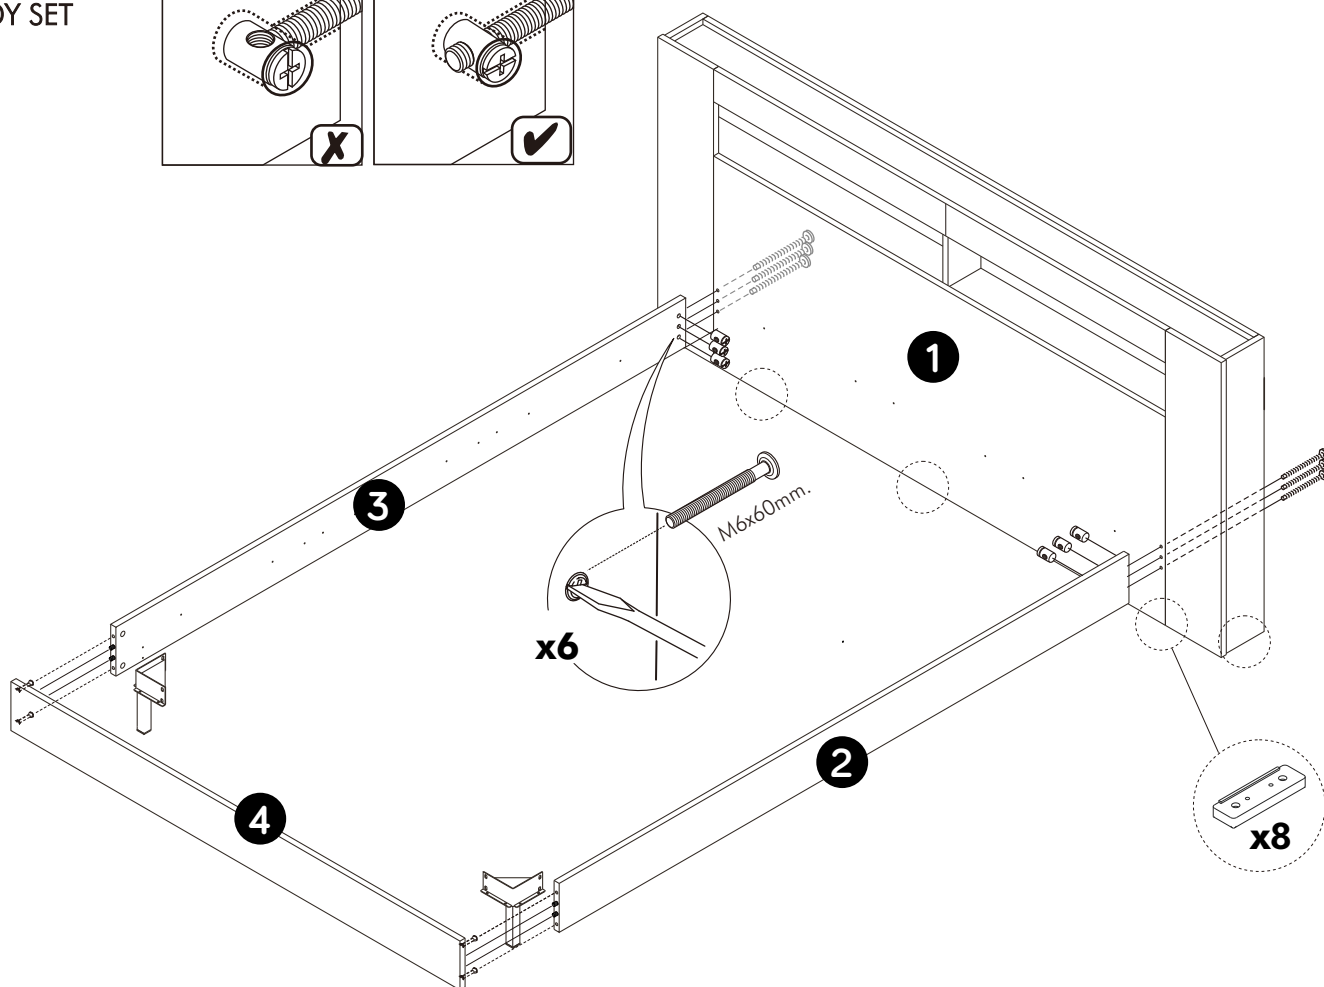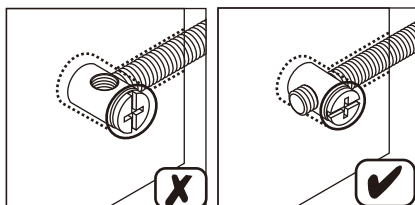

2.

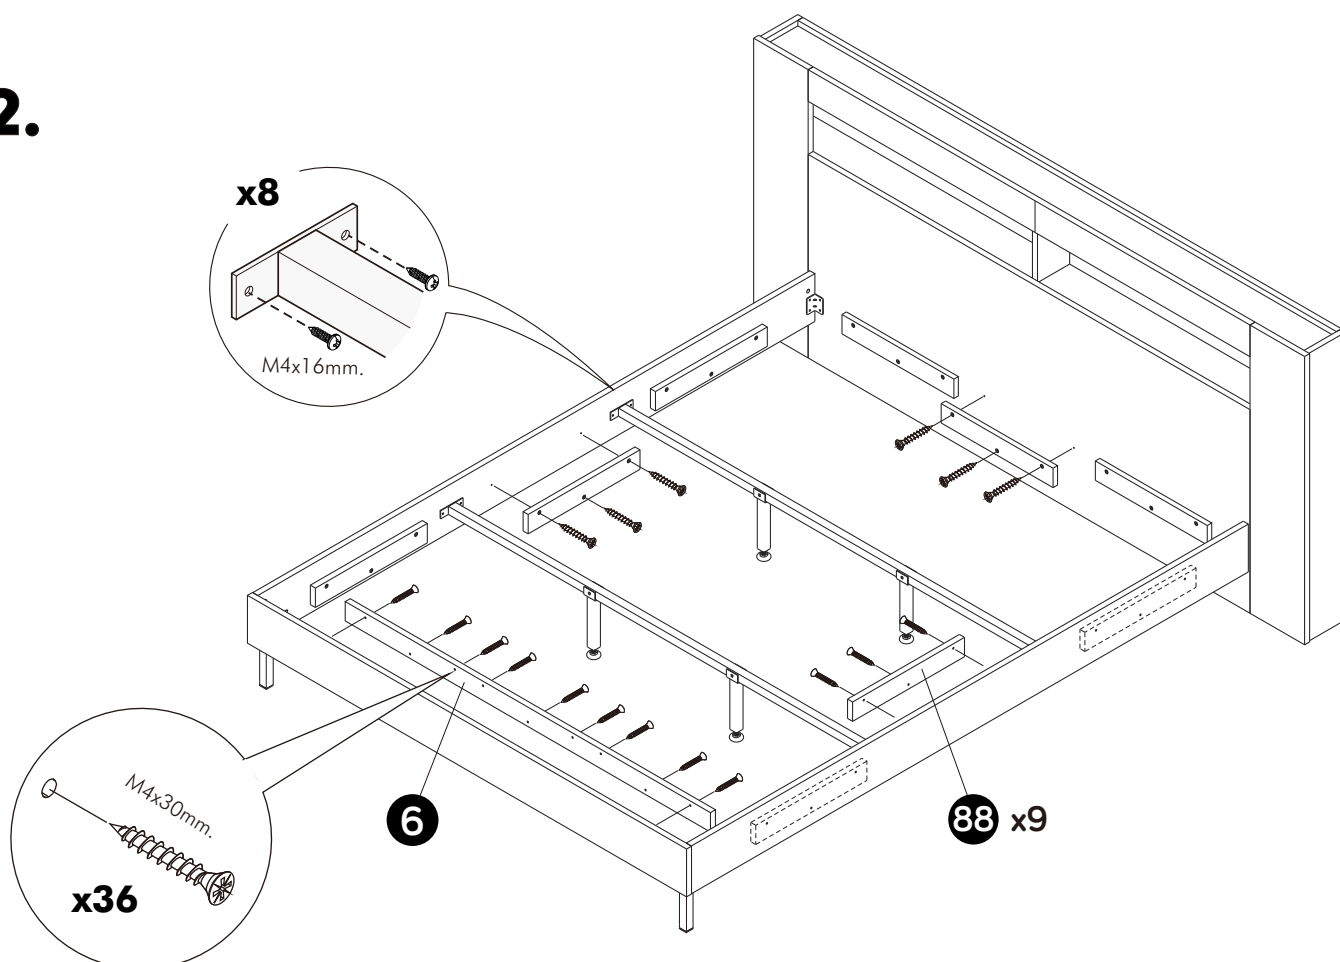

3.

