


MONACO

Sideboard 150 cm.

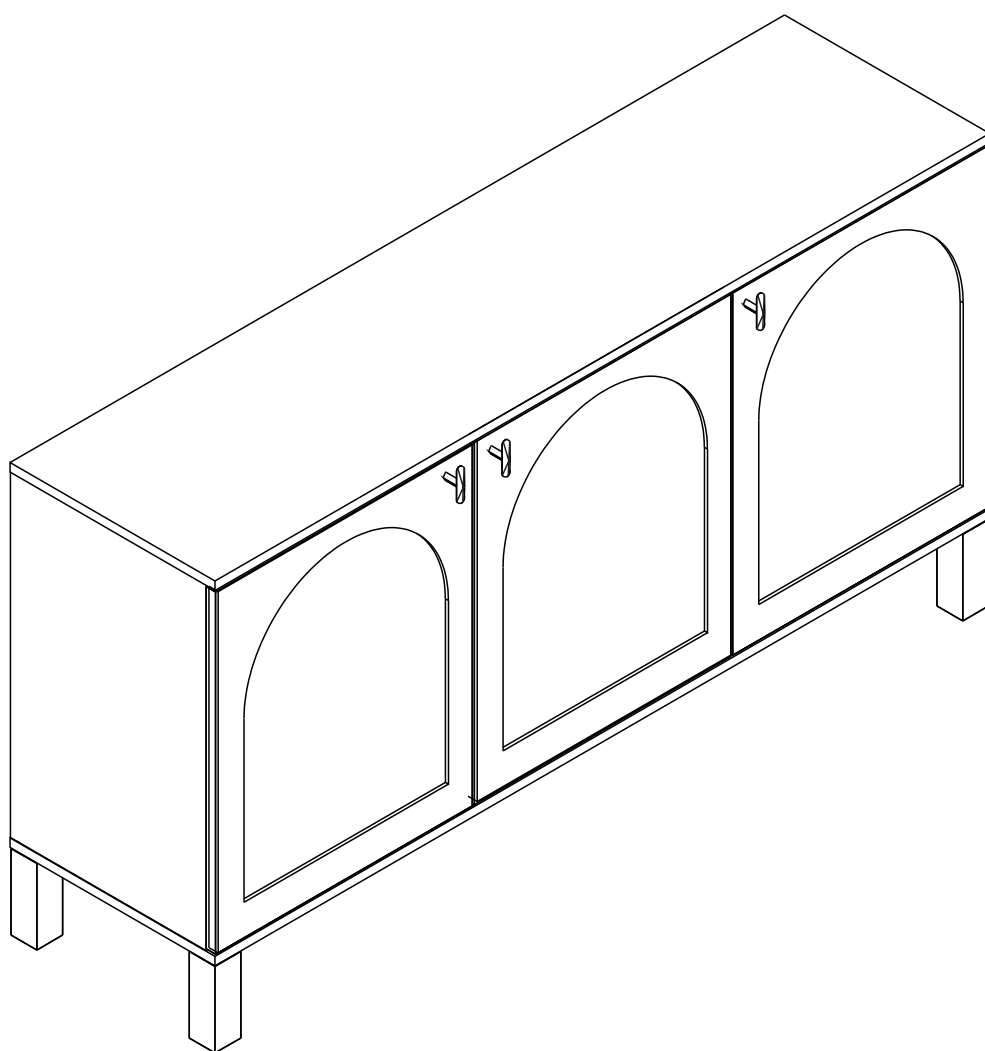

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

CORRECT

WRONG

M4x16mm.

DOOR PANEL

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

CORRECT




WRONG

M4x13mm.

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE


CORRECT

WRONG

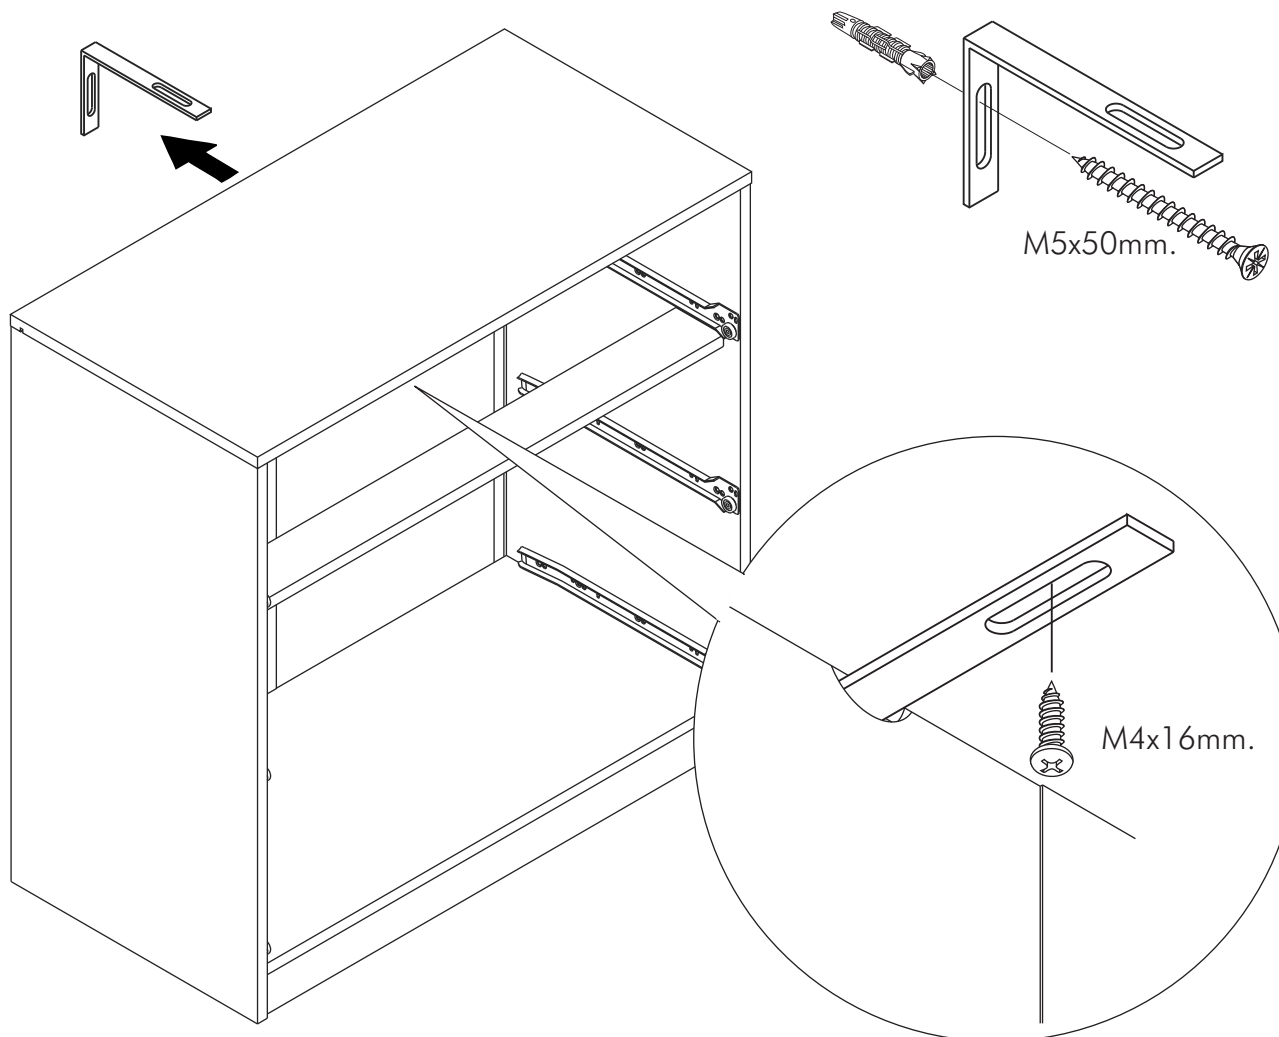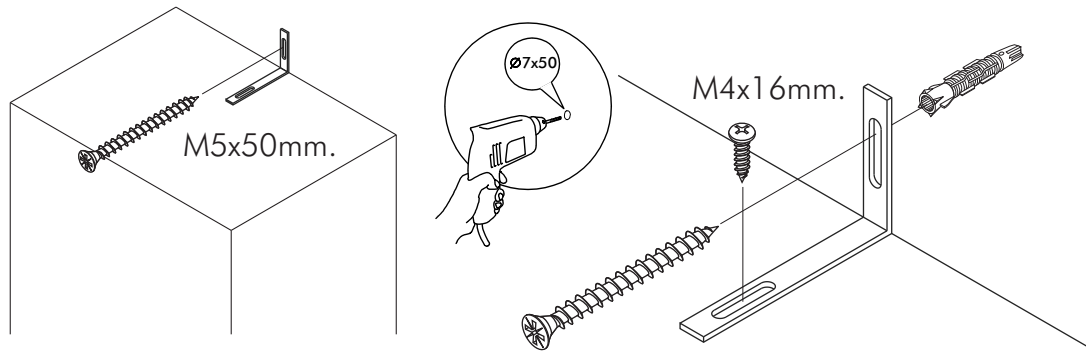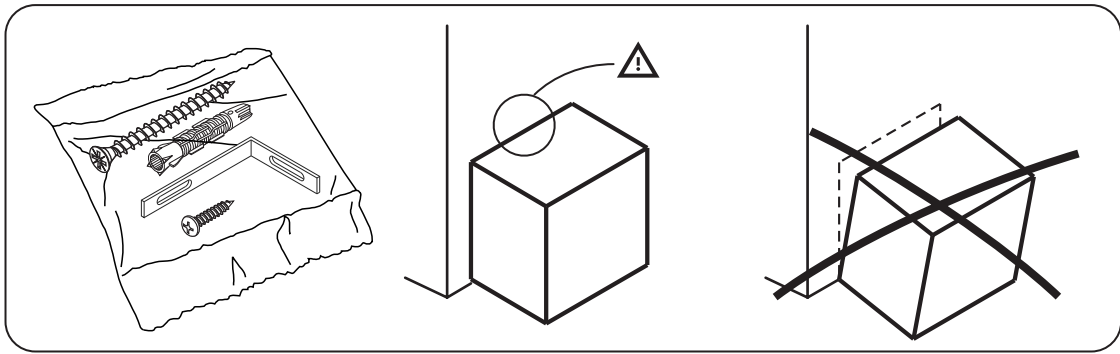

HARDWARE


-BODY SET



x 8




x 8




x 16


#8x35




x 2




x4




x 1



x 12




x 10




x 2



x4



x 4



x 18

M3.5x20mm.



x 8

M4x13mm.




x 12

M4x16mm.




x 6

M4x16mm.




x 2



x 8

M4x50mm.




x 9

M4x45mm.



x 2

M5x50mm.




x16


M4x30mm.

HARDWARE

-DOOR SET

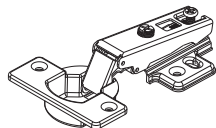

x 6

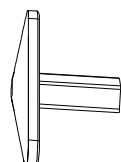

x 3




x 6



x 36

M4x16mm.




x3

T+M4x22mm.


ASSEMBLY

-BODY SET


1.

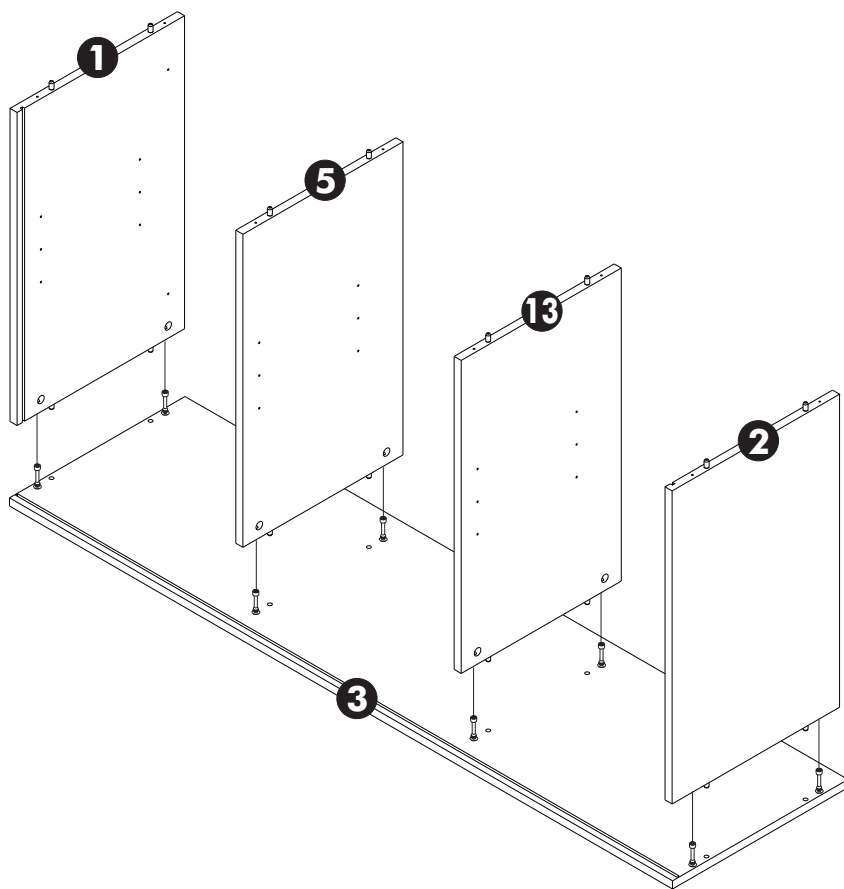


2.

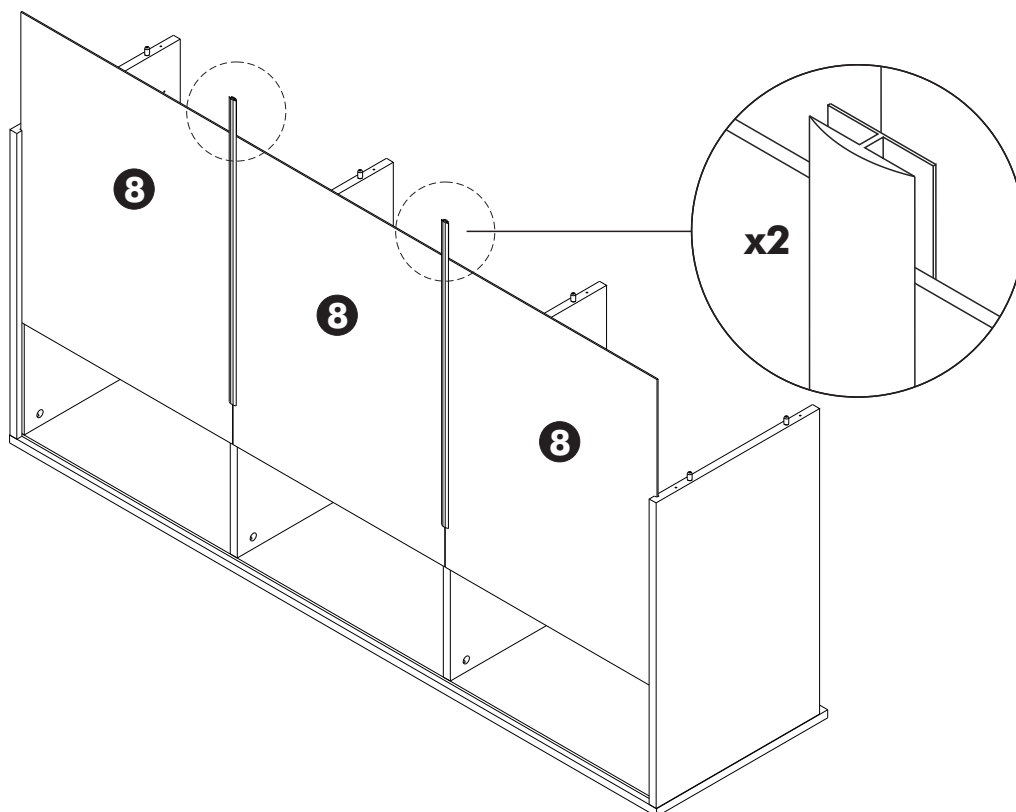


3.

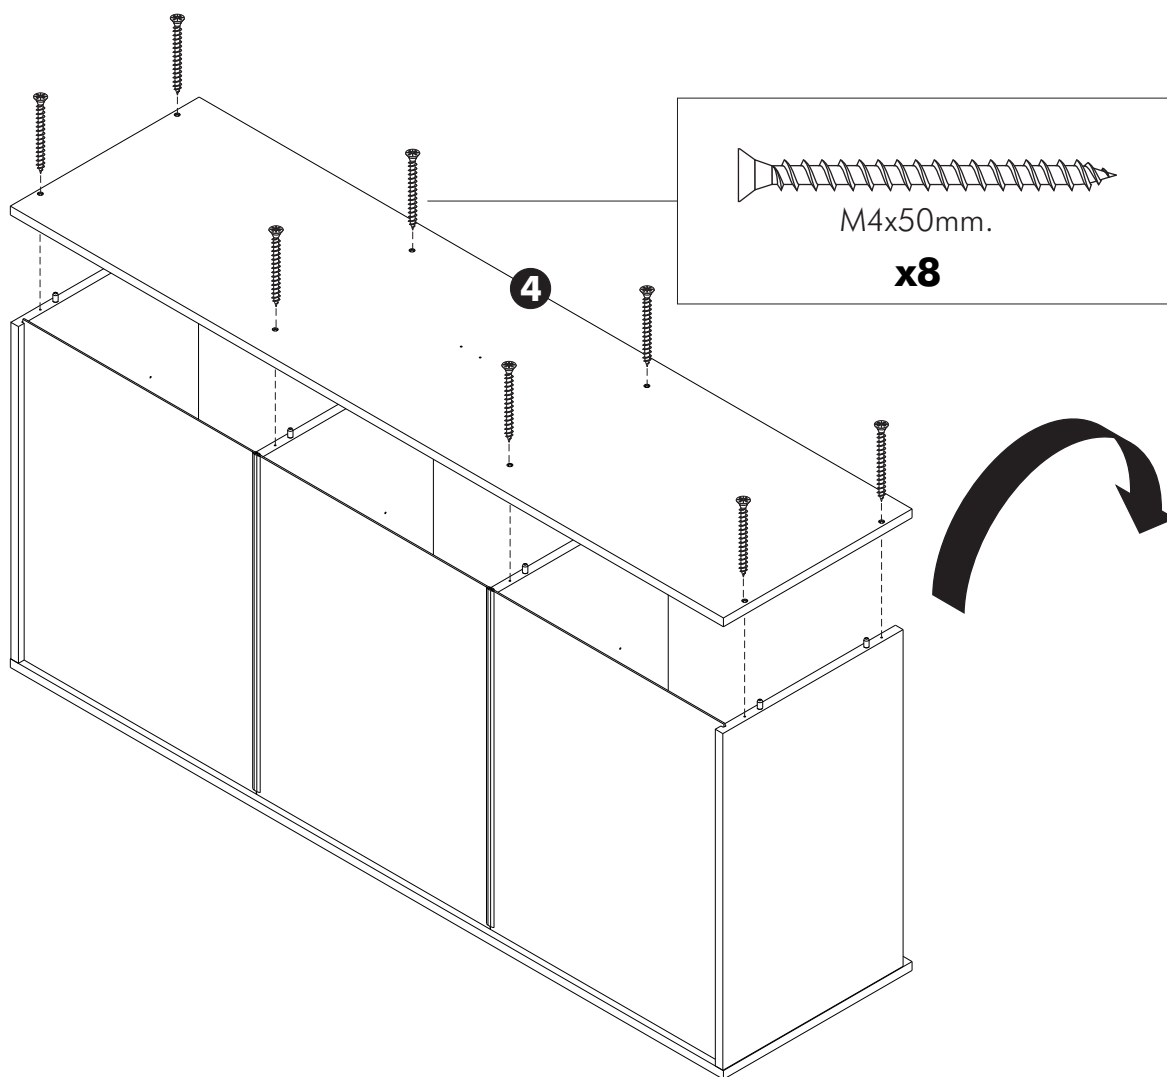


4.

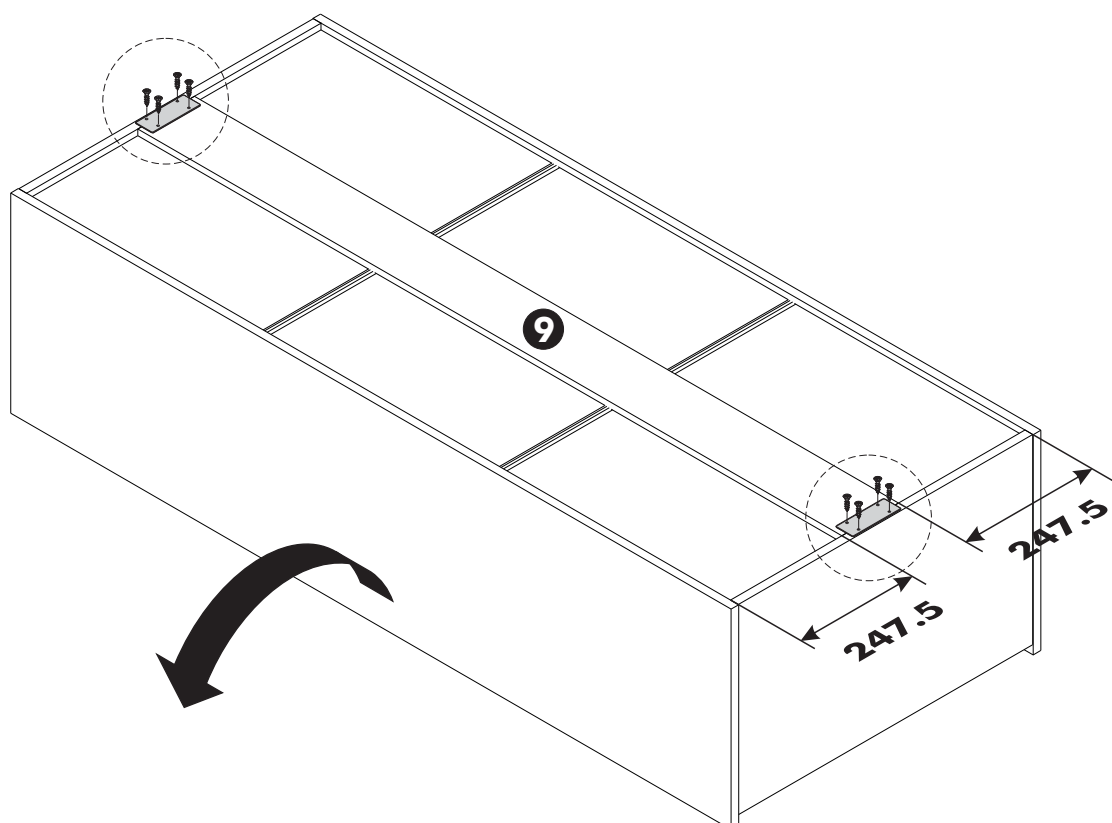


5.

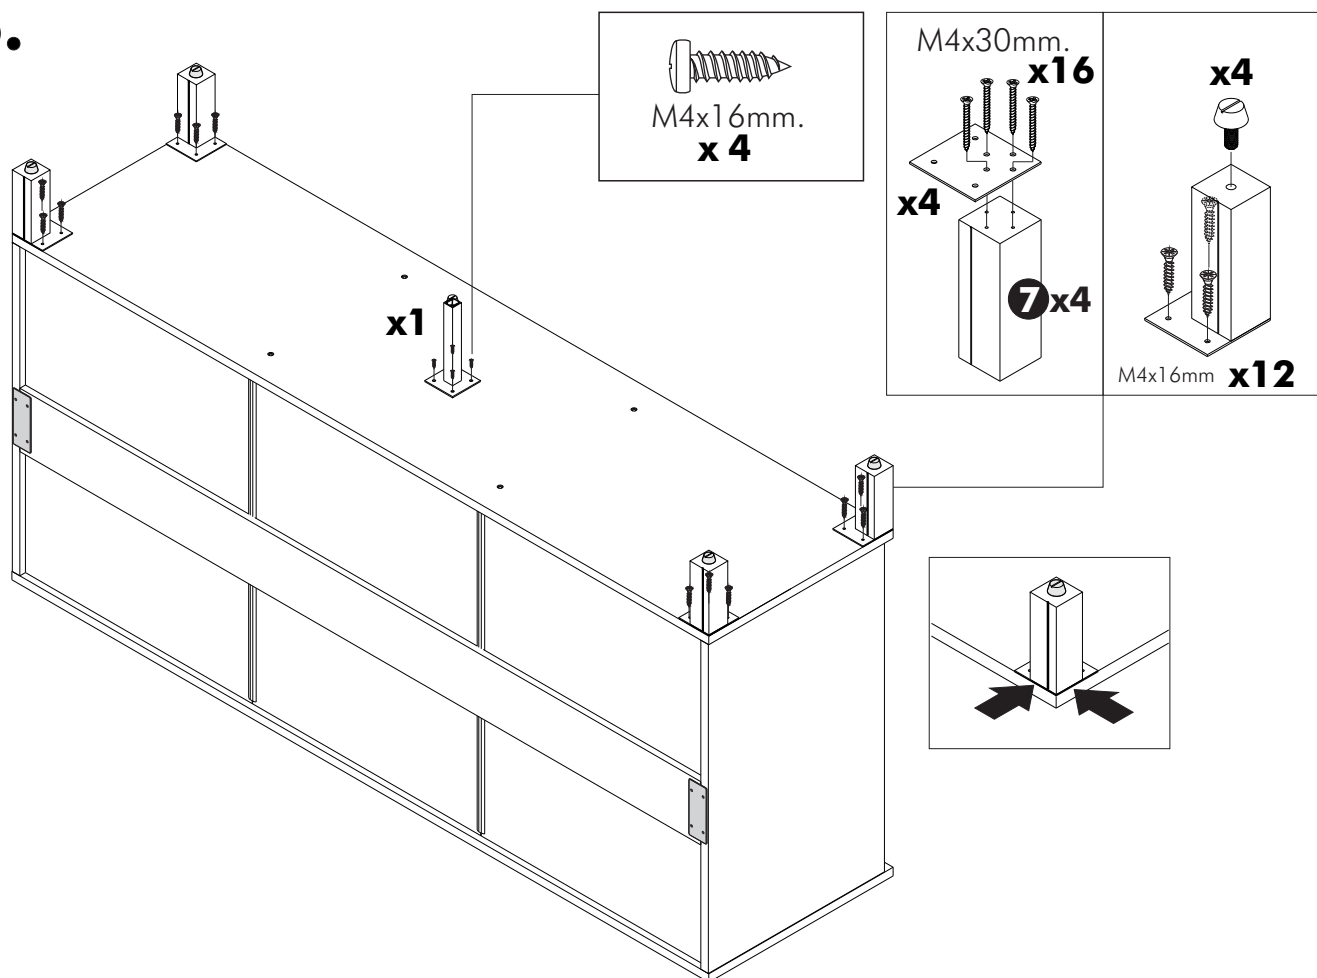

6.

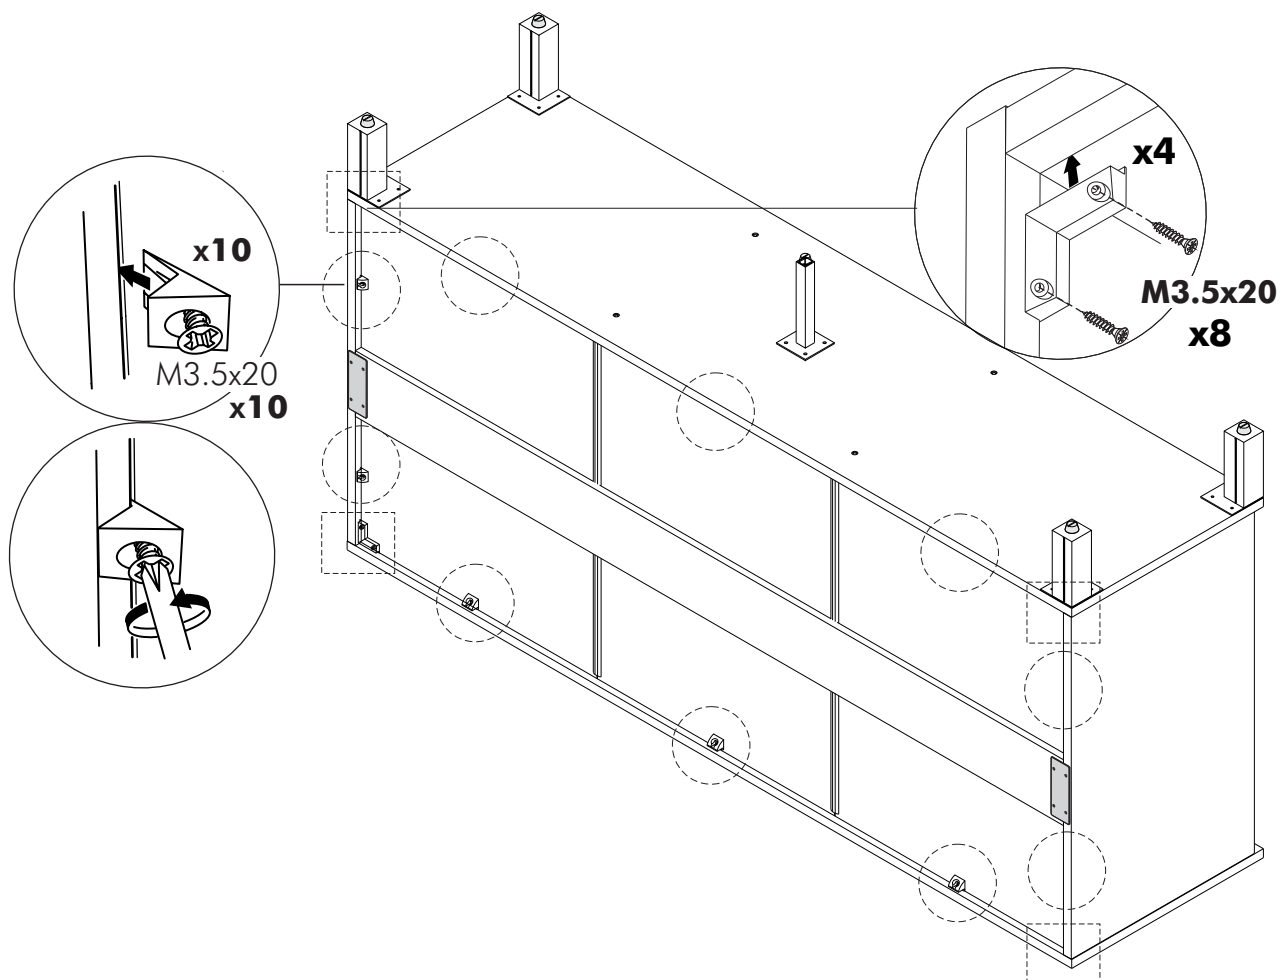

7.

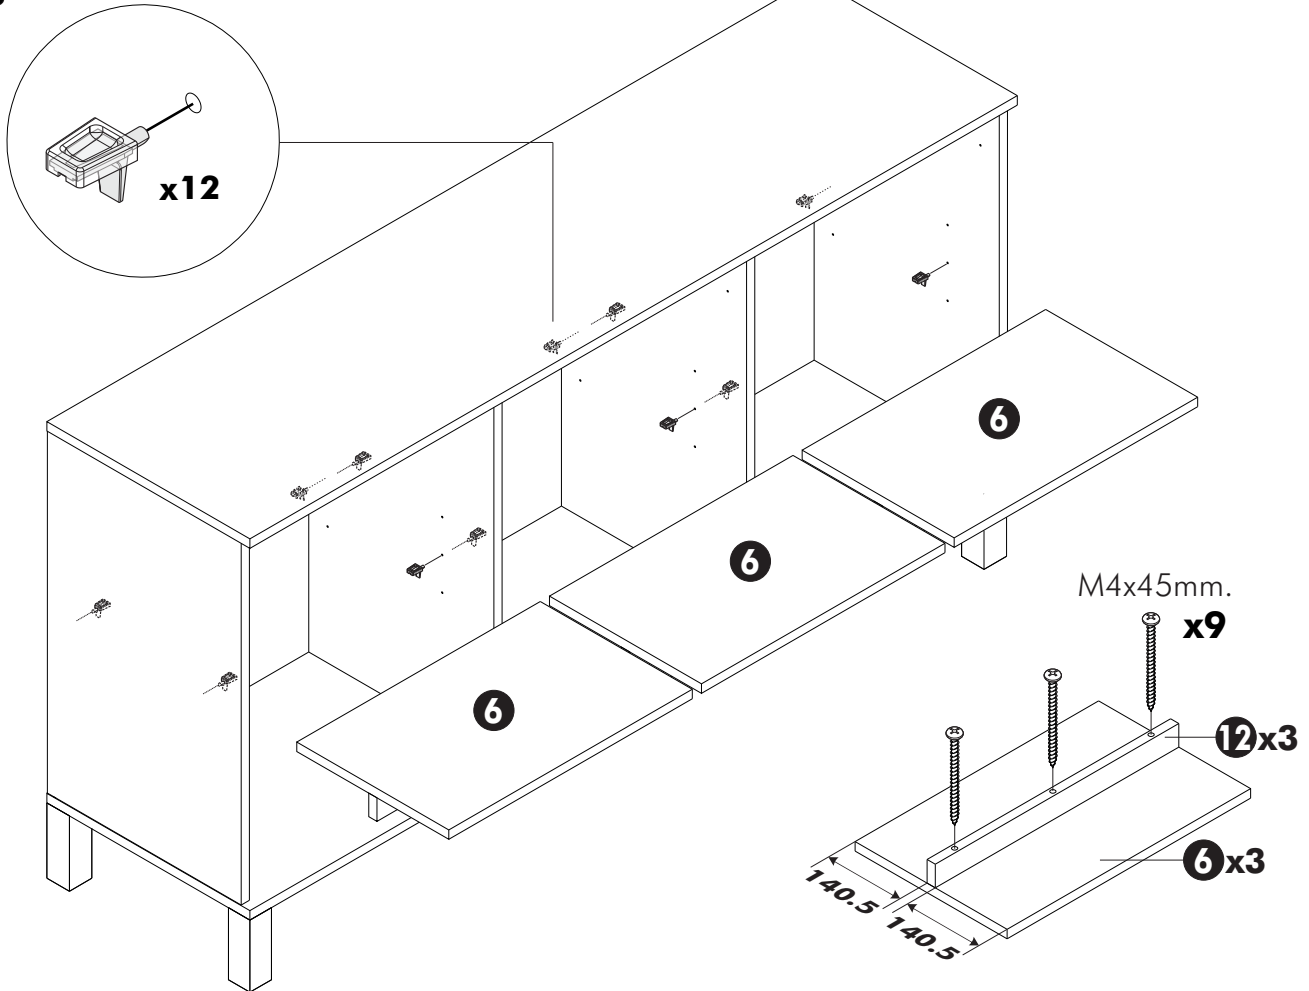

8.

