



# MONACO

**TV 150 cm.**

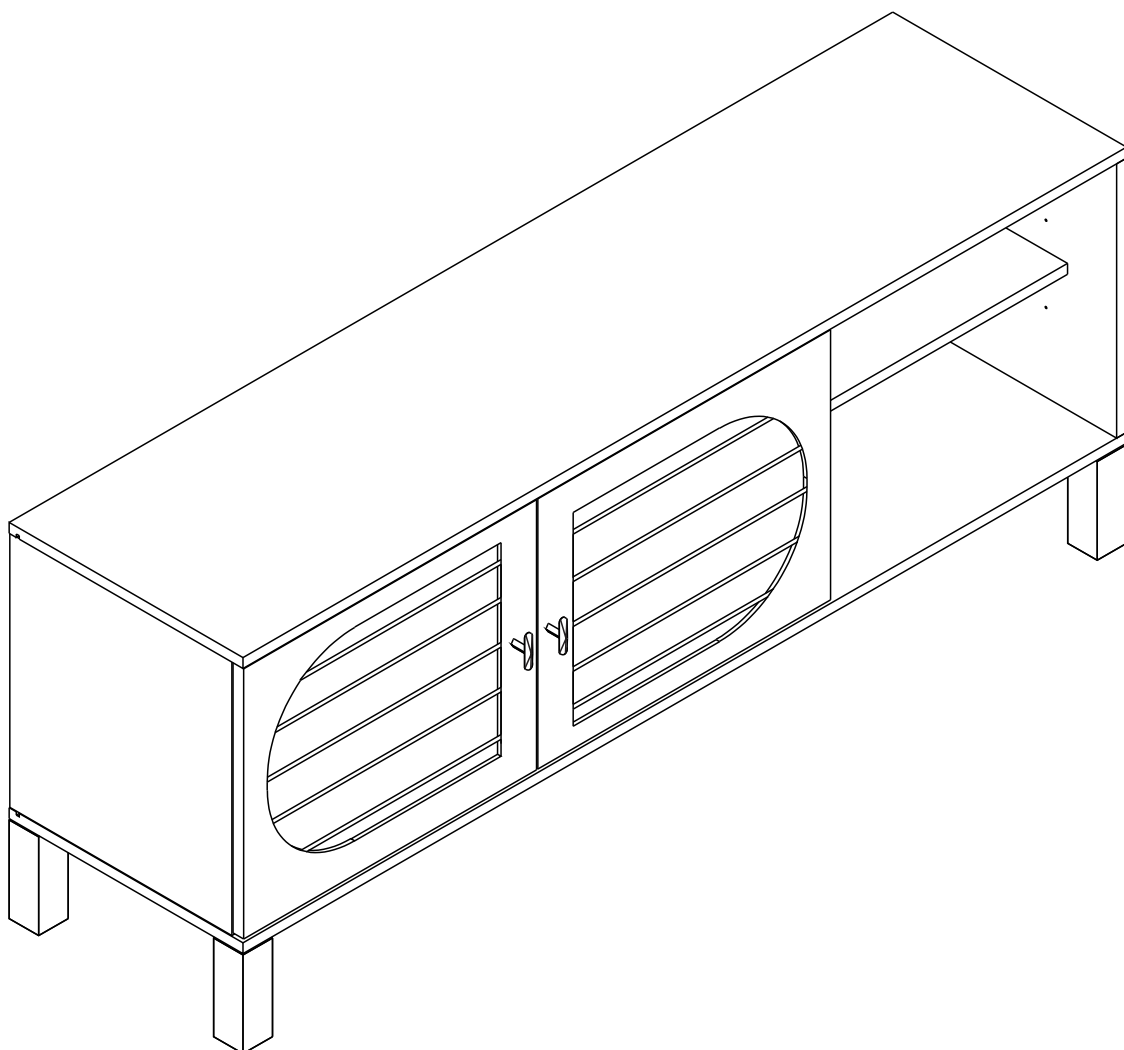


# CONNECT SYSTEM

1

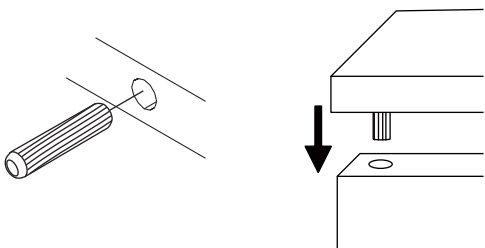


2

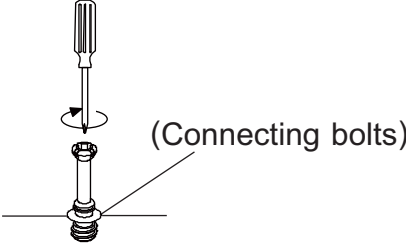

(Connecting bolts)

3

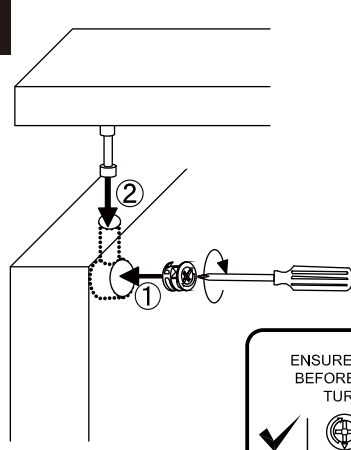


WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT

BEFORE YOU INSERT CONNECTING BOLT


TURN CLOCKWISE UNTIL SECURE


✓



↑


CORRECT






✗


WRONG





M4x16mm.




DOOR PANEL

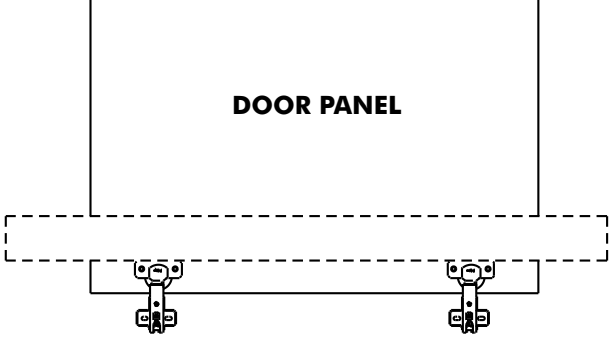

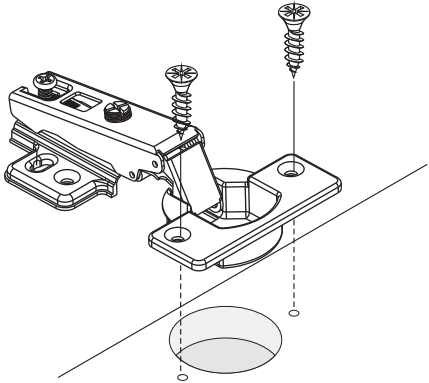

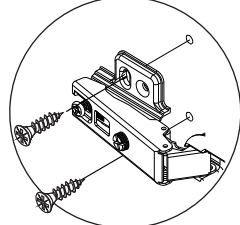


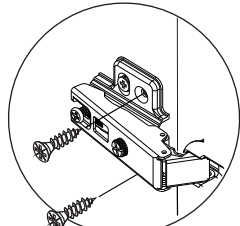

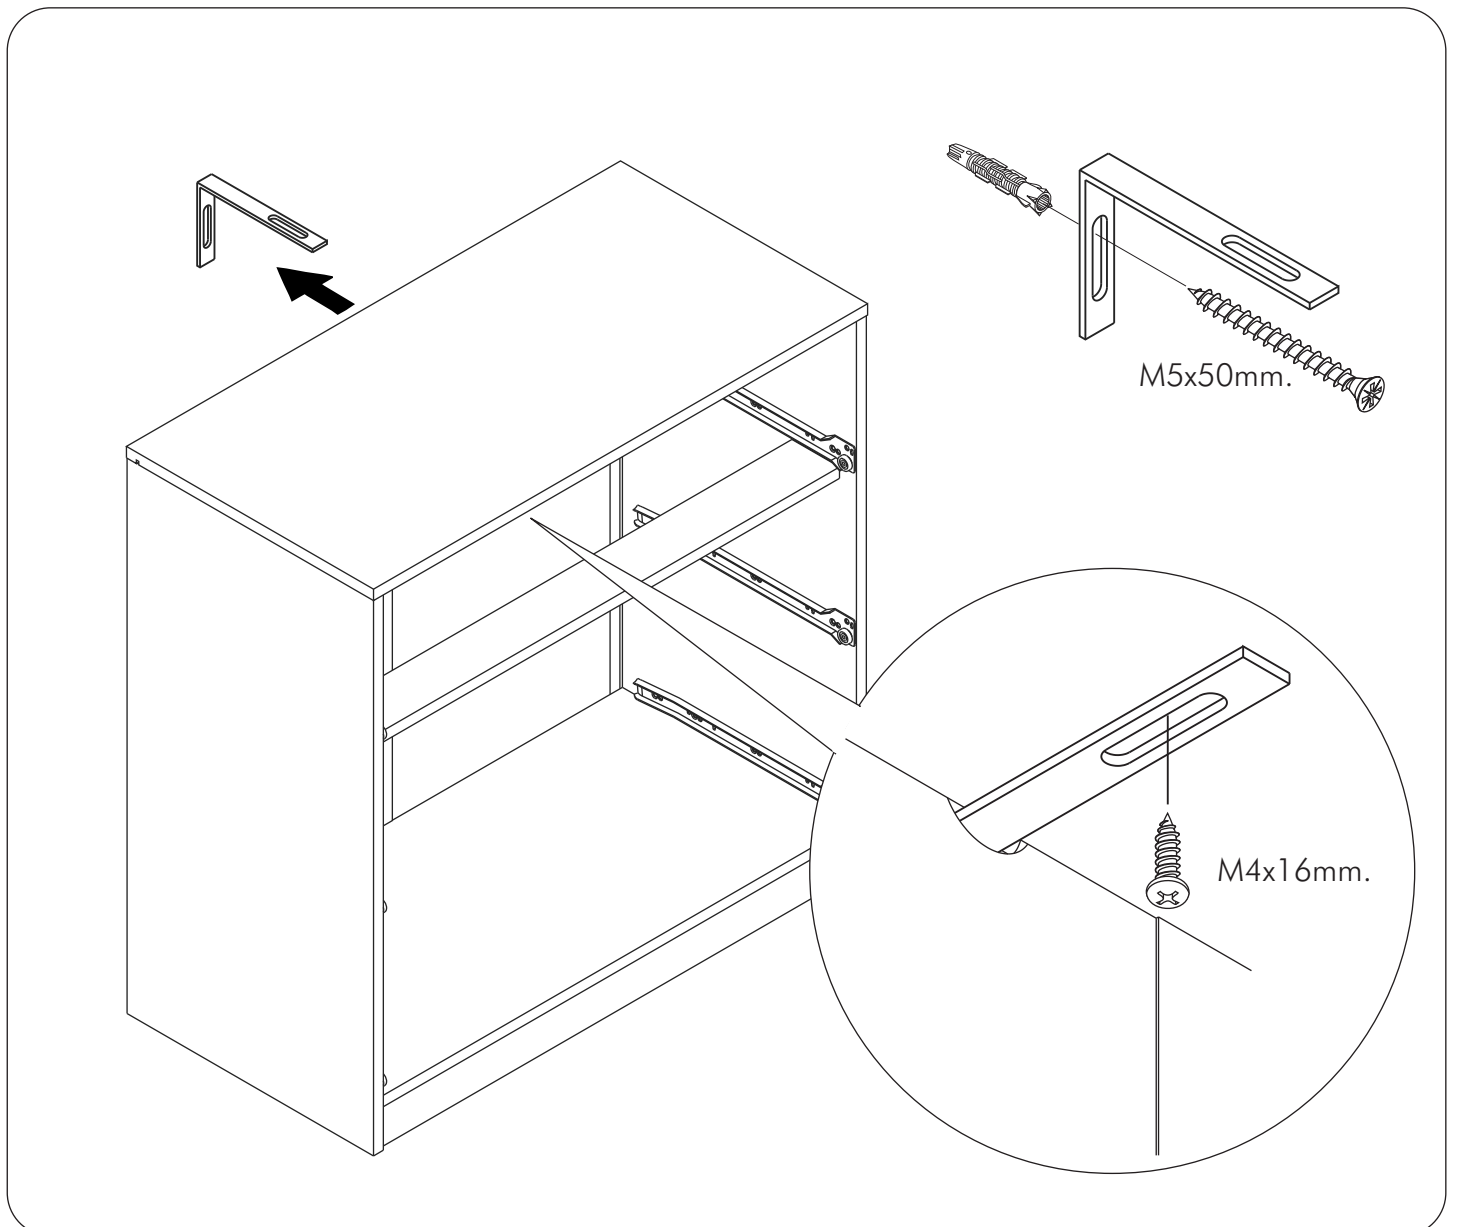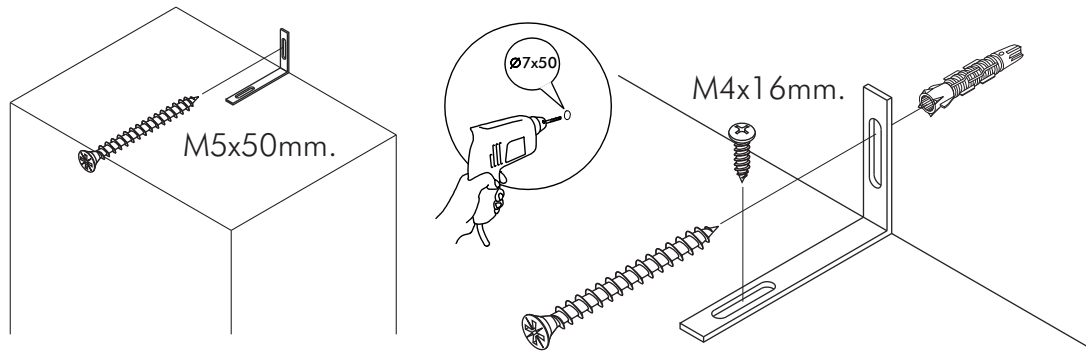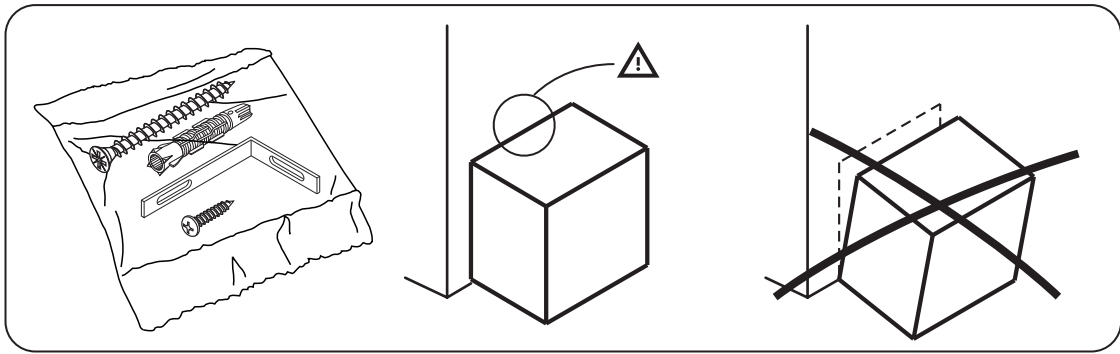

## HARDWARE


### -BODY SET



**x 8**




**x 8**




**x 16**


#8x35




**x 2**




**x4**



**x 1**



**x 12**




**x 8**



**x 2**



**x4**



**x 4**



M3.5x20mm.

**x 16**



**x 1**



M4x16mm.

**x 12**



M4x16mm.

**x 10**



M4x50mm.

**x 8**



M4x30mm.

**x16**




M5x50mm.


**x 2**

## HARDWARE

### -DOOR SET

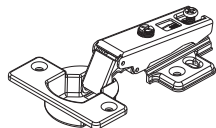

**x 4**

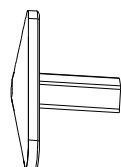

**x 2**



**x 4**



M4x16mm.

**x 24**




T+M4x22mm.

**x2**


## ASSEMBLY

-BODY SET


1.

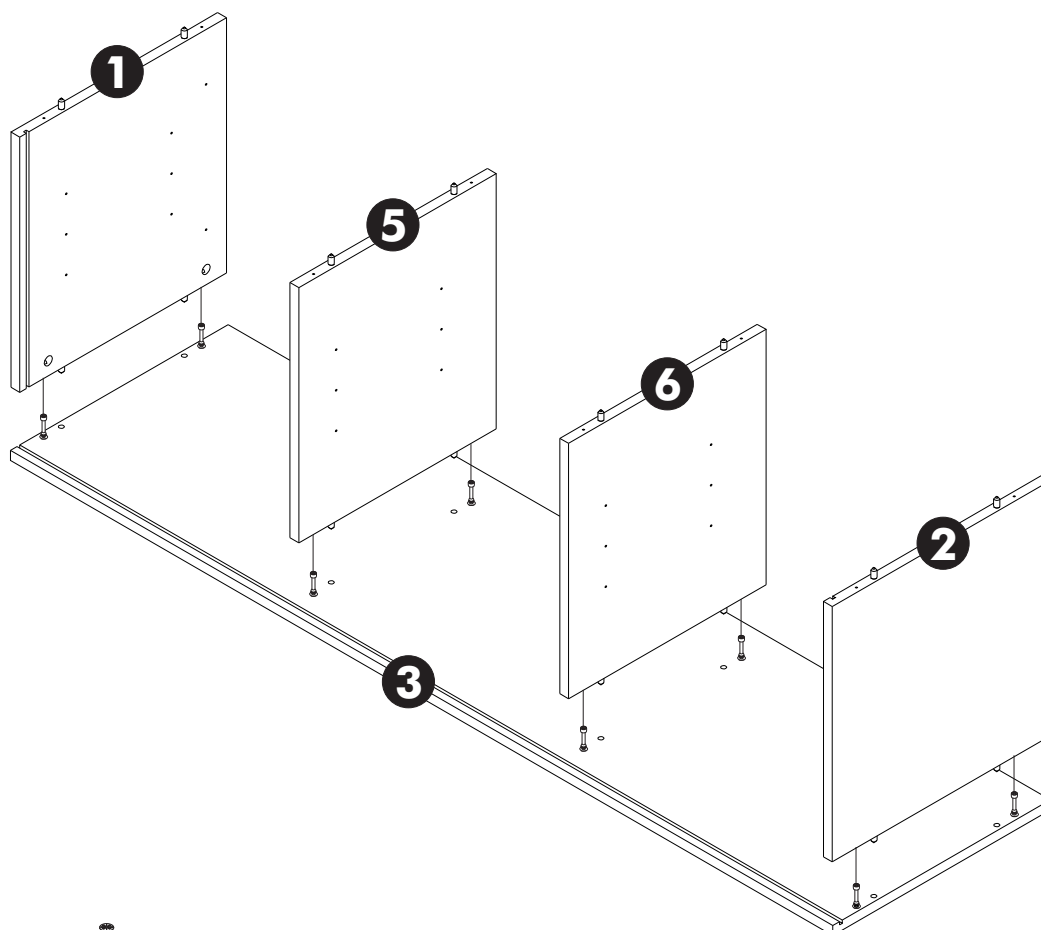


2.

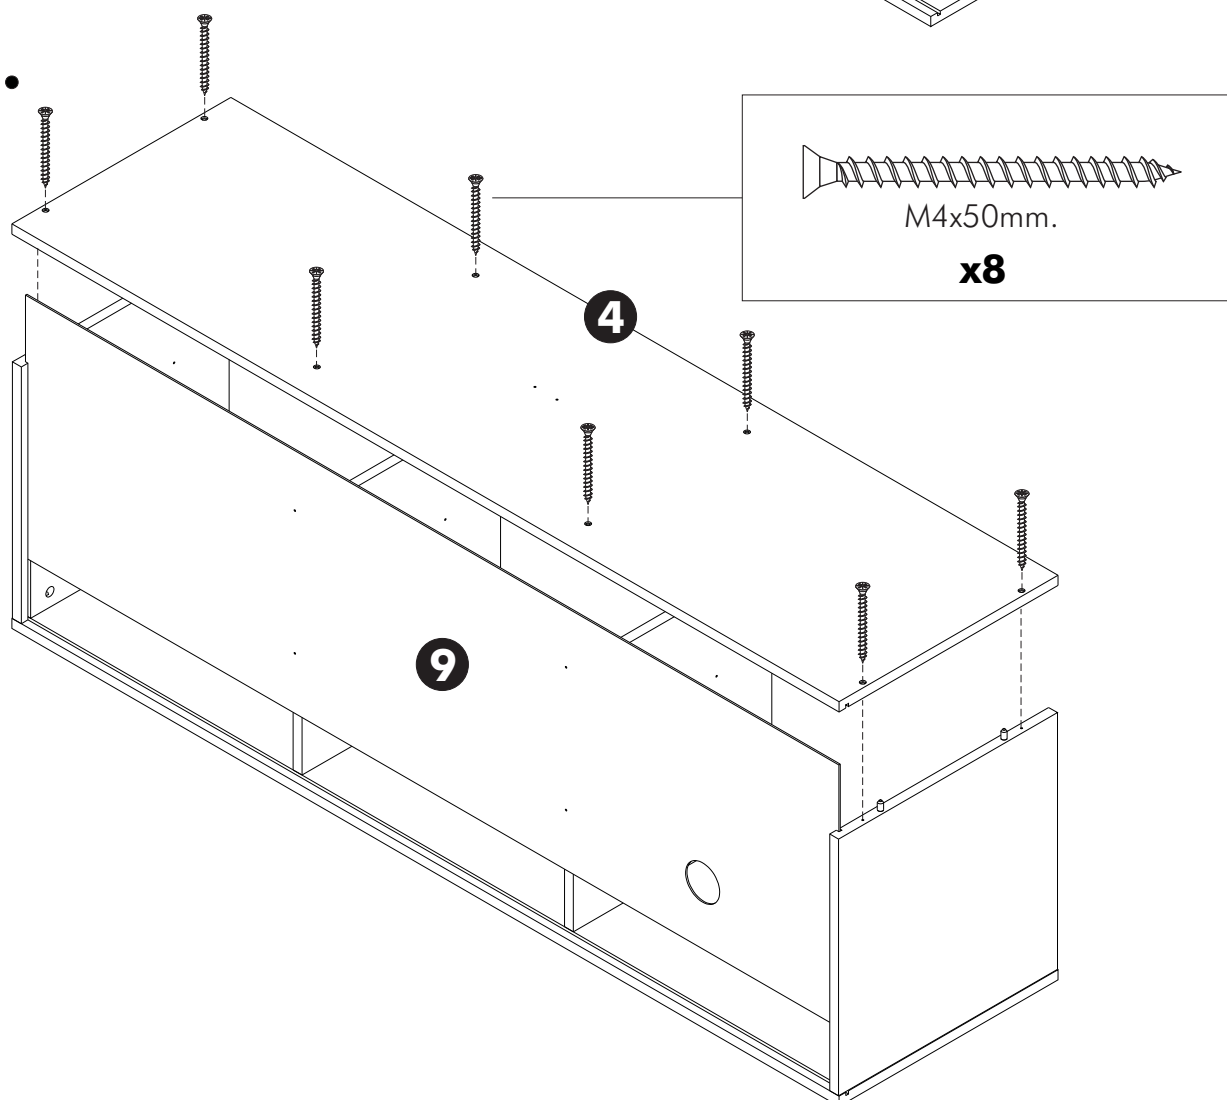


### 3.

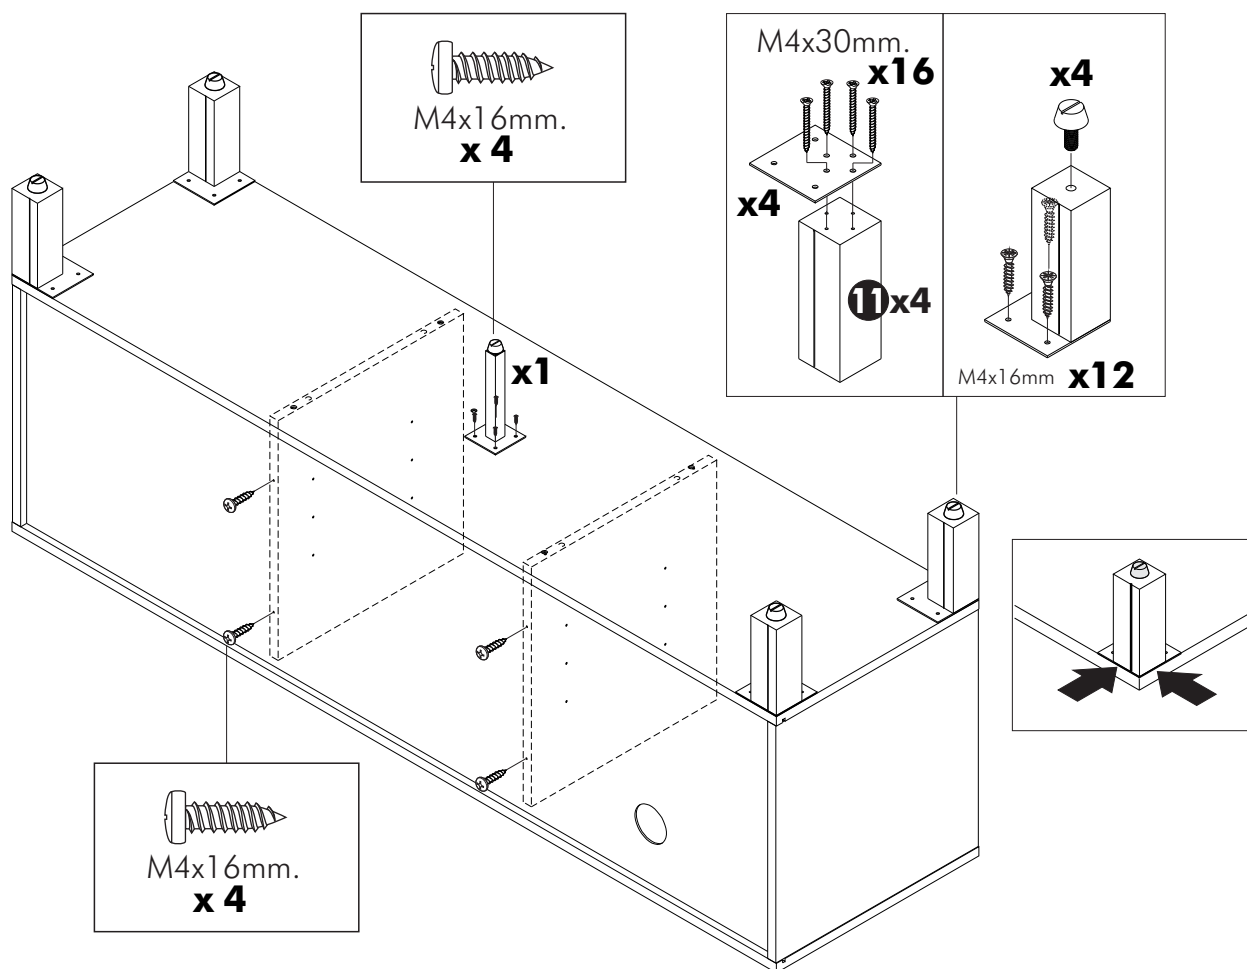

## 4.

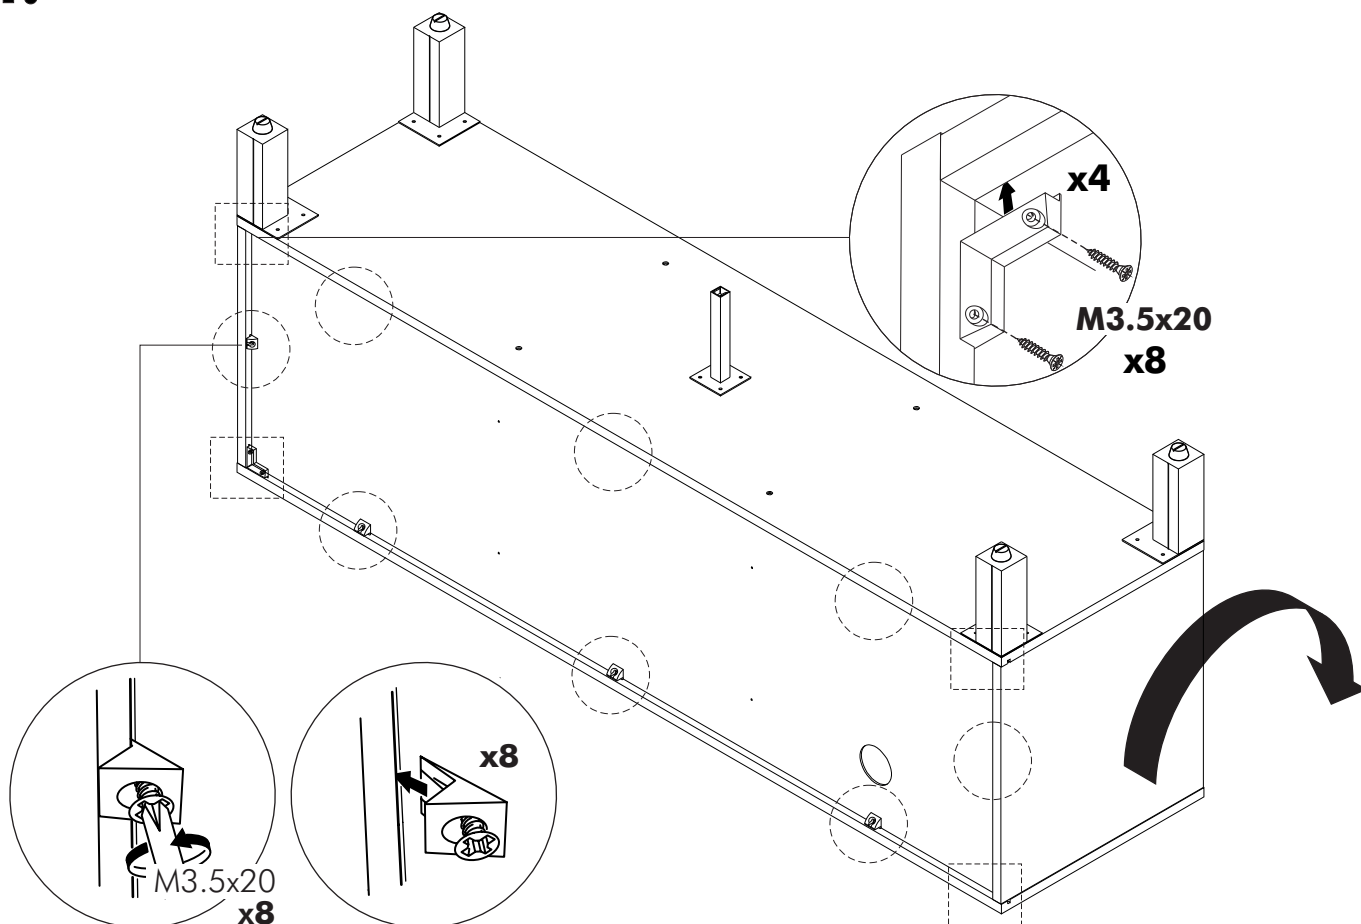

5.

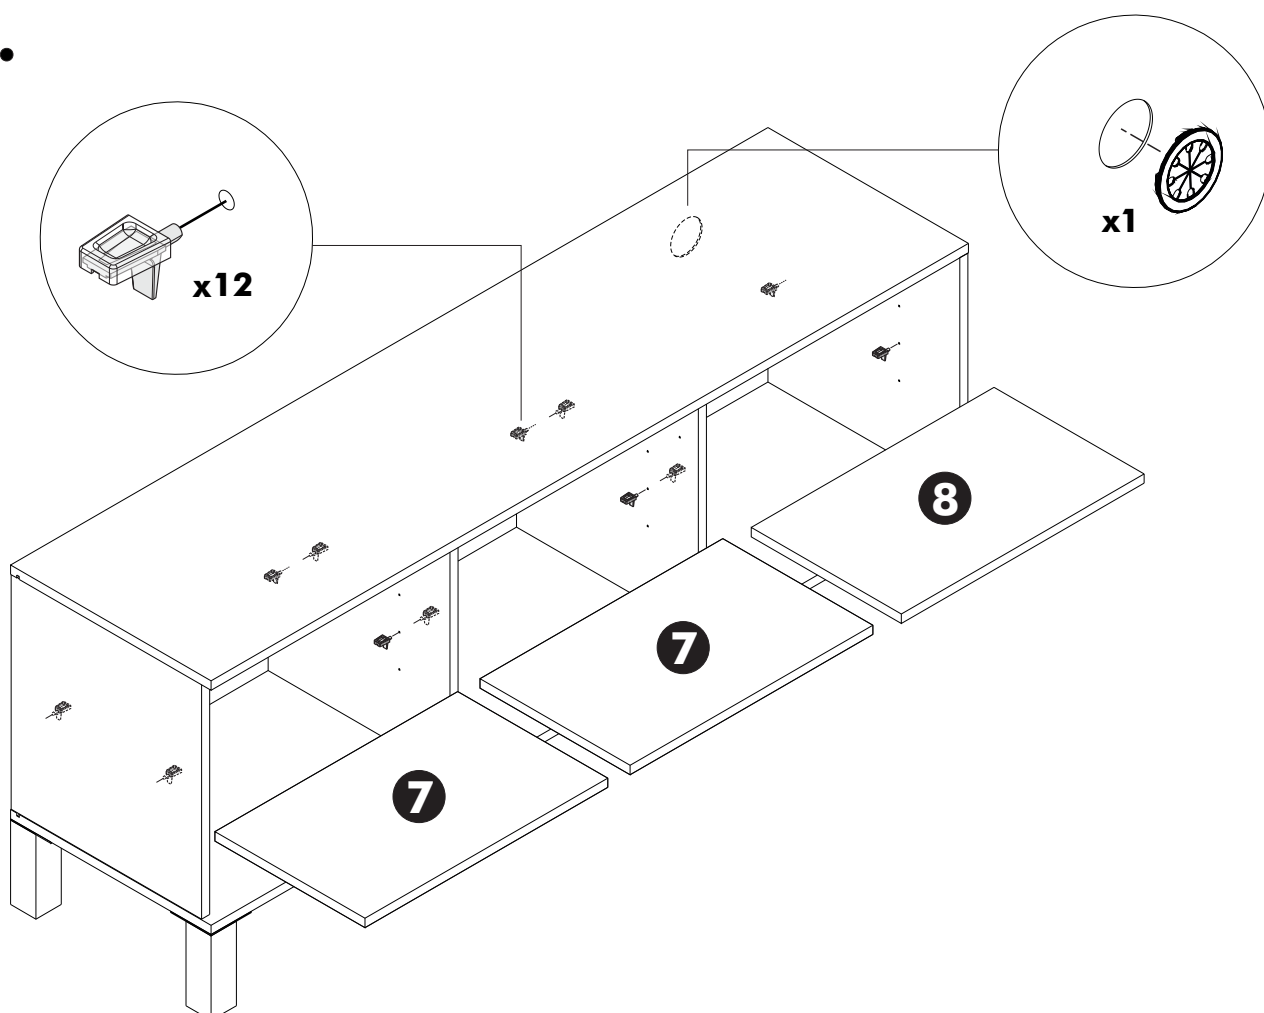

6.

