


MONACO

BED 6 ft.

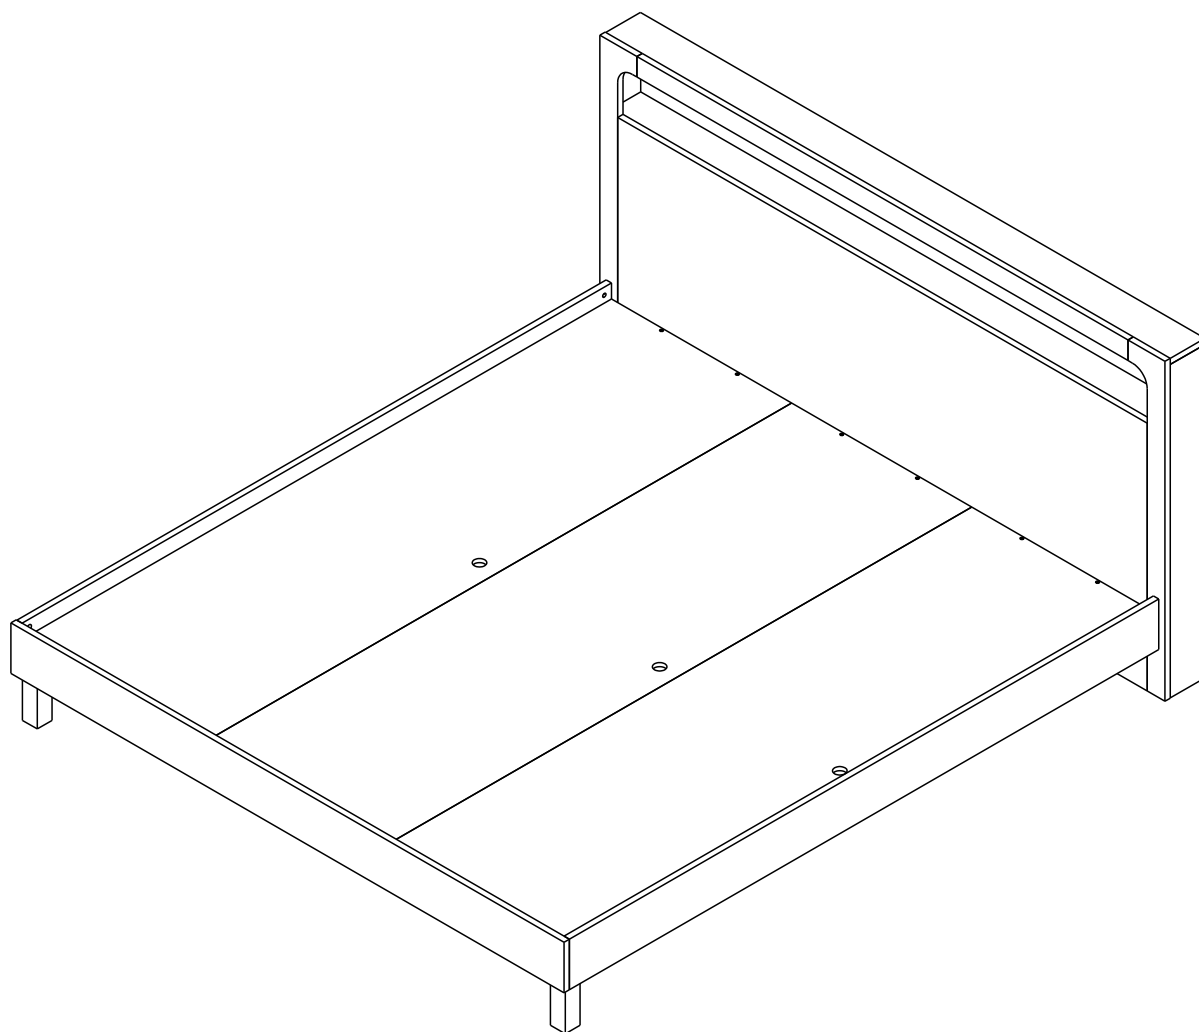

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING BOLT TURN CLOCKWISE UNTIL SECURE		
✓		
	CORRECT	WRONG

M6x45mm.

M6

M6

M4x16mm.

M4x16mm.


i

40mm.

EQ

HARDWARE


-BODY SET



x 4




x 4




#8x35

x 8

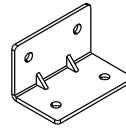

x 2




x 6



x 3



x 2



x 2



M6

x 4



M6

x 4



M3.5x20mm.

x 4



M4x30mm.

x 48




M4x16mm.

x 12




M4x13mm.

x 8




M4x16mm.

x 11




10x5/8"

x 8




M6x30

x 2



M6x45

x 4



M6x60


x 4




ASSEMBLY

-BODY SET


1.

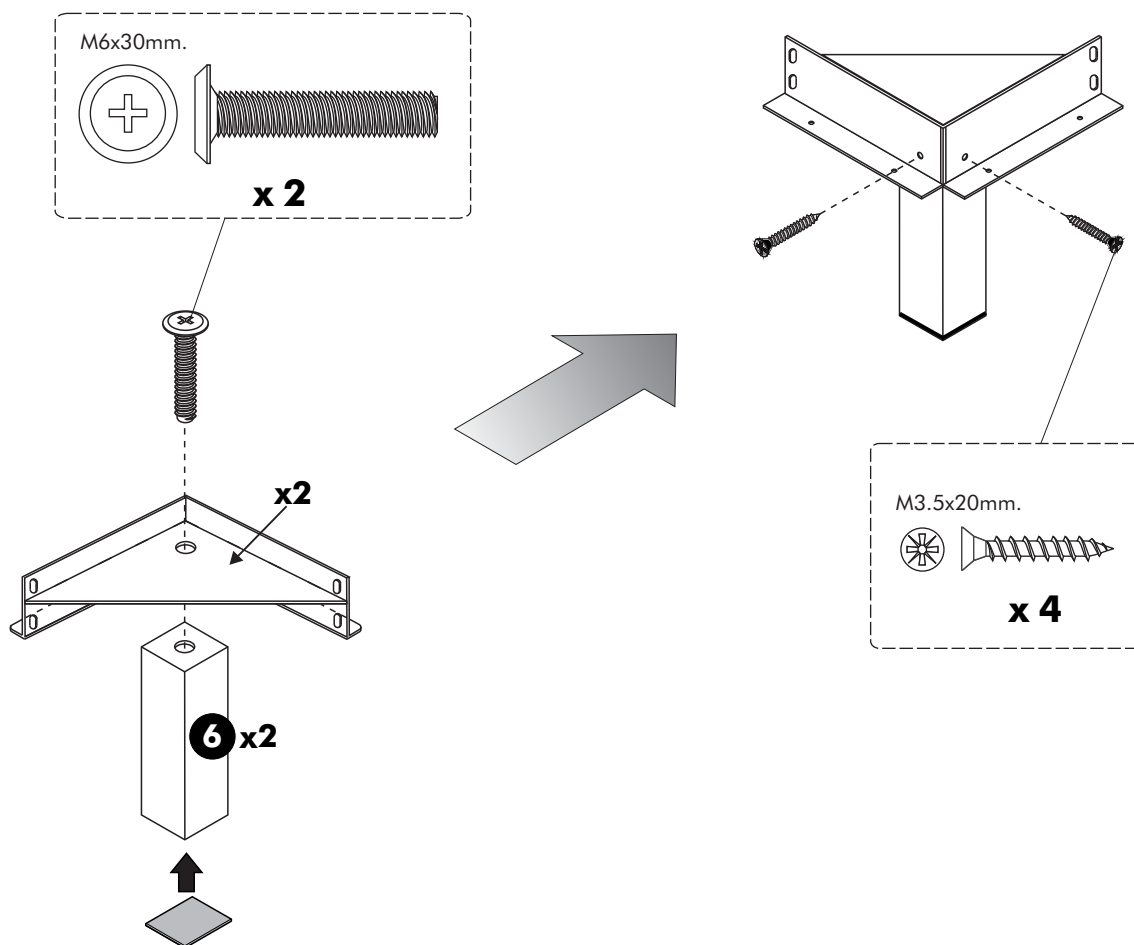


2.

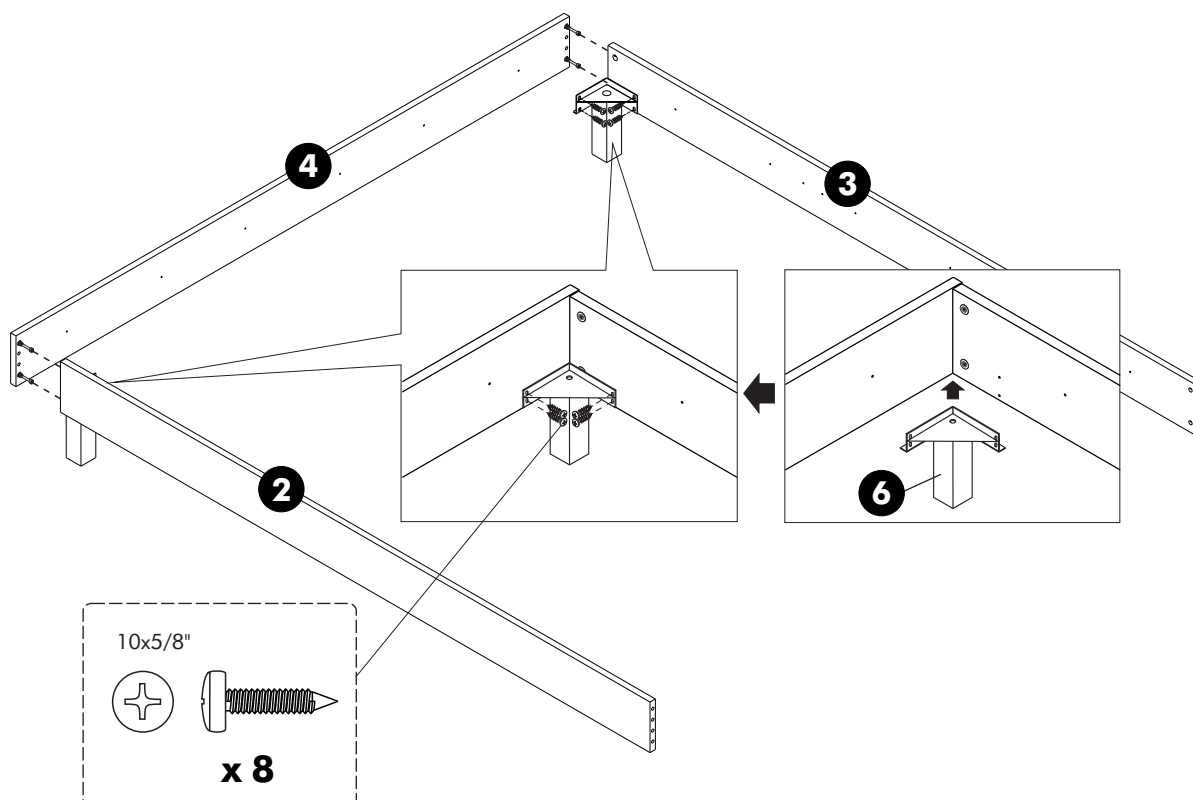


3.

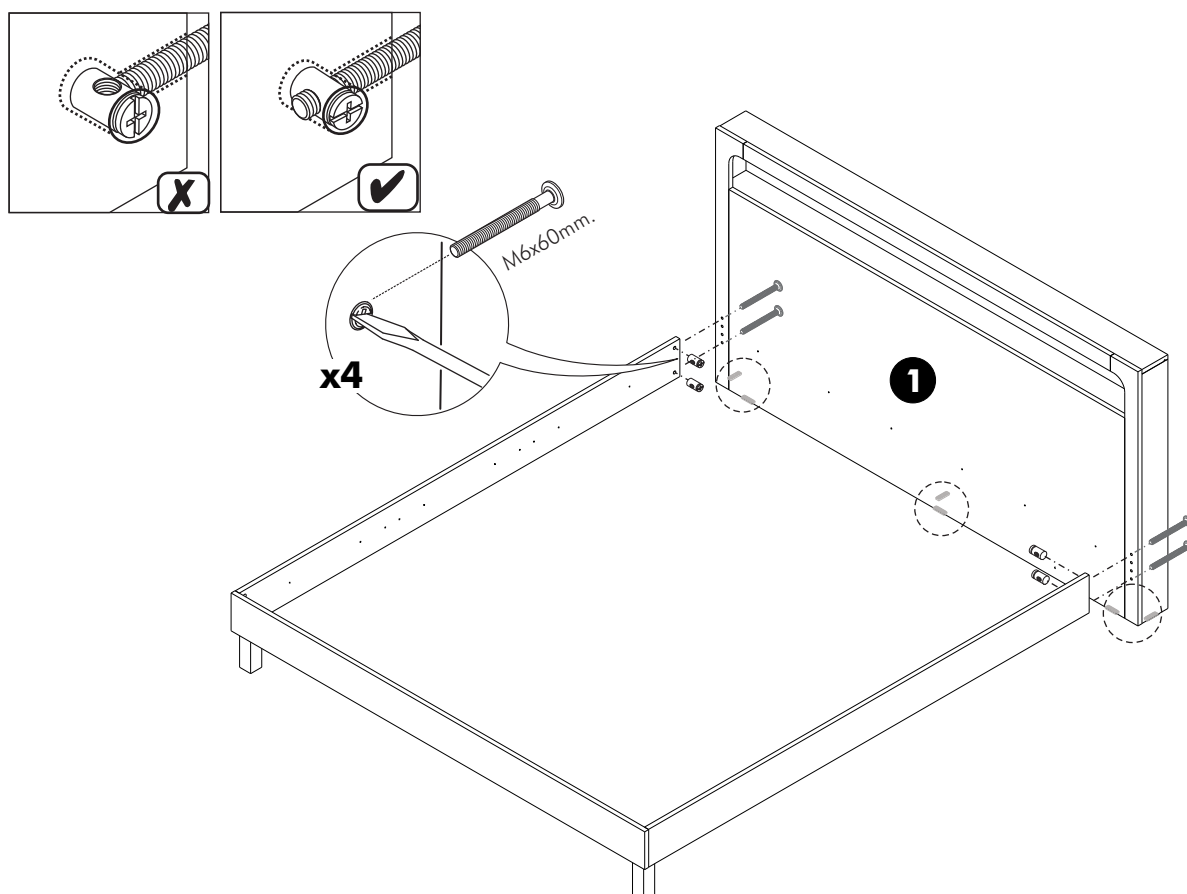

4.

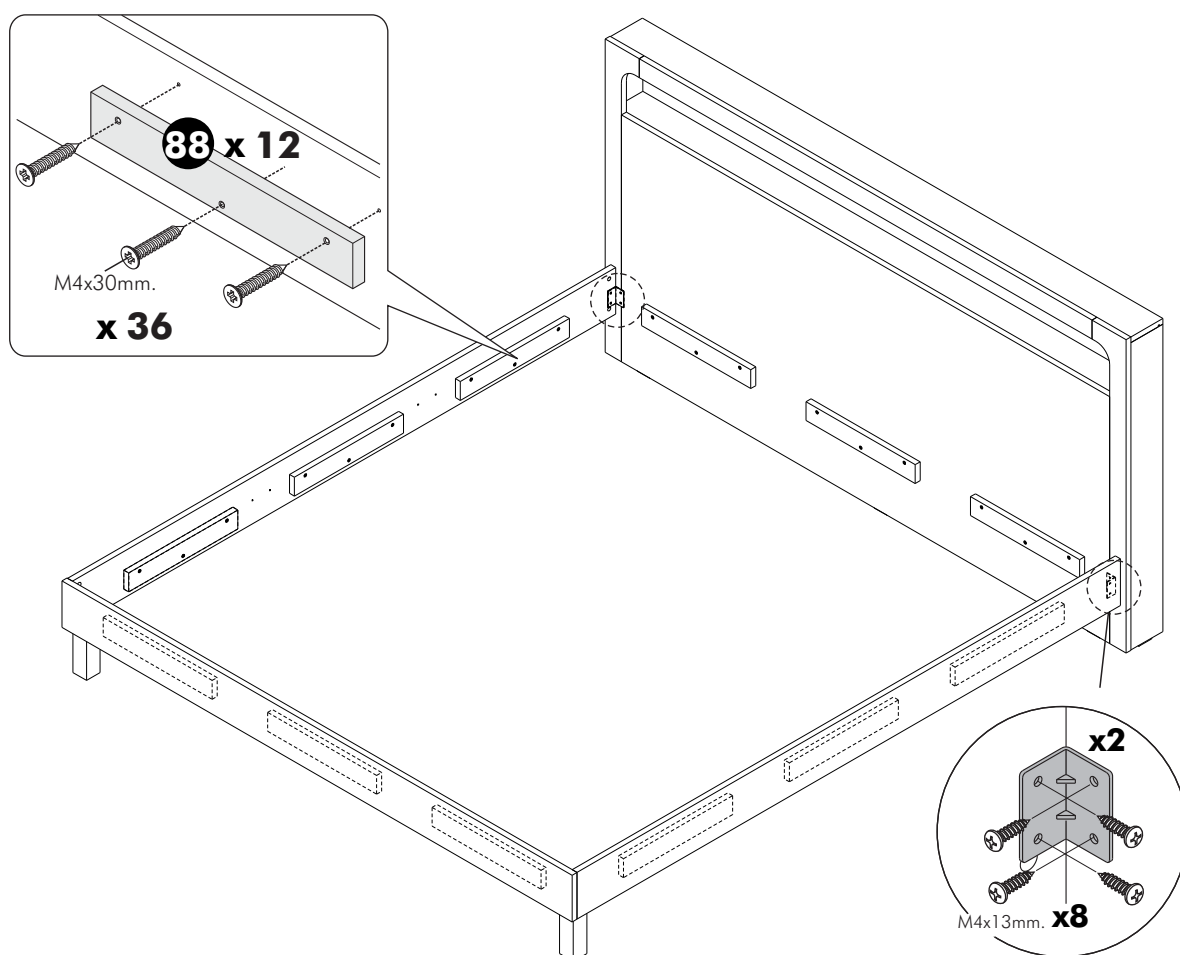

5.

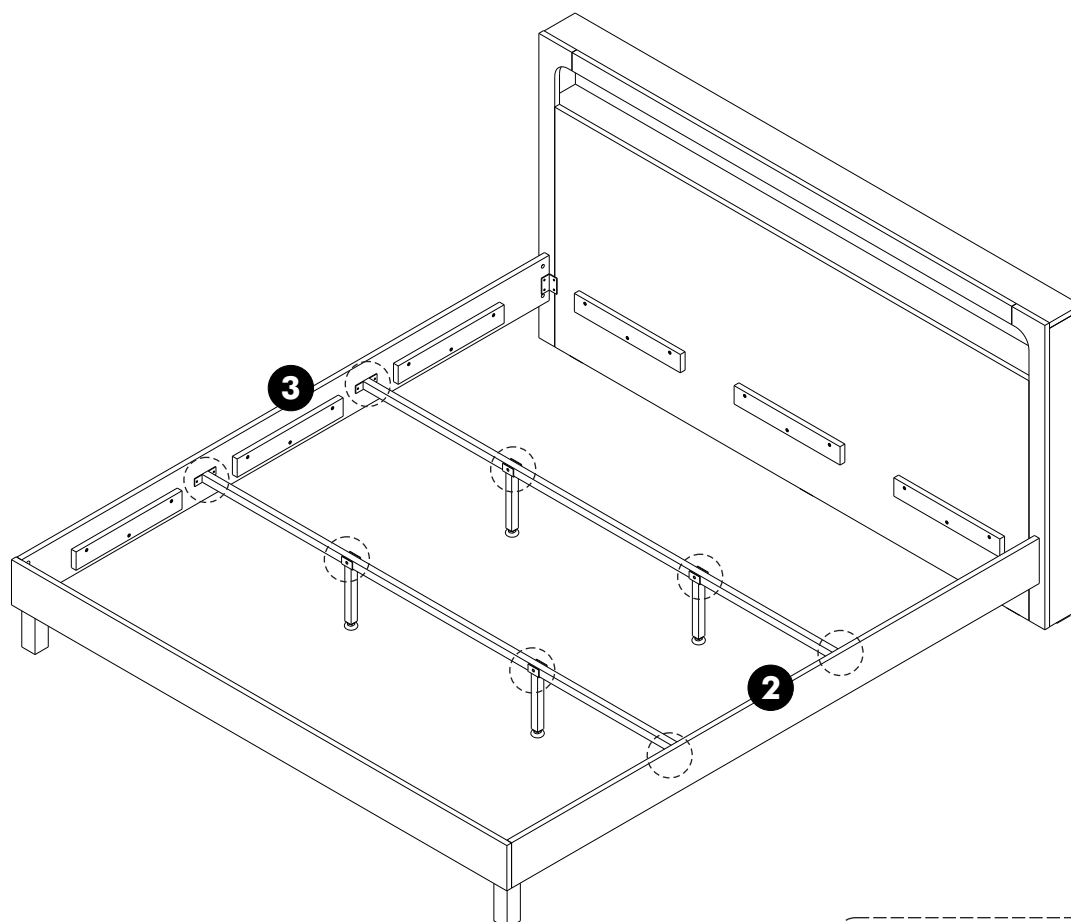

6.

