


# VIVO

**BED 5 ft.**

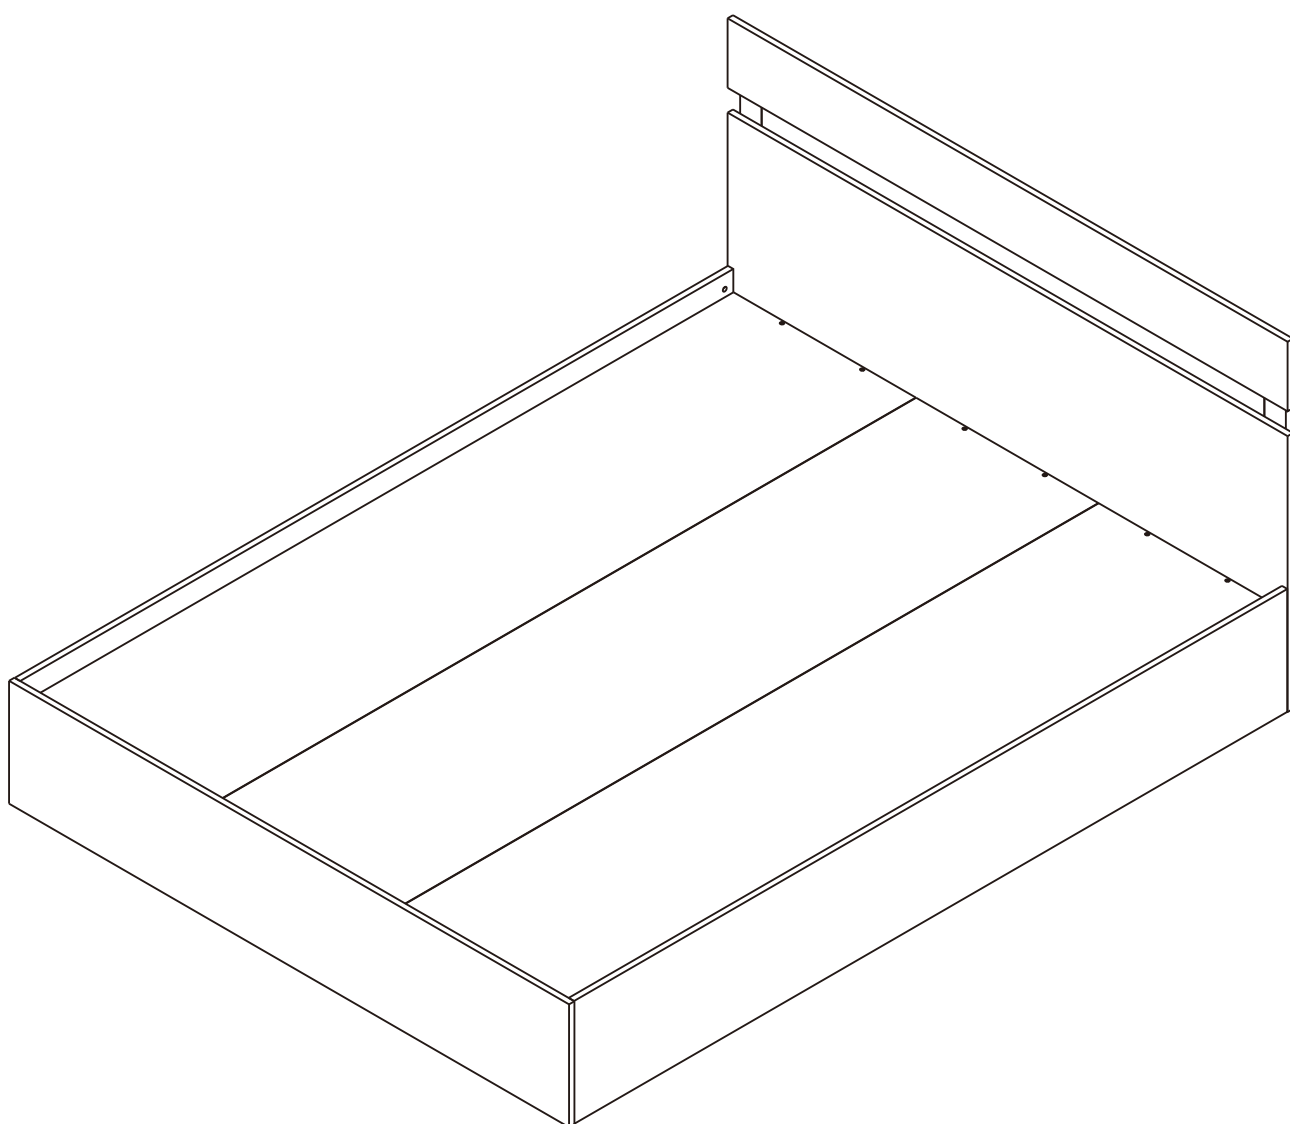

# CONNECT SYSTEM

**1**

**3**

**2**

(Connecting bolts)

**WHEN FITTING CAMS**  
 ENSURE STARTING POSITION IS CORRECT  
 BEFORE YOU INSERT CONNECTING BOLT  
 TURN CLOCKWISE UNTIL SECURE

✓																																																																																																					
↑	<b>CORRECT</b>	<b>WRONG</b>										×																																																																																									

M6x45mm.

M6

M6

M4x16mm.

M4x16mm.

**i**

40mm.

☹️

☒


EQ

☺️

☑️

# HARDWARE


## -BODY SET



**x 4**




**x 4**



#8x35

**x 12**

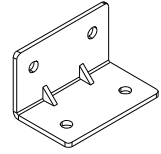

**x 8**



No.1

**x 3**




#M6

**x 4**



#M6

**x 4**



**x 12**



M4x16mm.

**x 24**



M4x16mm.

**x 43**




M4x25mm.

**x 22**



M4x30mm.

**x 48**



#M6x45

**x 4**



# JCB+ M6x60


**x 6**




# ASSEMBLY

-BODY SET


## 1.

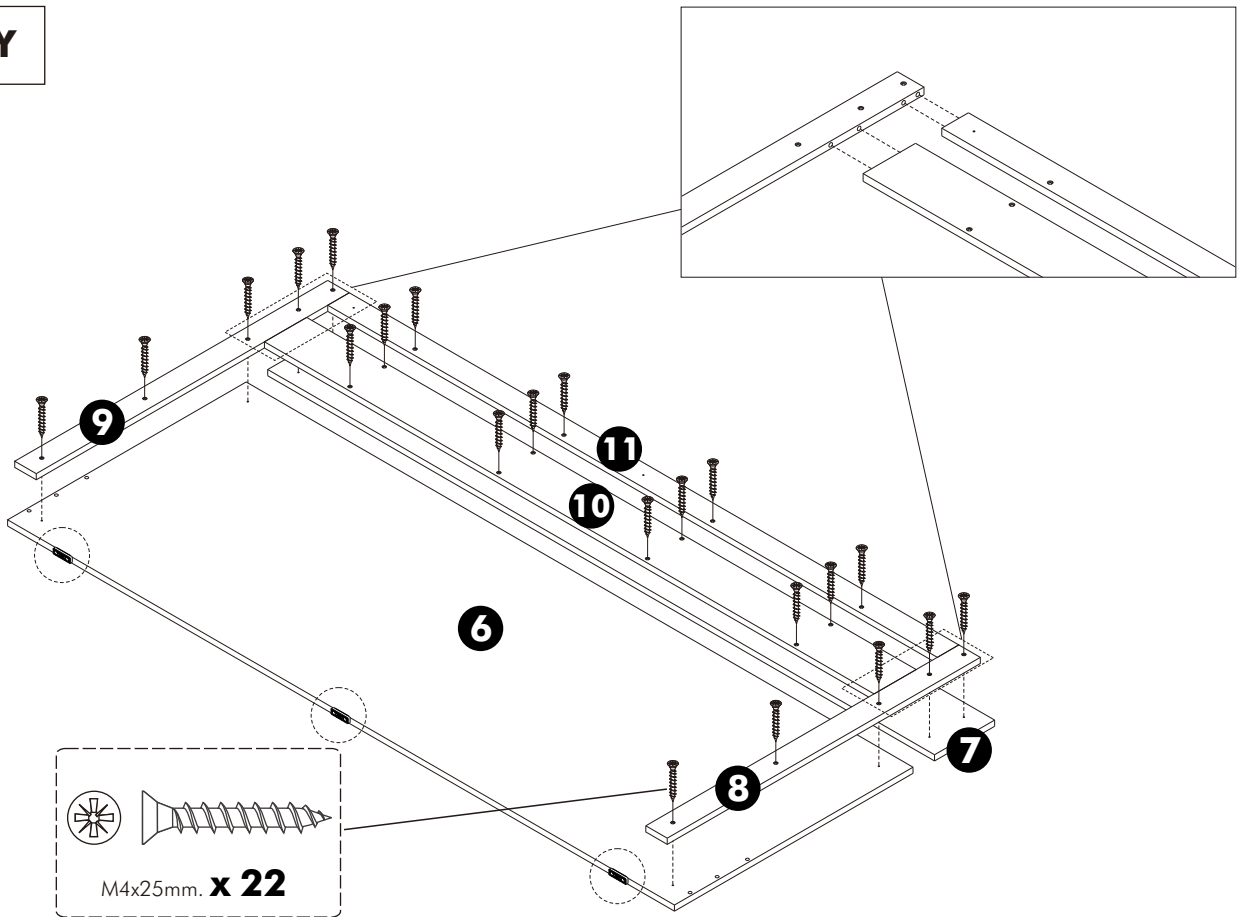

## 2.

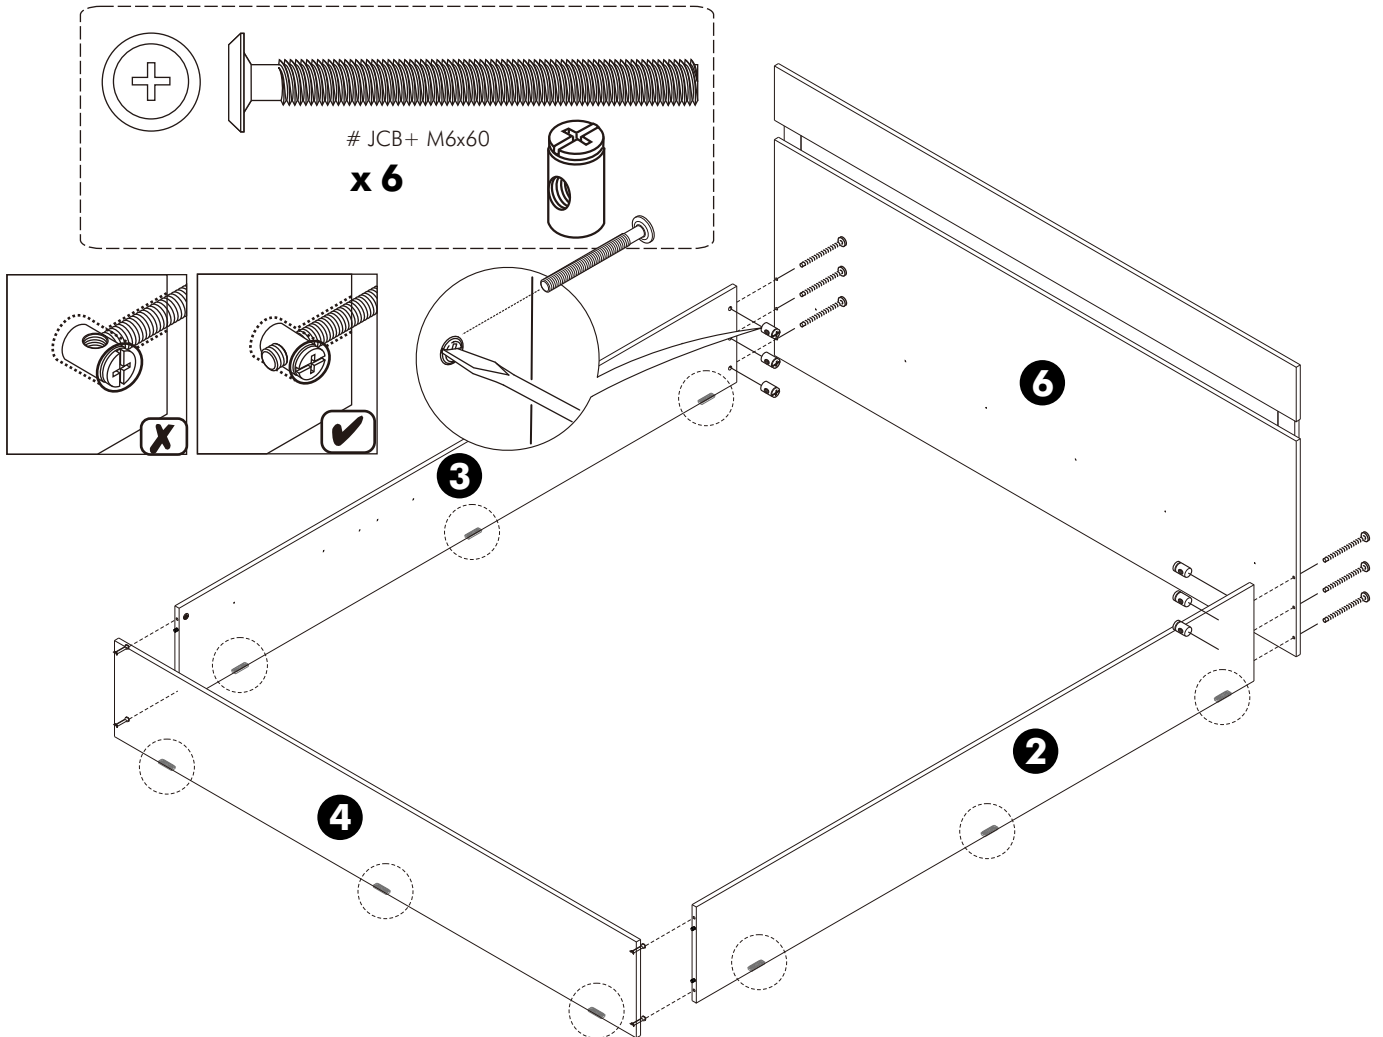

**3.**

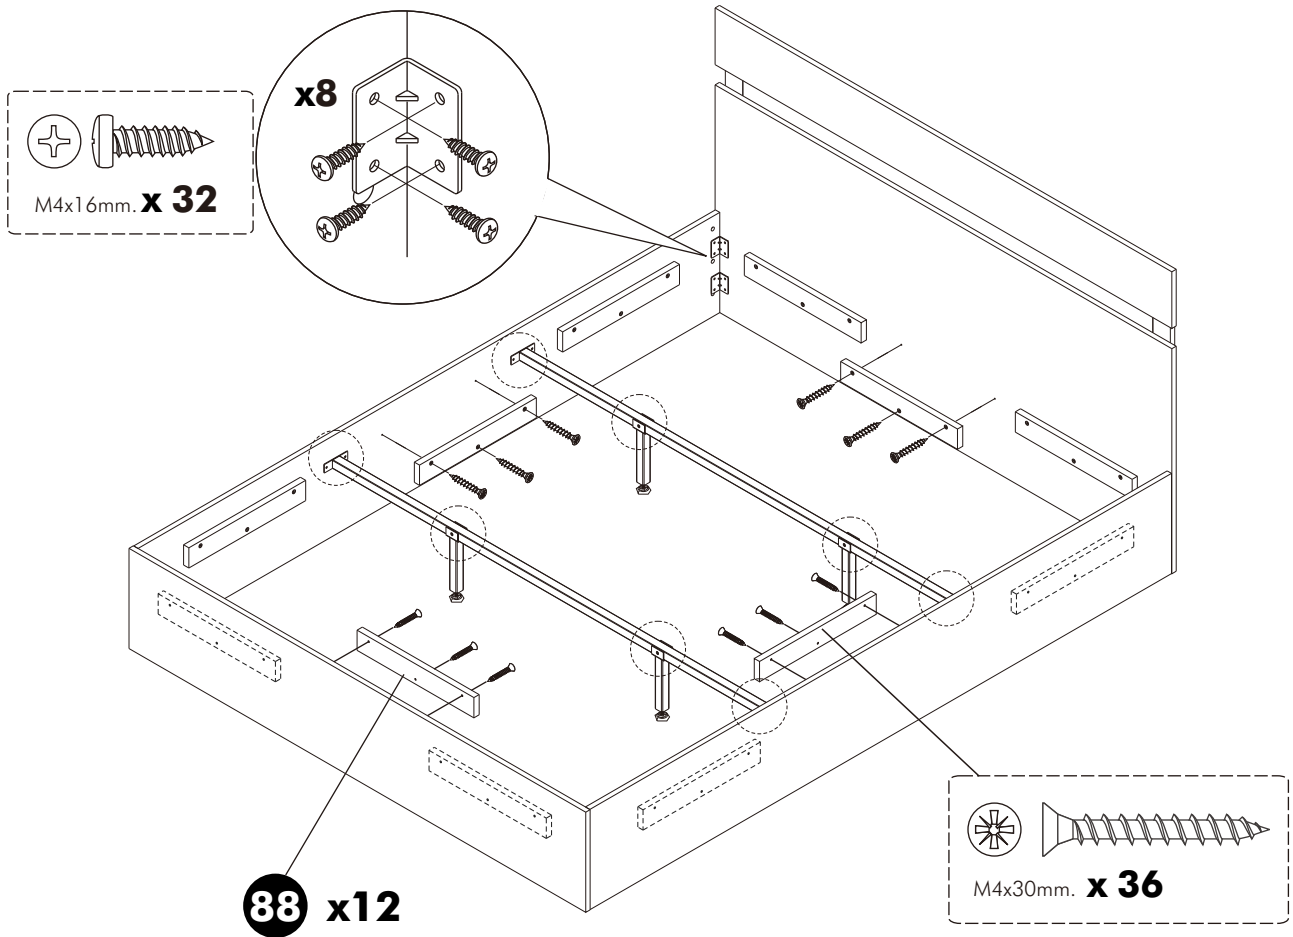

**4.**

