


VASIM

BED 5 ft.
BED 6 ft.

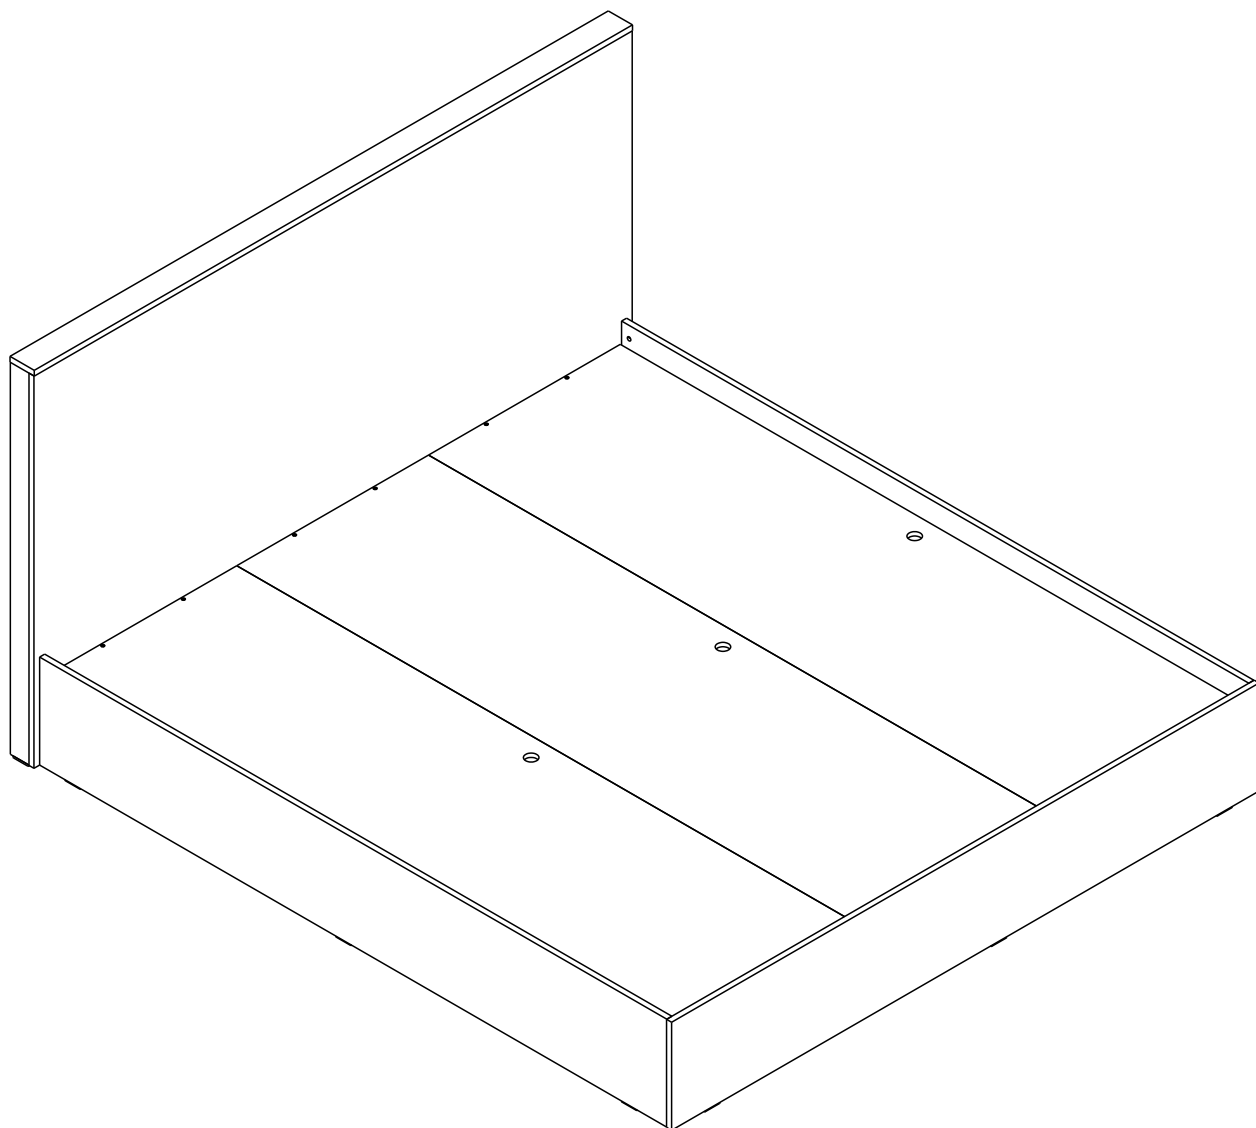

CONNECT SYSTEM

1

3

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
↑	CORRECT	WRONG		

2

(Connecting bolts)

M4x16mm.

i

40mm.

☹️

✗

EQ

😊



✓

M6x45mm.

M6


M6

M4x16mm.

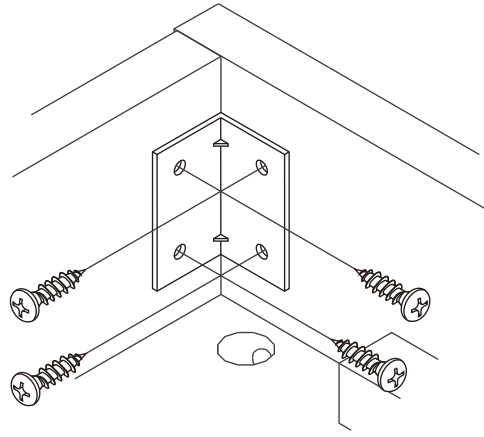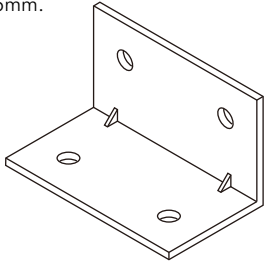

HARDWARE

-BODY SET




x 4



19mm.

x 4




#8x35

x 4




M4x16mm.

x 43

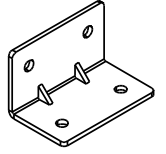

x 8



x 9




#M6

x 4



#M6

x 4




TF+M6x45

x 4




M4x16mm.

x 18



M4x30mm.

x 48

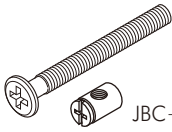

JBC+M6x60

x 6




No.1

x 3


ASSEMBLY

-BODY SET

1.

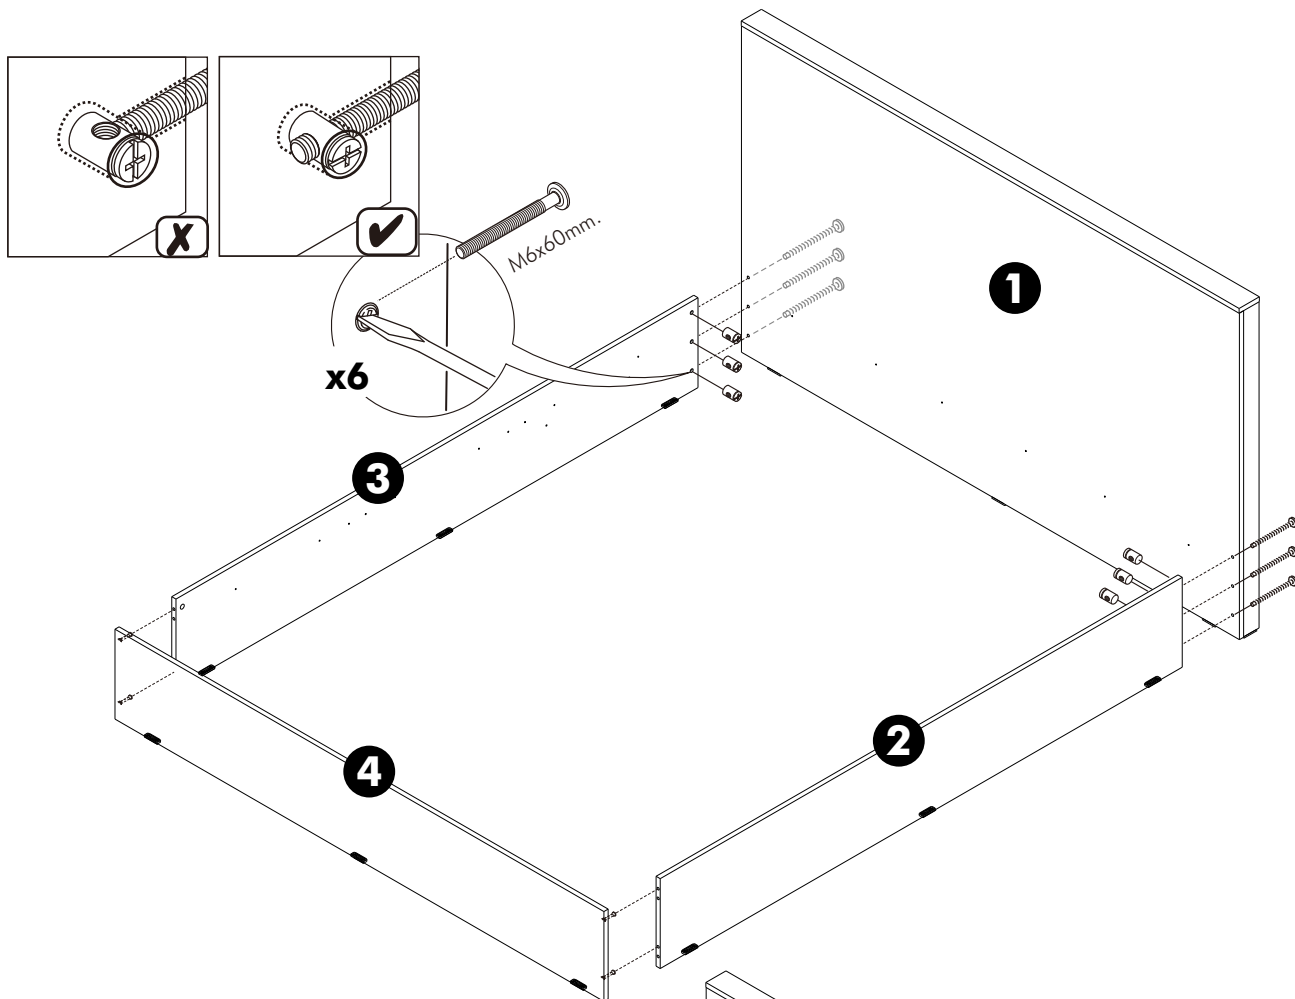

2.

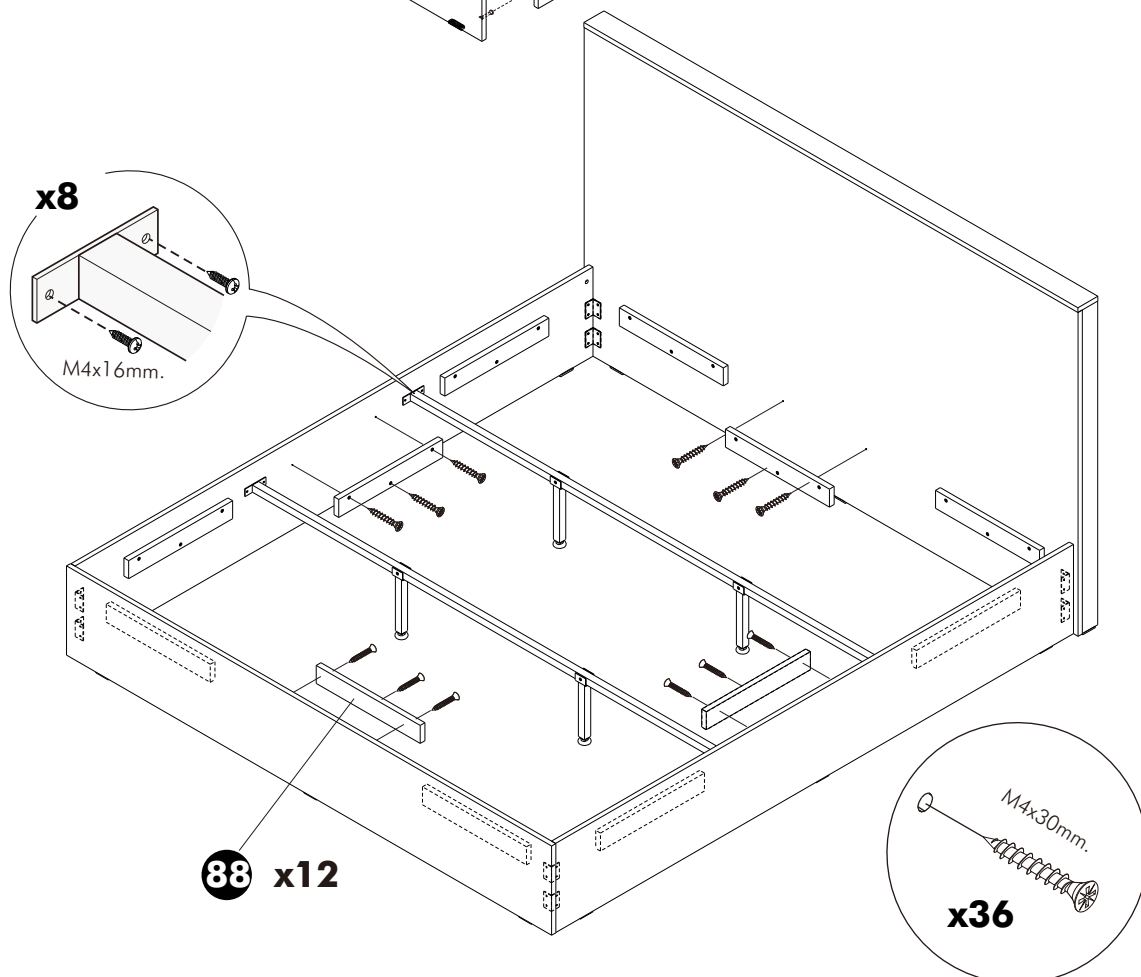

3.

