


MELBOURNE


BED 5 ft.

BED 6 ft.

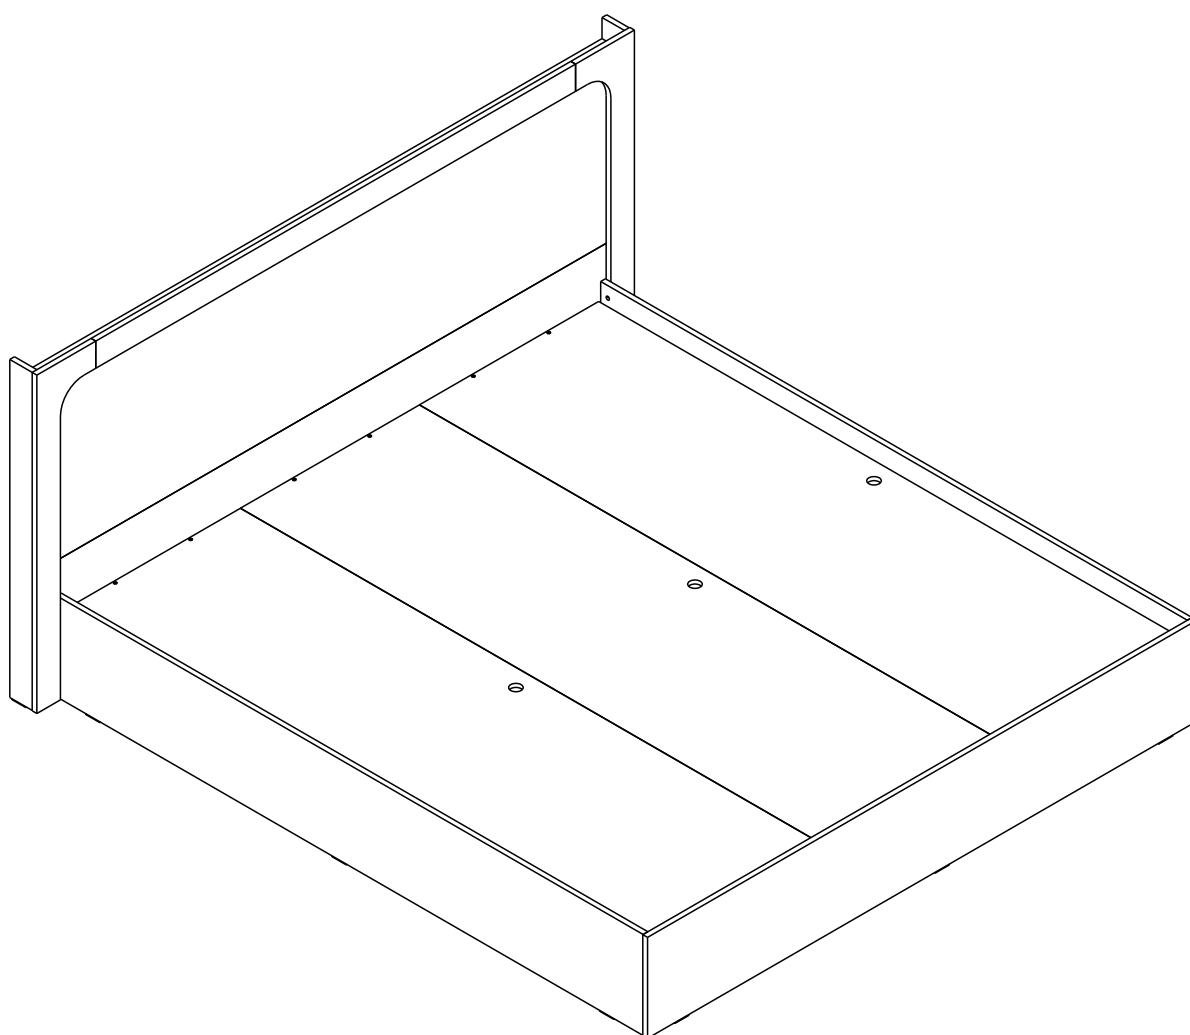


CONNECT SYSTEM


1

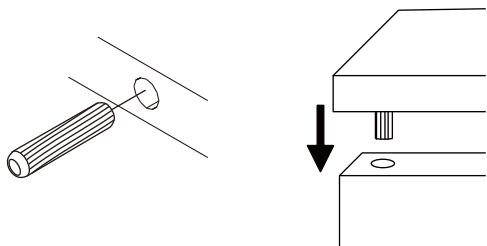


2

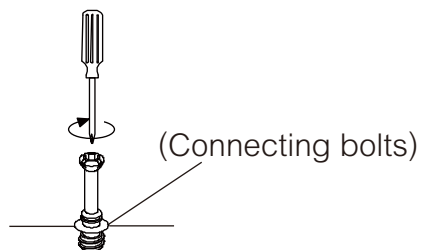




3

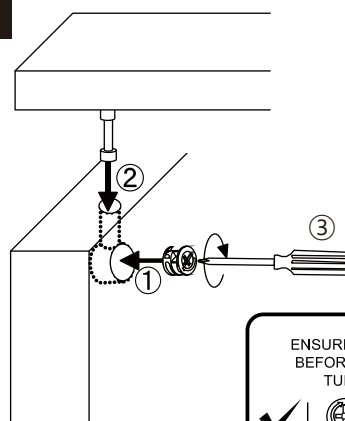

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

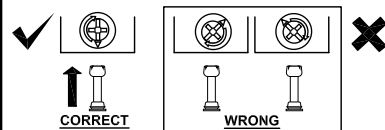



M4x16mm.

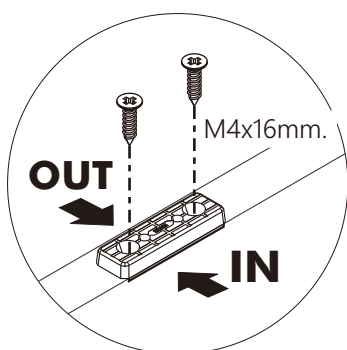



M6x45mm.




M6

M6

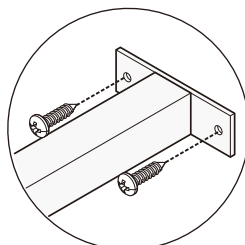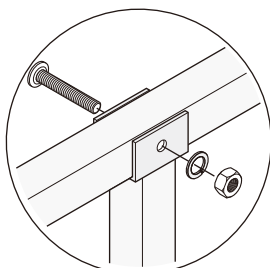


M4x16mm.

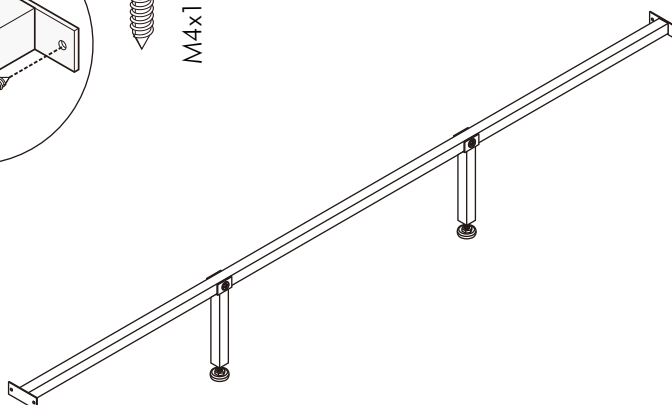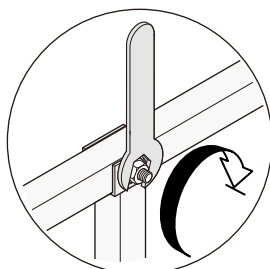

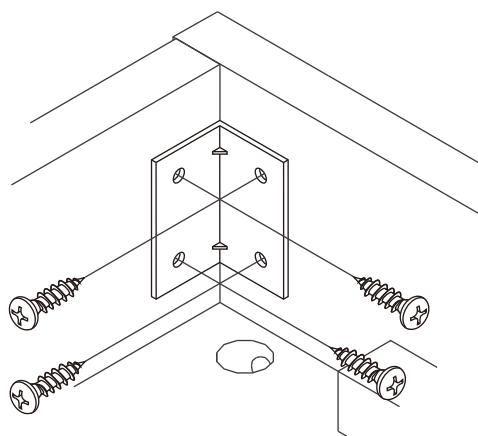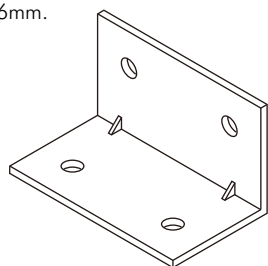

HARDWARE


-BODY SET



x 4



x 4




#8x35

x 4




M4x16mm.

x 43

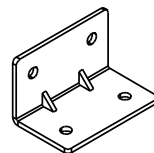

x 8



x 14



#M6

x 4



#M6

x 4



TF+M6x45

x 4




M4x16mm.

x 28



M4x30mm.

x 48

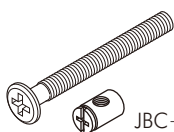

JBC+M6x60

x 6




No.1


x 3

ASSEMBLY


-BODY SET

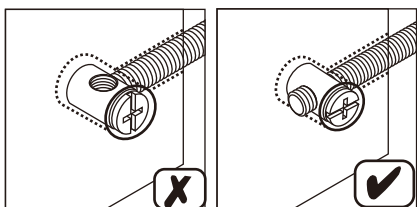

1.

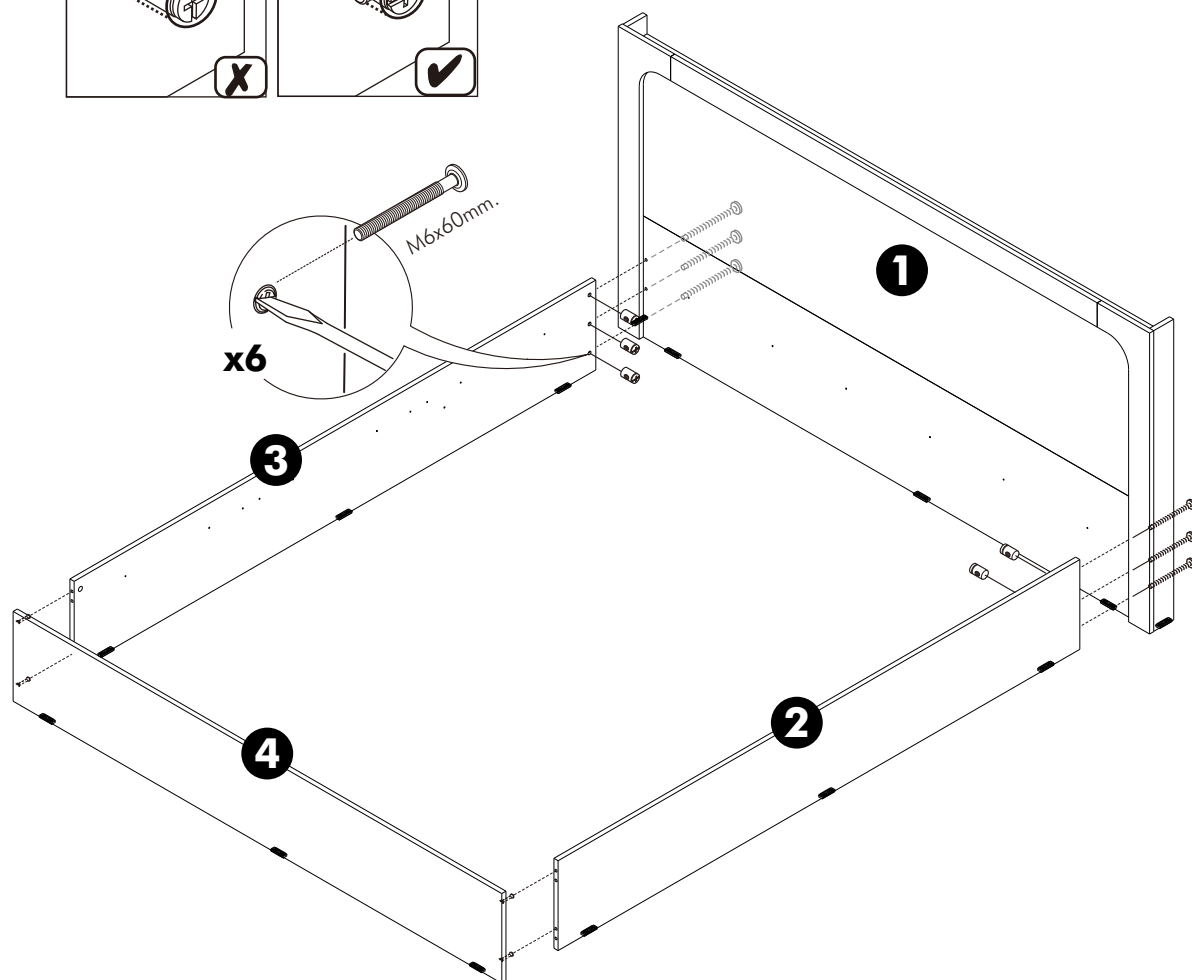

2.

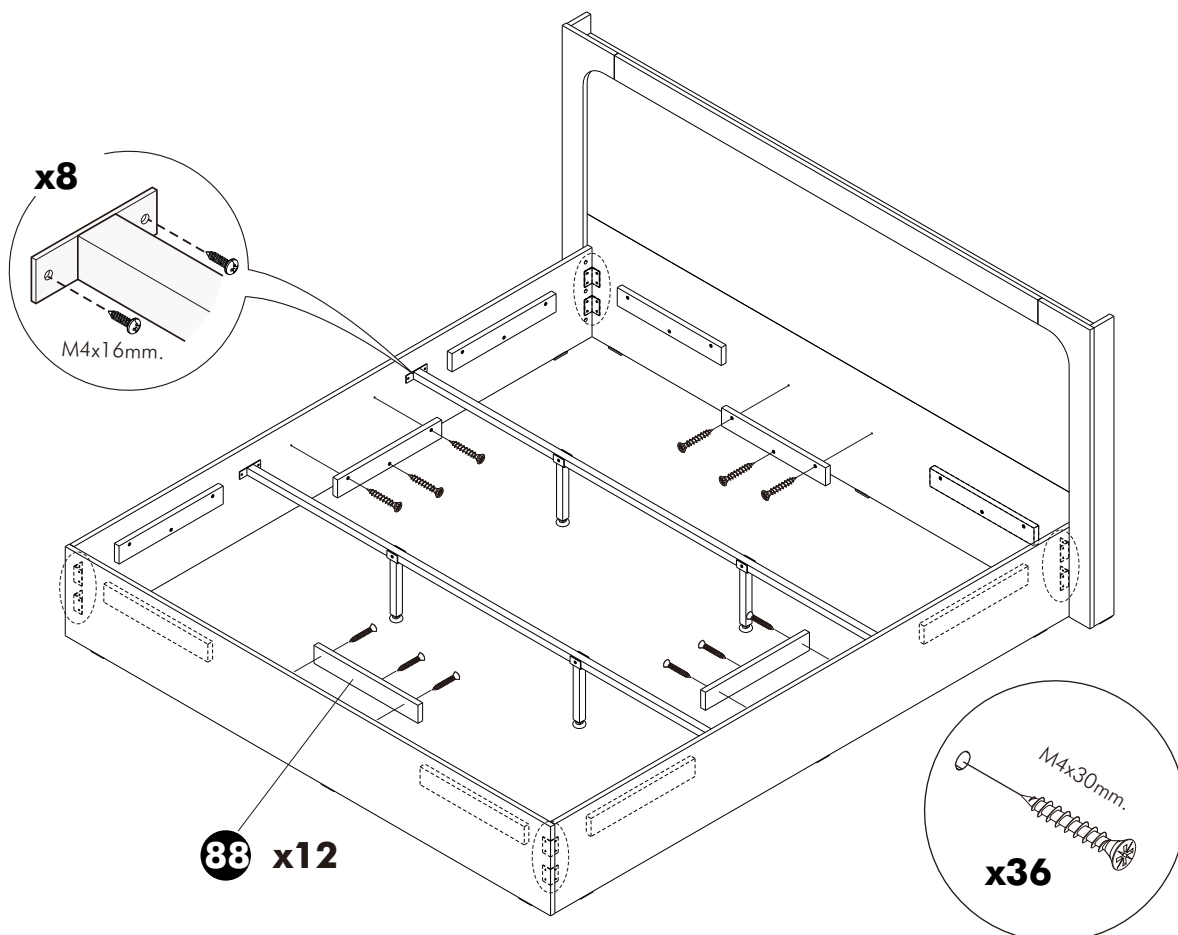

3.

