



VERMONT

DAYBED 3 FT.

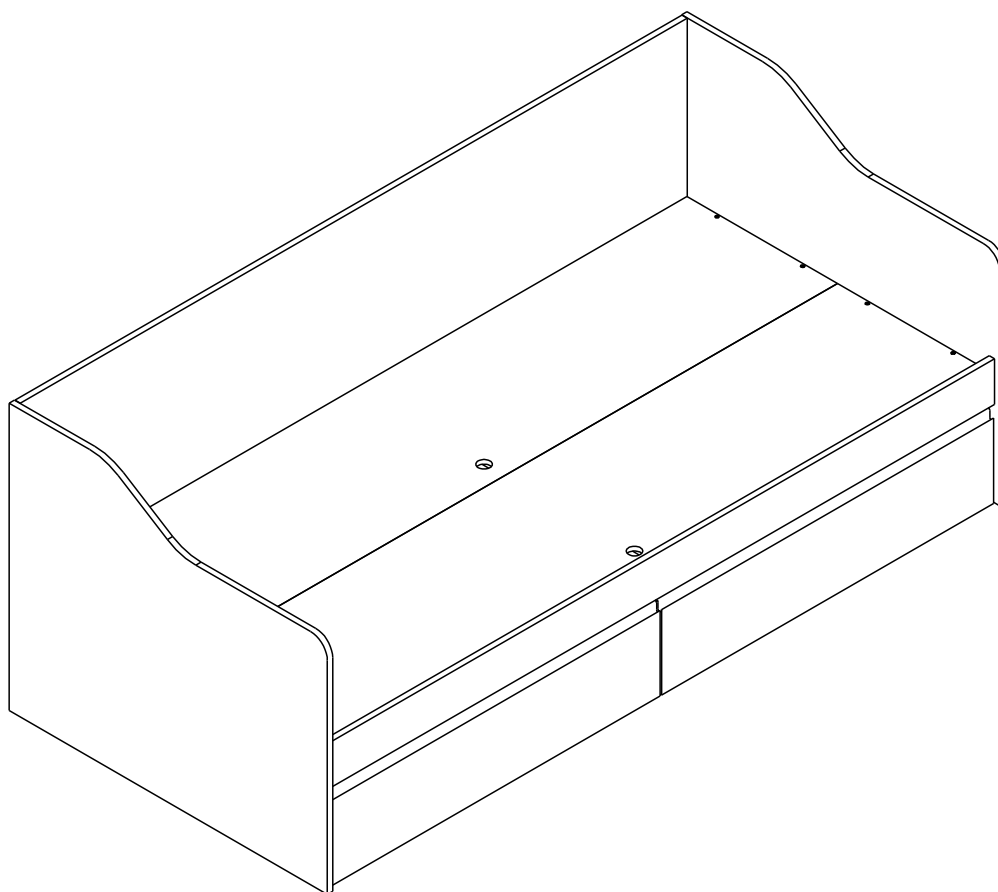

HARDWARE


-BODY SET




x 10




x 10



x 9



x 6




x 9




M4x16mm.

x 18




M4x16mm.


x 24

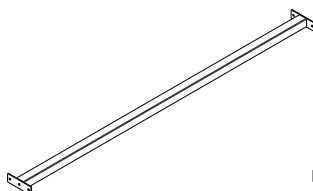

x 2

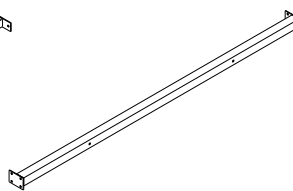


x 2

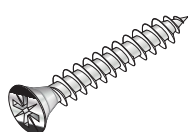


M4x35mm.

x 4



M4x30mm.

x 8




M4x25mm.

x 6



M4x13mm.


x 20



M4x30mm.

x 12

-DRAWER SET



x 10



x 4




M3.5x13mm.

x 20



M6x25mm.

x 10

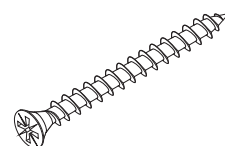

M4x50mm.

x 44

CONNECT SYSTEM

1

2

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

↑

CORRECT

✗

WRONG

M4x16mm.

OUT

IN

M4x16mm.

i

40mm.

✗


EQ

✓


P+M4x16mm.

ASSEMBLY

-BODY SET

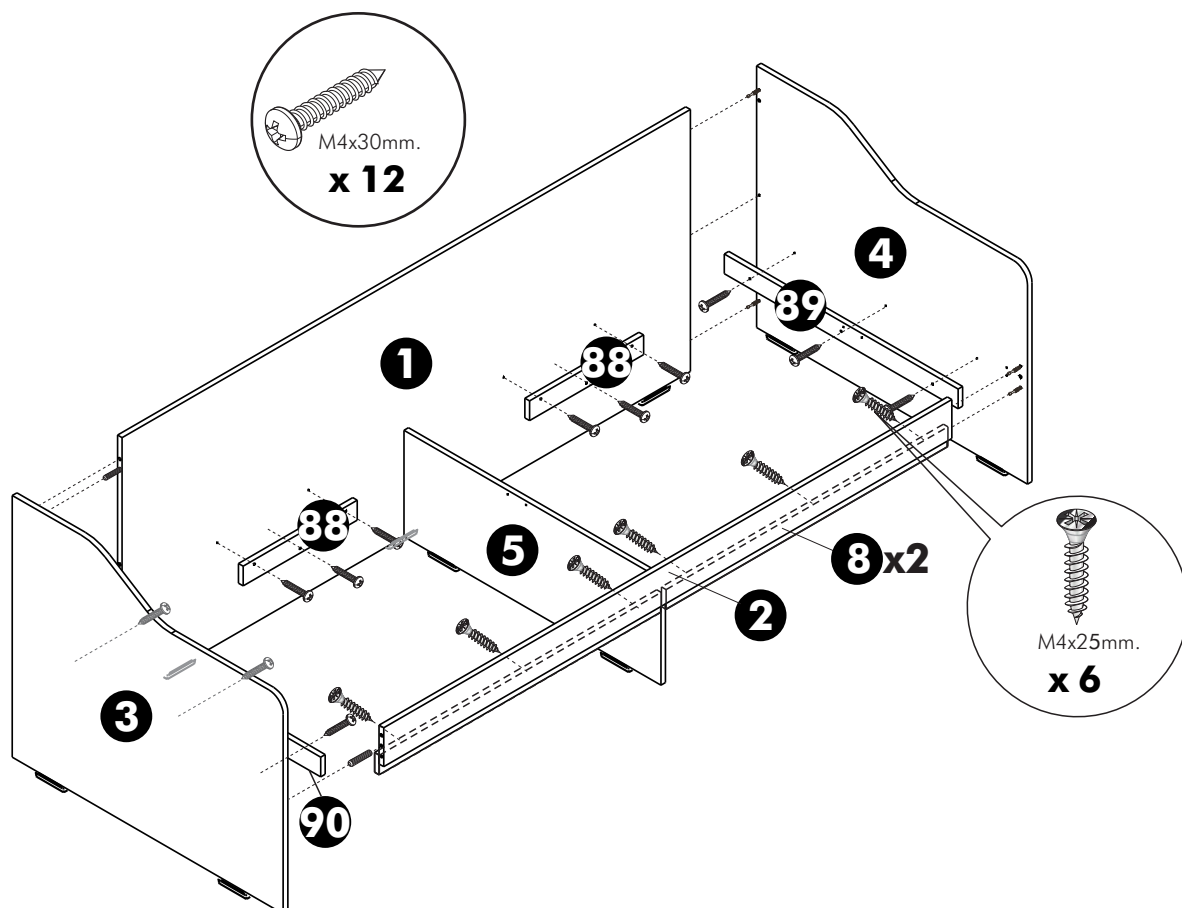

2.


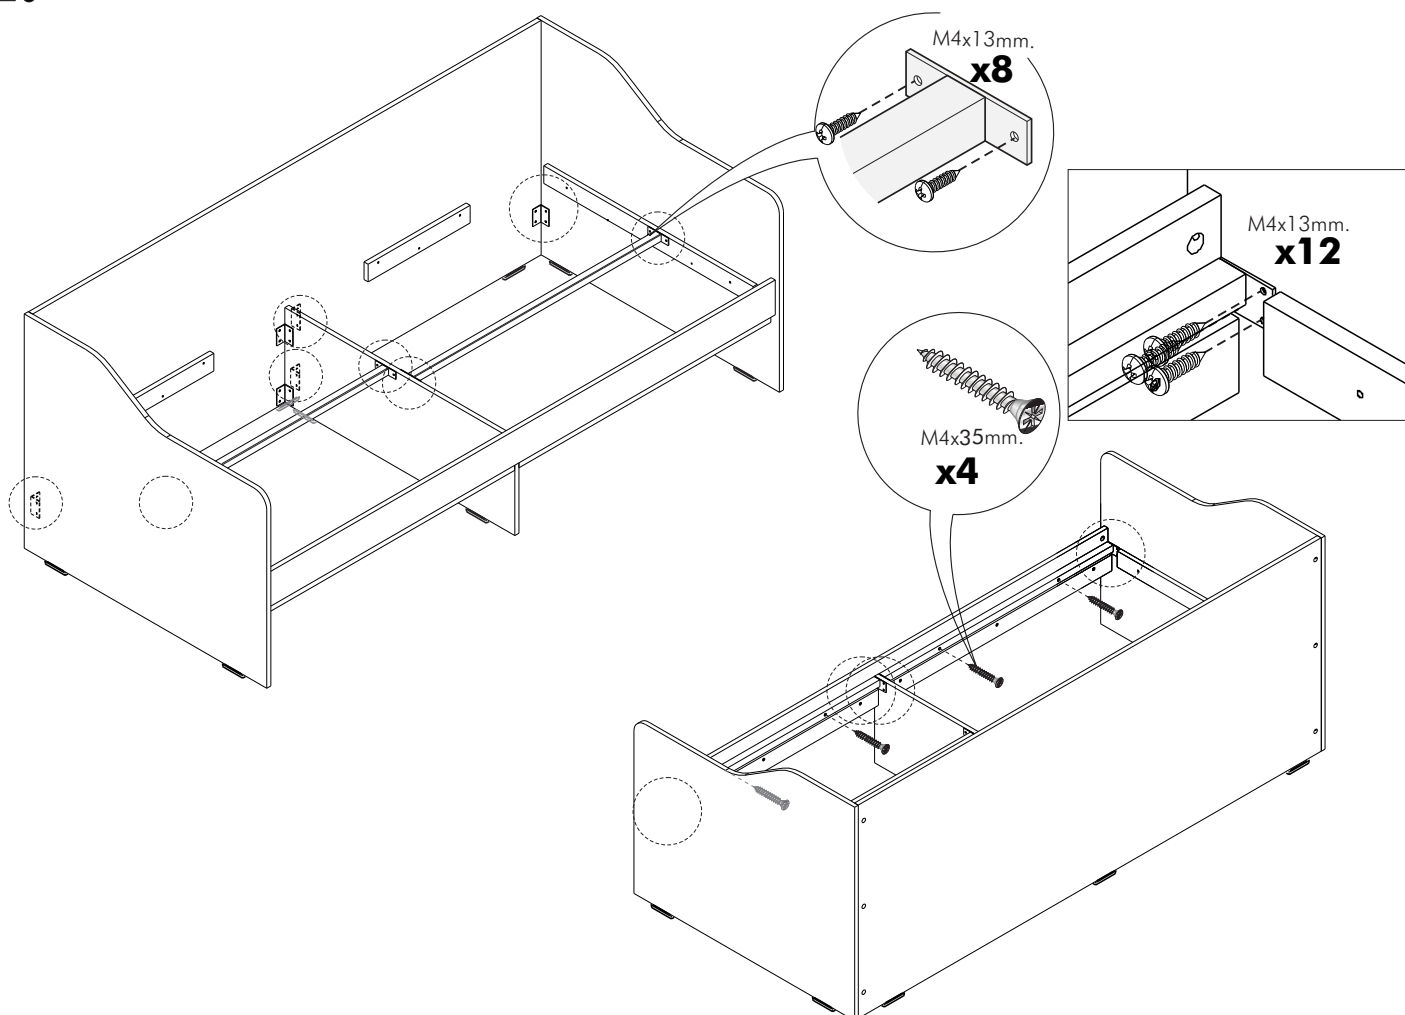


ASSEMBLY

-DRAWER SET


2 SET.

1.

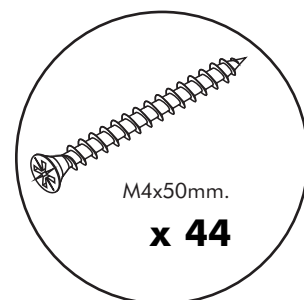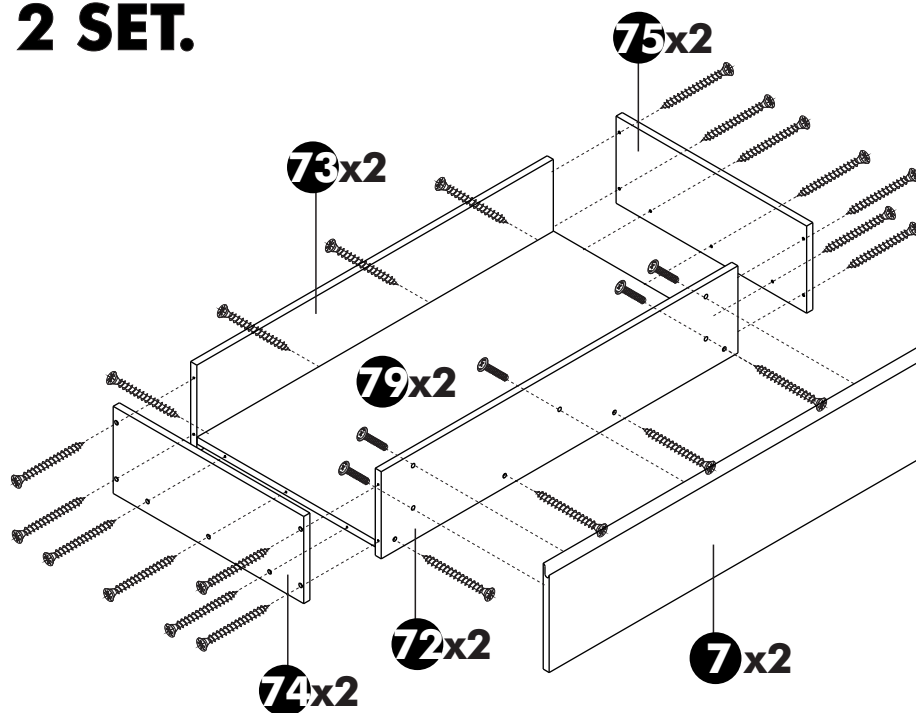

2.

2 SET.

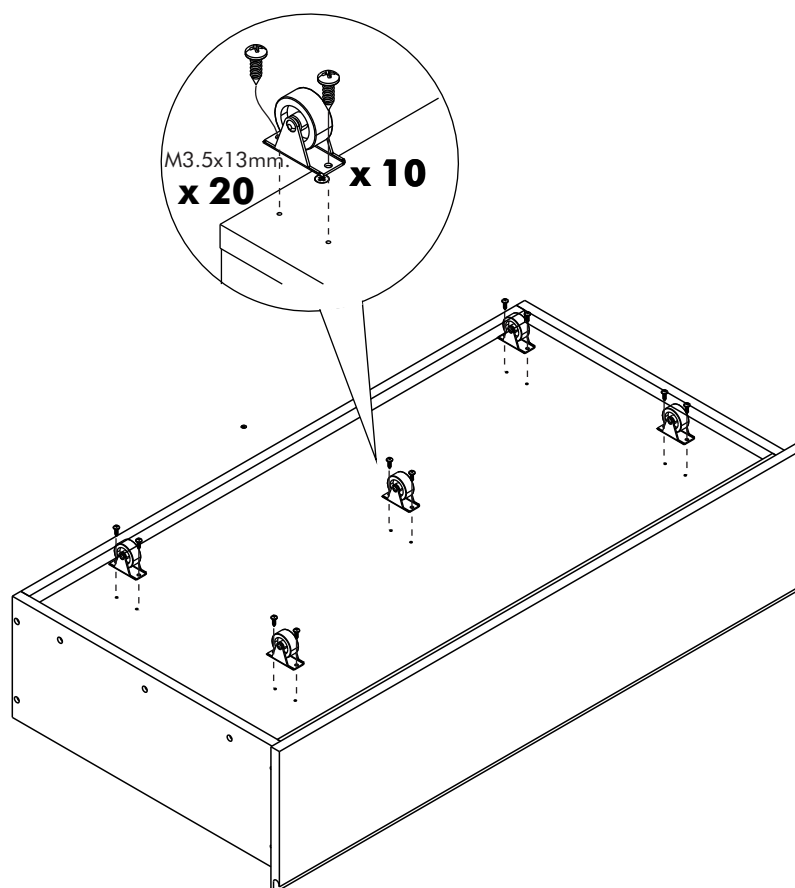

3.

