


VERMONT

DAYBED 3 FT.

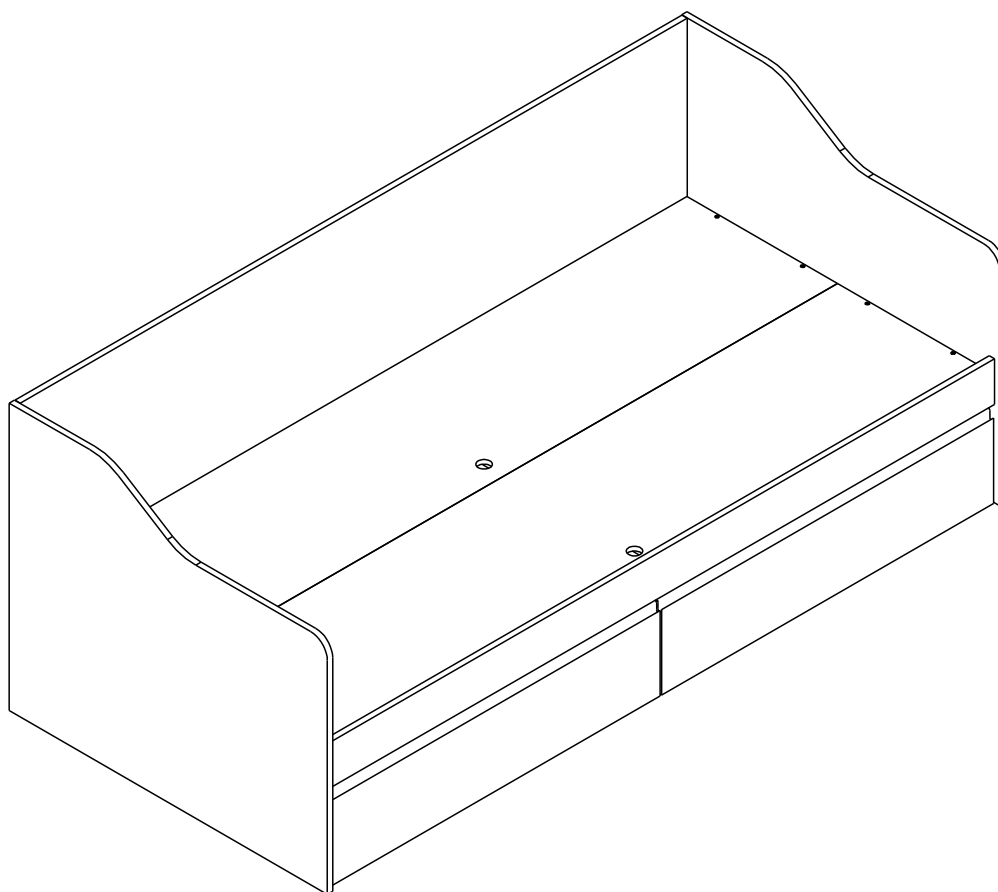

CONNECT SYSTEM

1

2

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

↑

CORRECT

✗

WRONG

M4x16mm.

i

40mm.

✗

EQ


✓

P+M4x16mm.

2

HARDWARE


-BODY SET




x 10




x 10



x 9



x 6




x 9




M4x16mm.

x 18




M4x16mm.


x 24

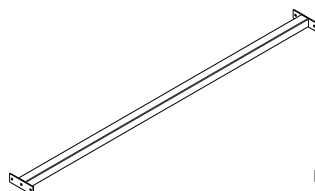

x 2

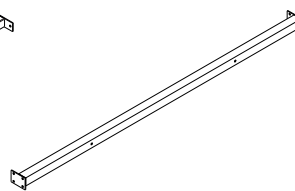


x 2

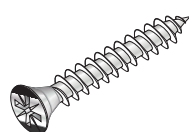


M4x35mm.

x 4



M4x30mm.

x 8



M4x25mm.


x 6



M4x13mm.

x 20

-DRAWER SET



x 10



x 4




M4x13mm.

x 20



M6x25mm.

x 10

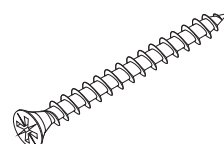


M4x50mm.


x 44

ASSEMBLY


-BODY SET

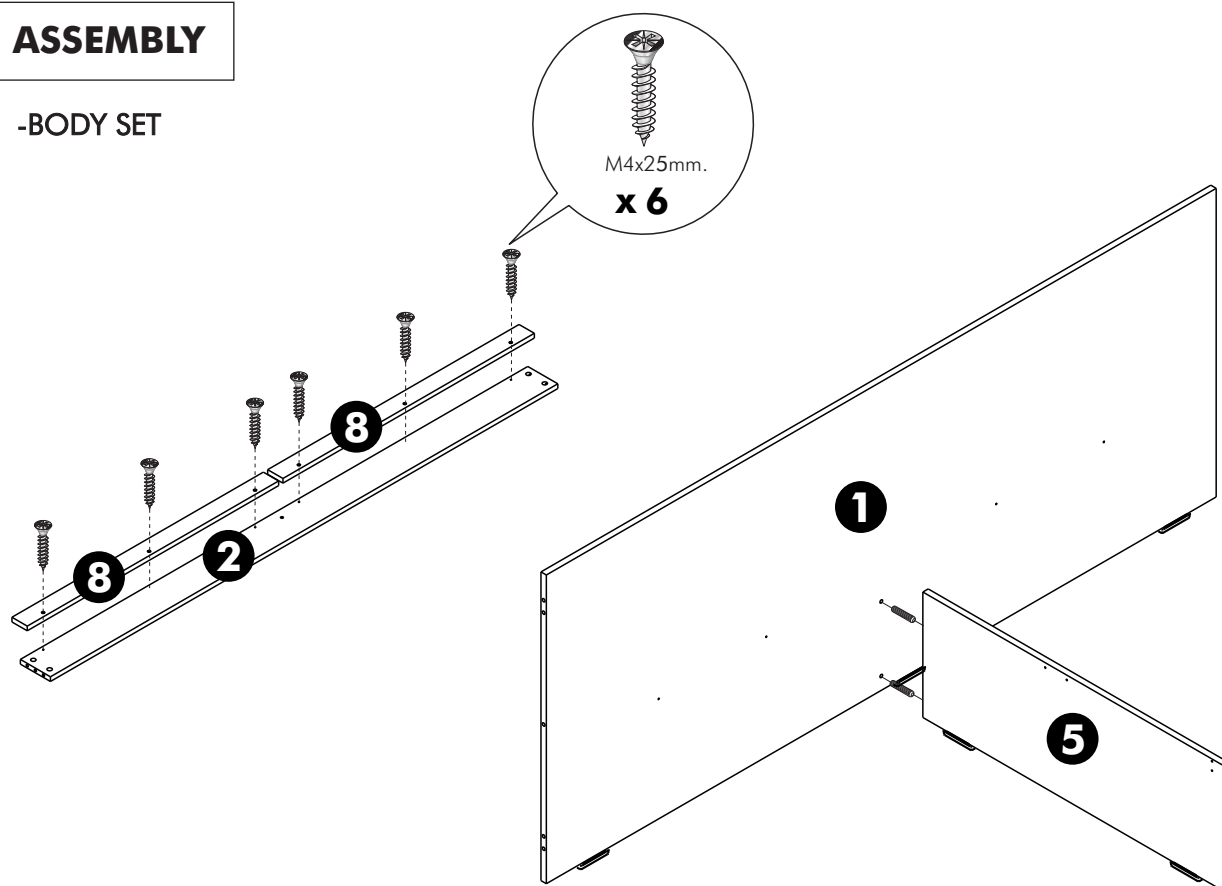

2.

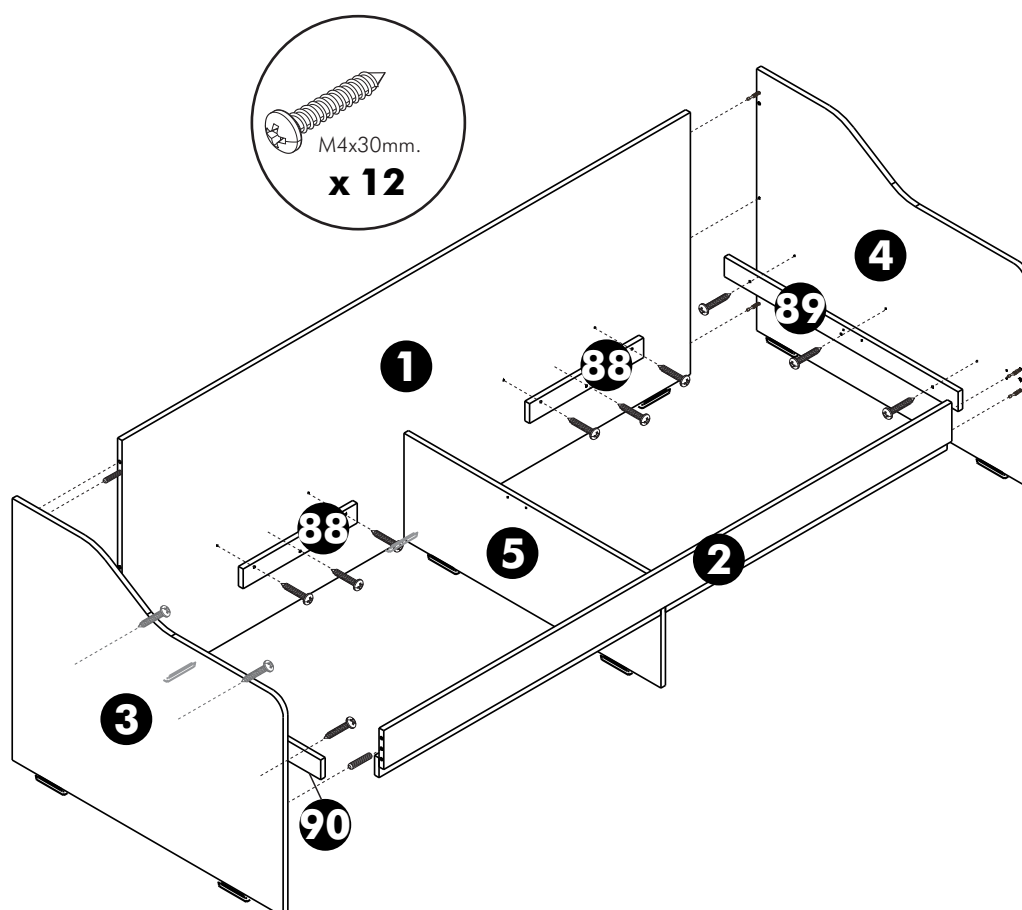

3.

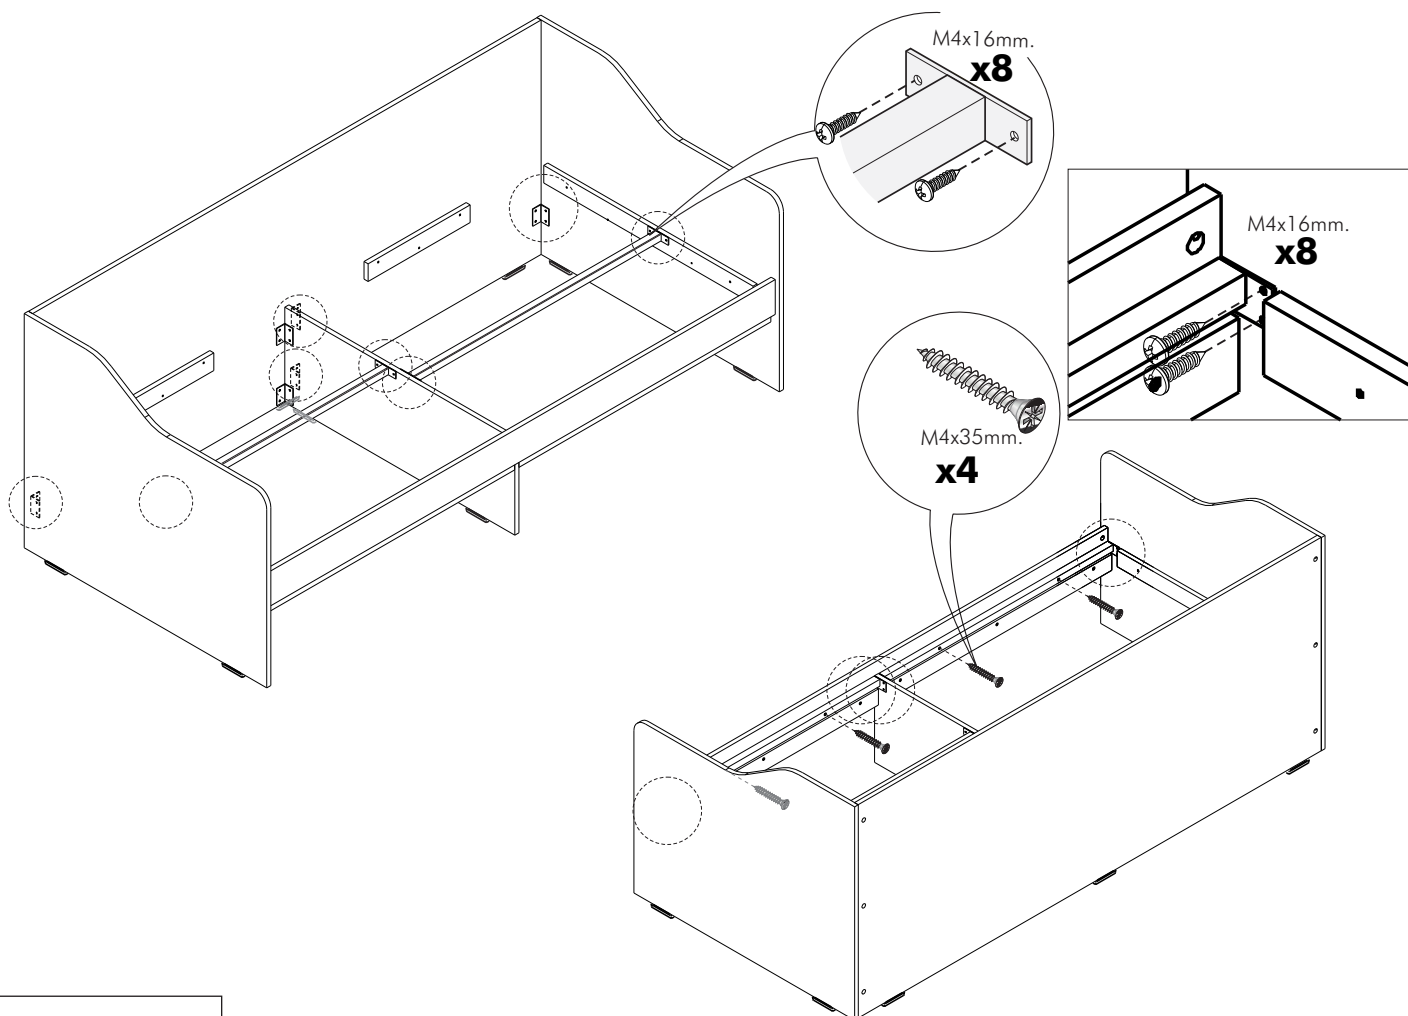


ASSEMBLY

-DRAWER SET


2 SET.

1.

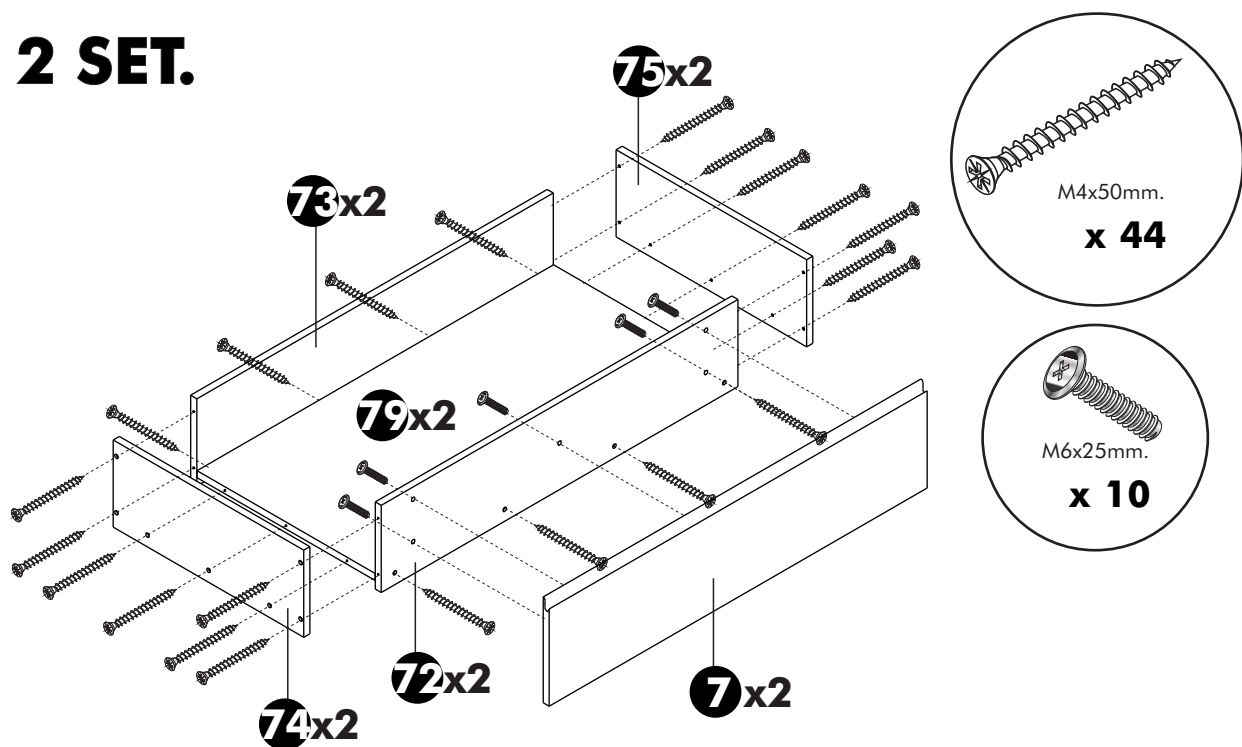

2.

2 SET.

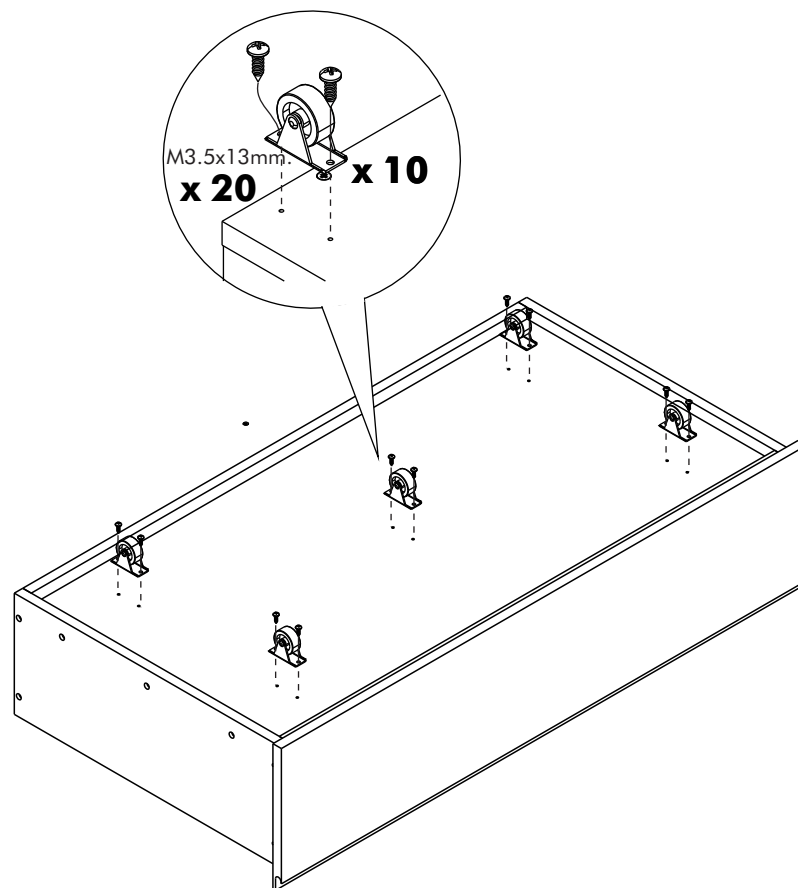

3.

