



CHAMP M01

BED 6 ft.

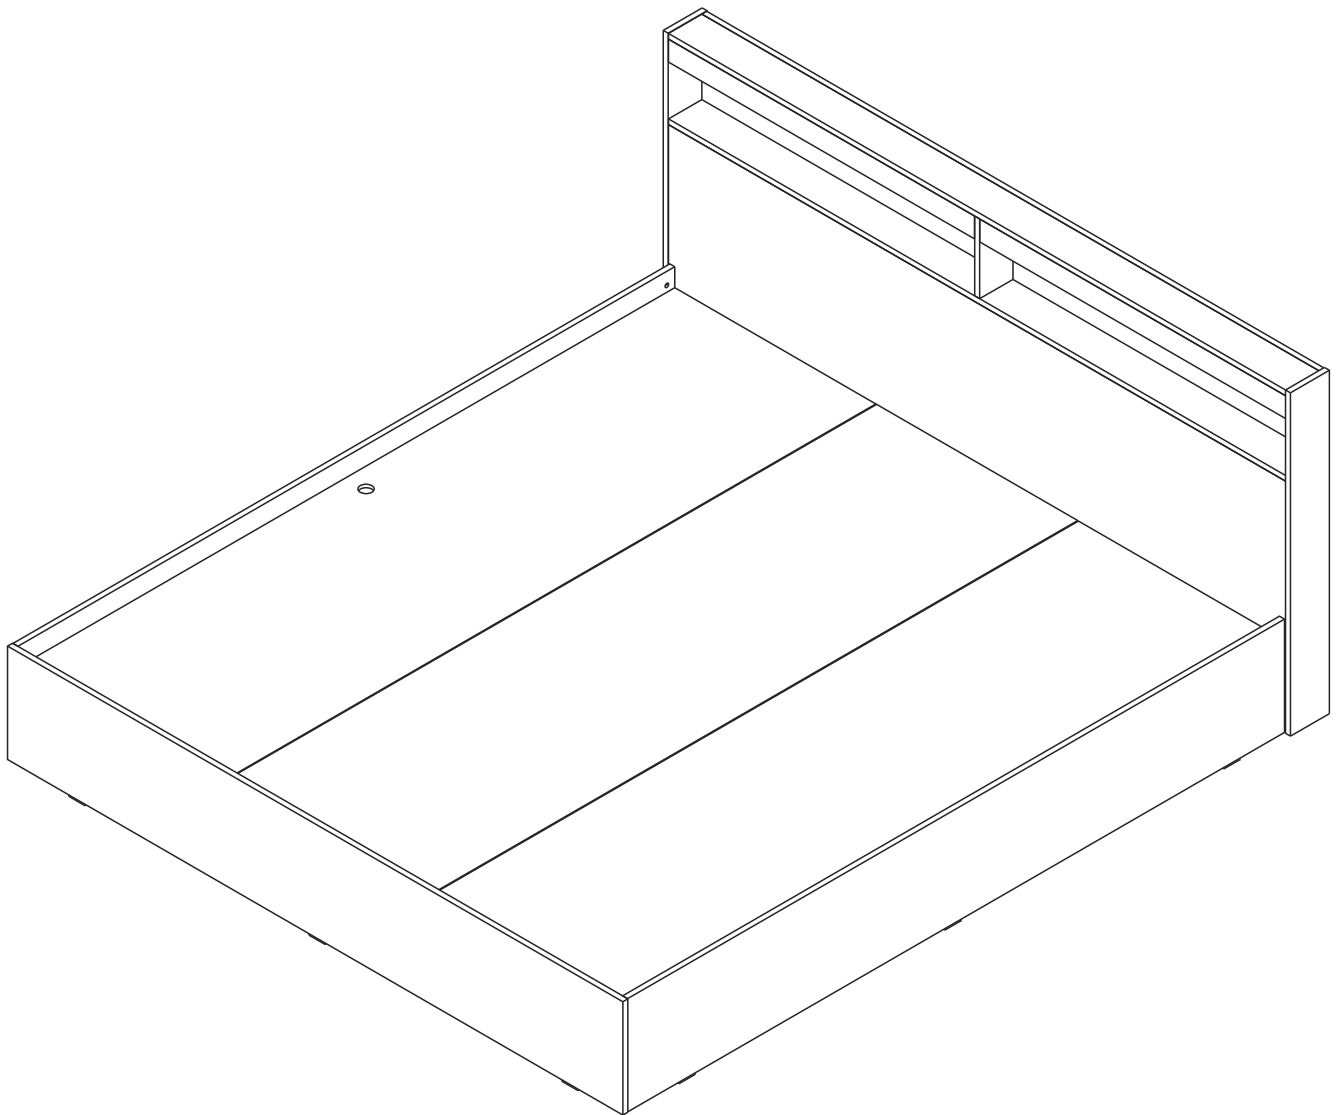


CONNECT SYSTEM


1

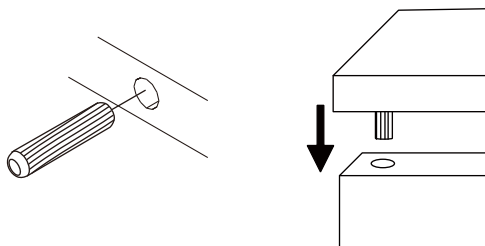








2



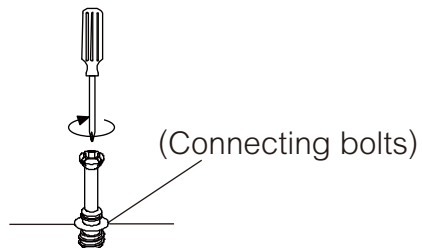


3

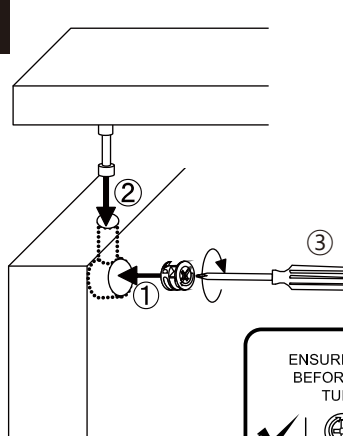


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

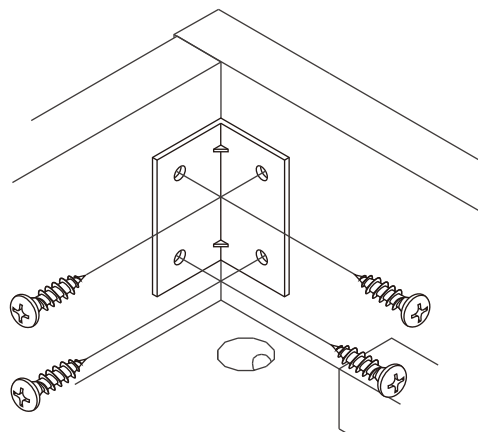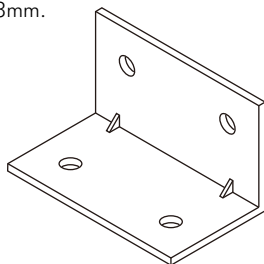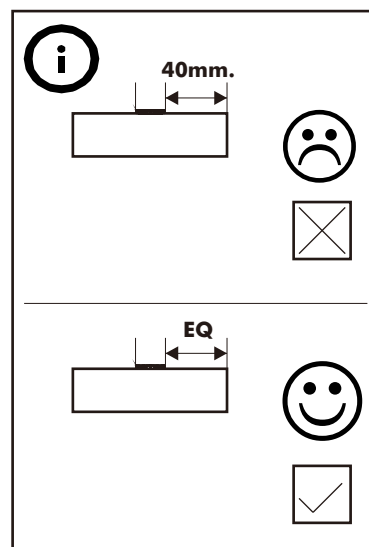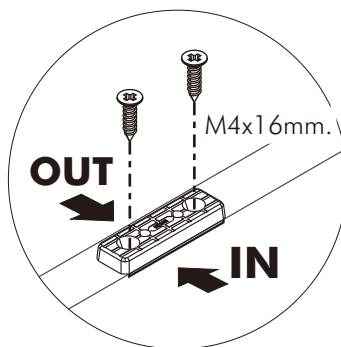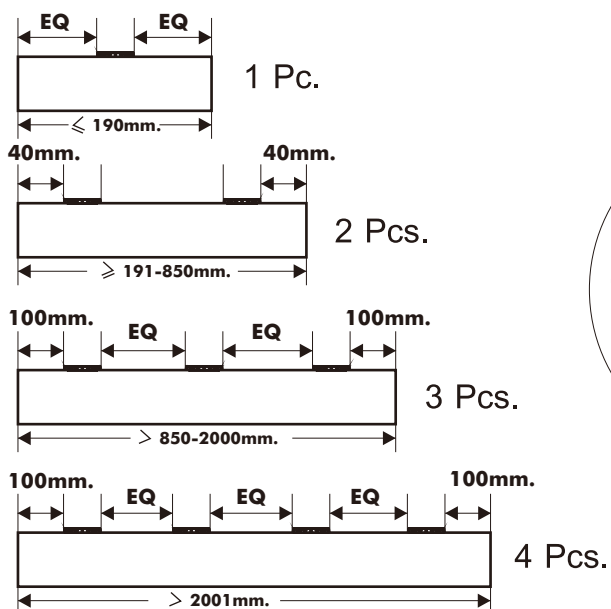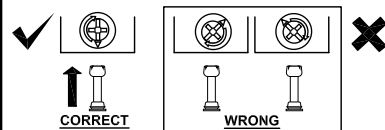

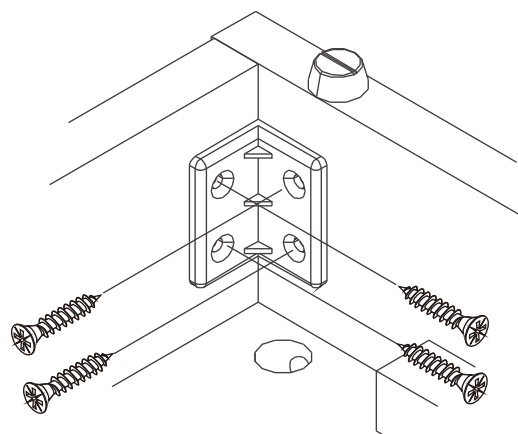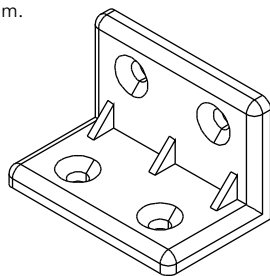


HARDWARE


-BODY SET



x 4

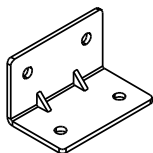

x 8

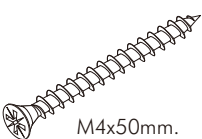

x 9




16mm.

x 4




No.1

x 3



#8x35

x 26

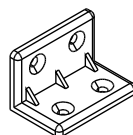

x 29




M4x16mm.

x 3



M4x16mm.

x 170




x 27



M4x30mm.

x 30

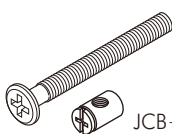


JCB+M6x60

x 4



M4x13mm.

x 32

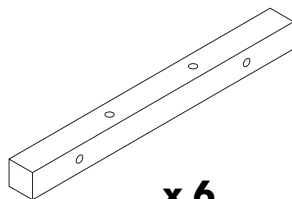


x 6


ASSEMBLY

-BODY SET


1.

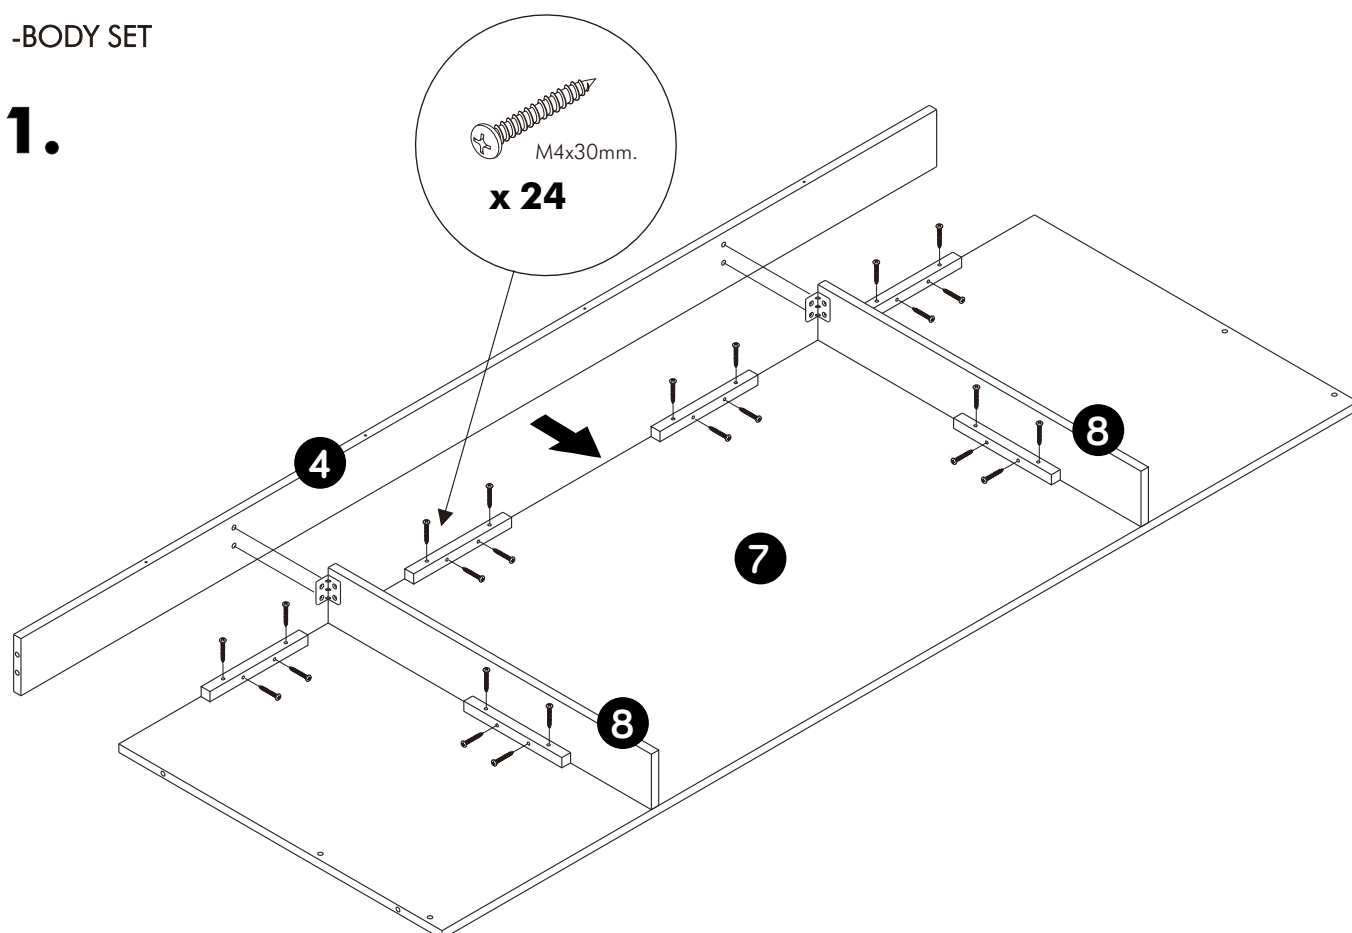


2.

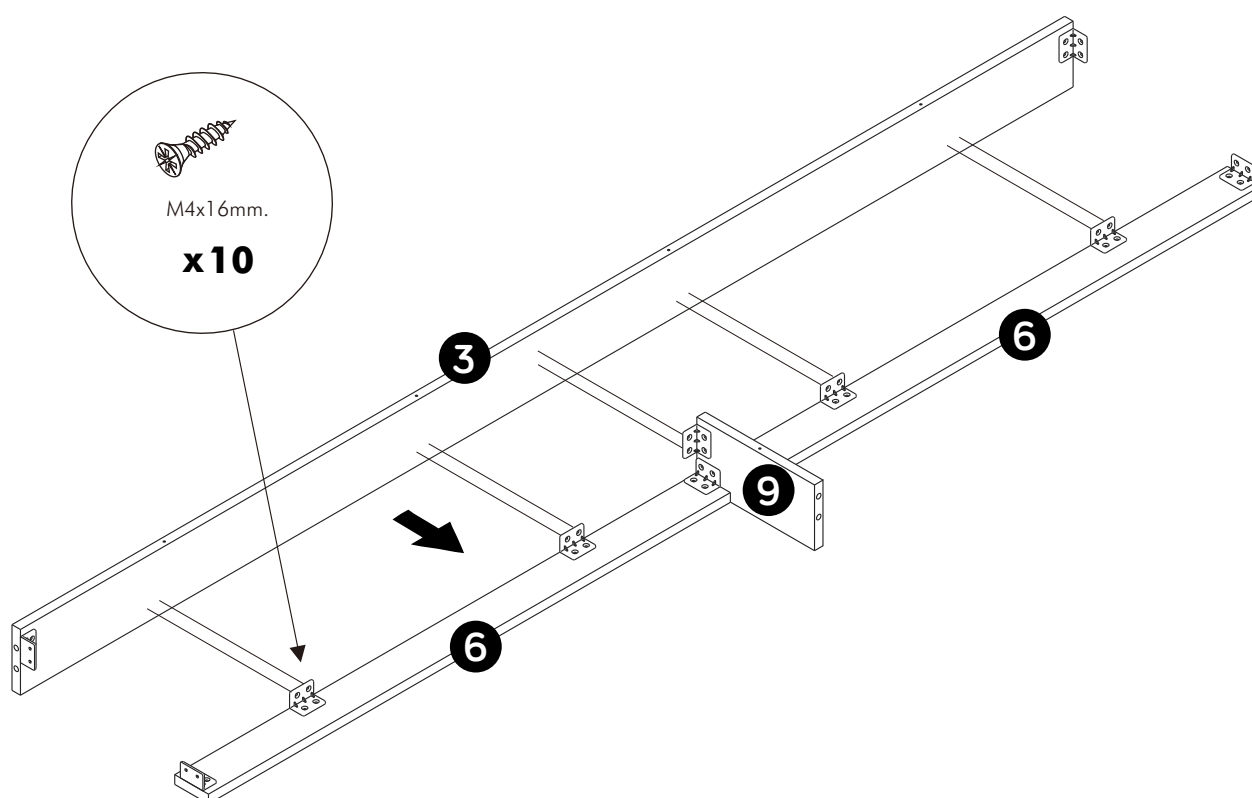


3.

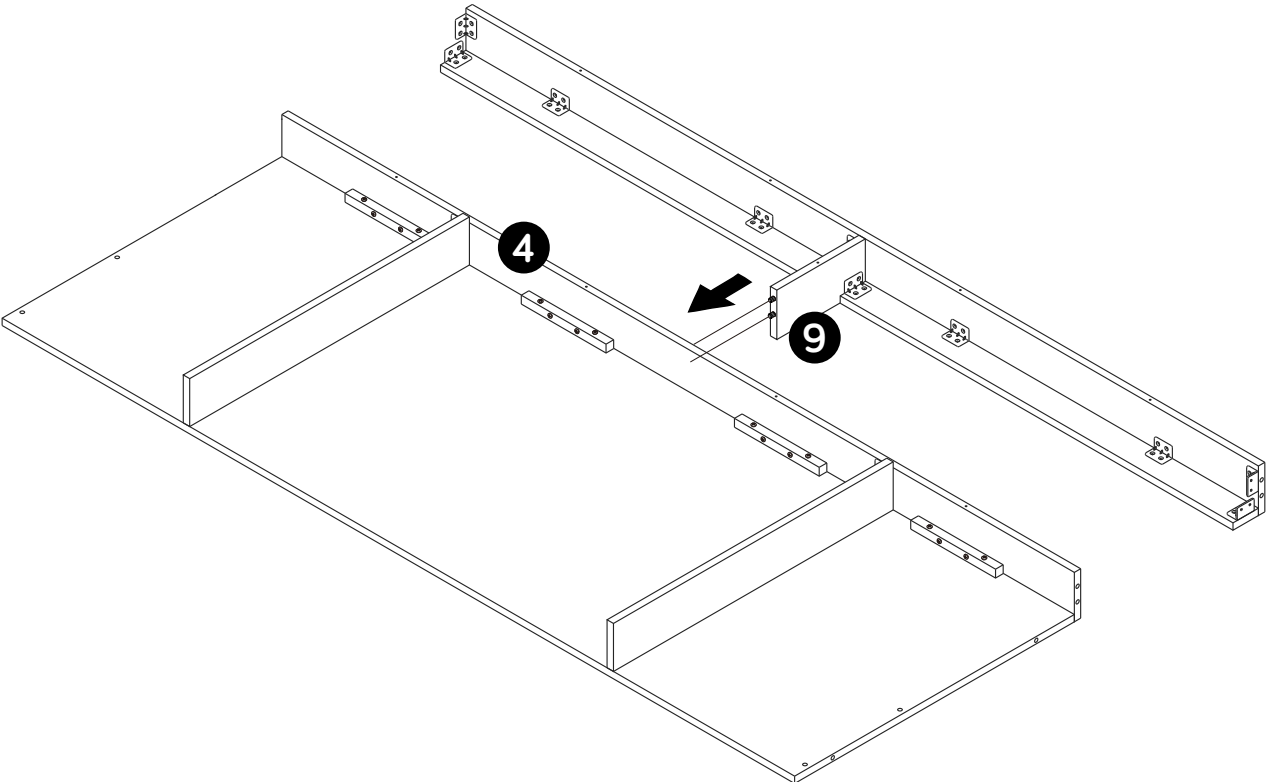


4.

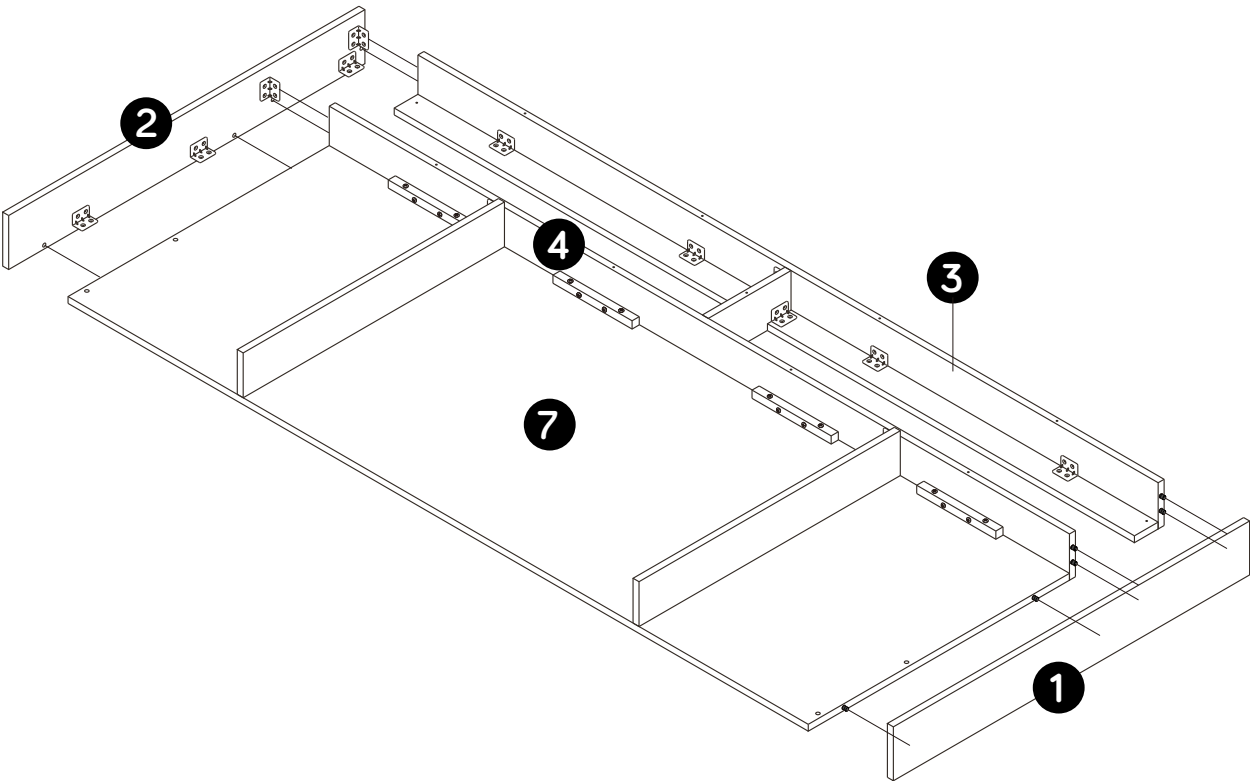


5.

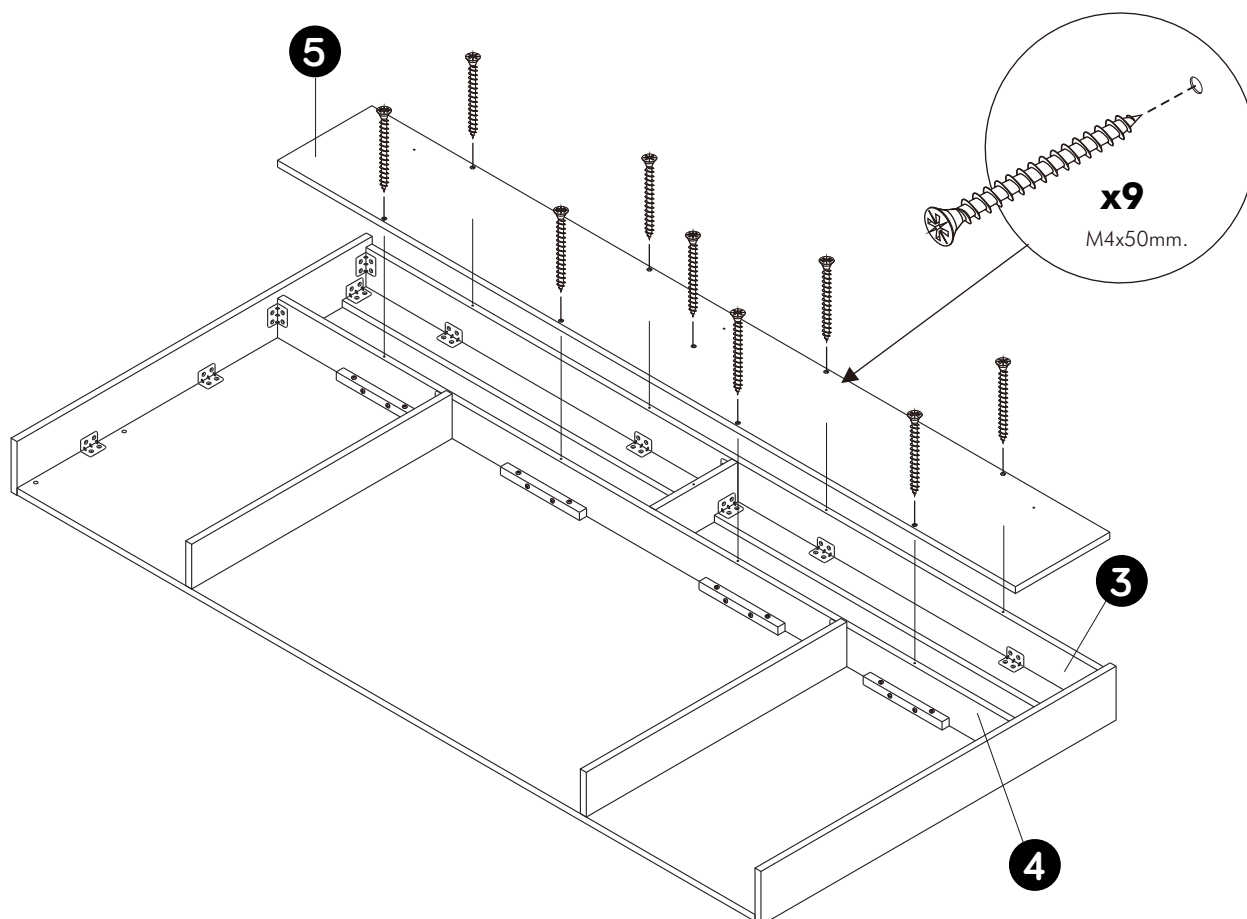


6.

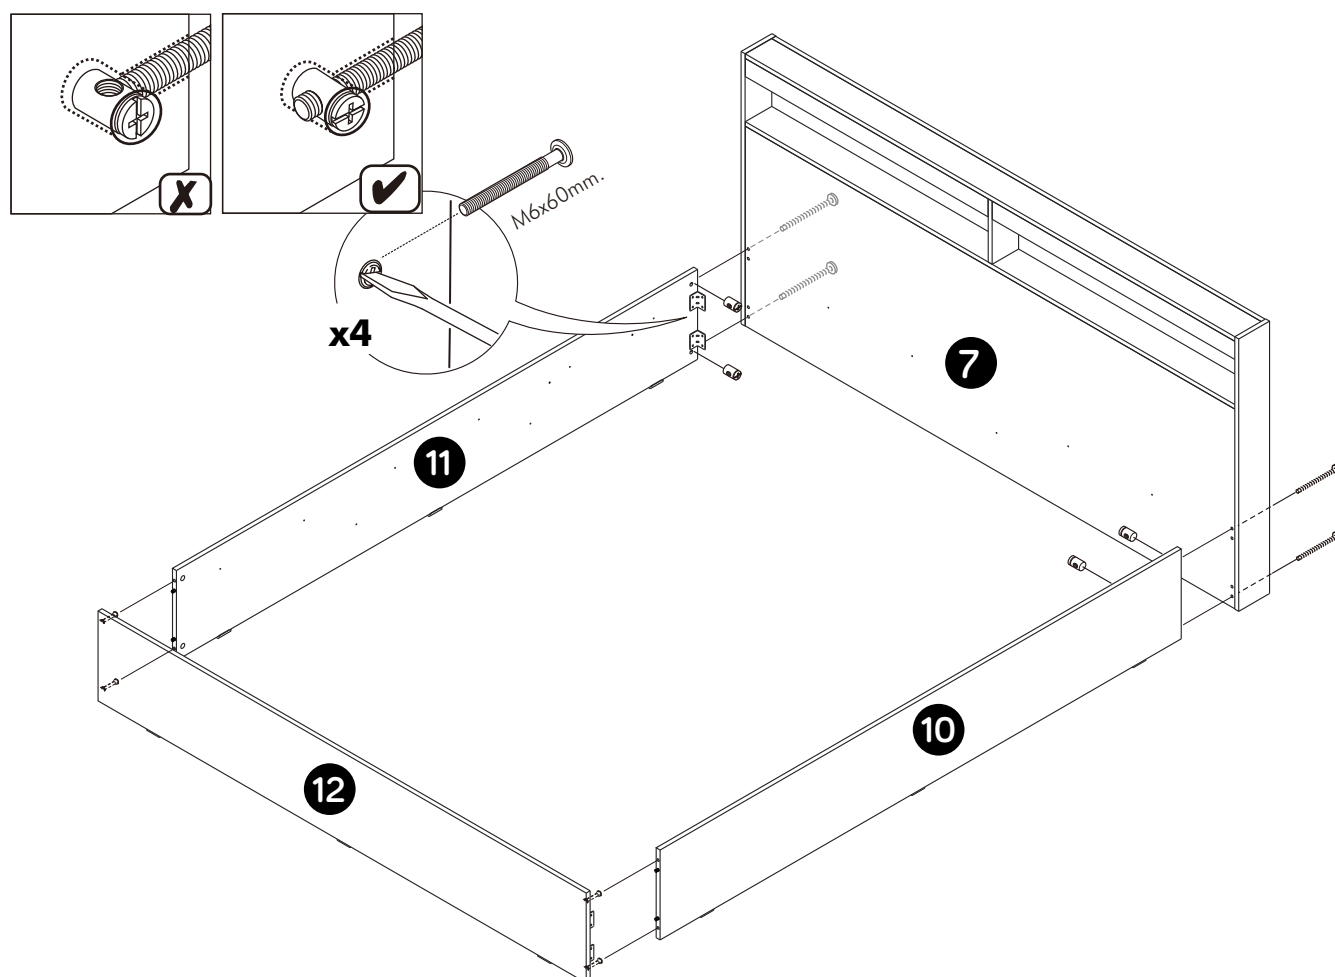


7.

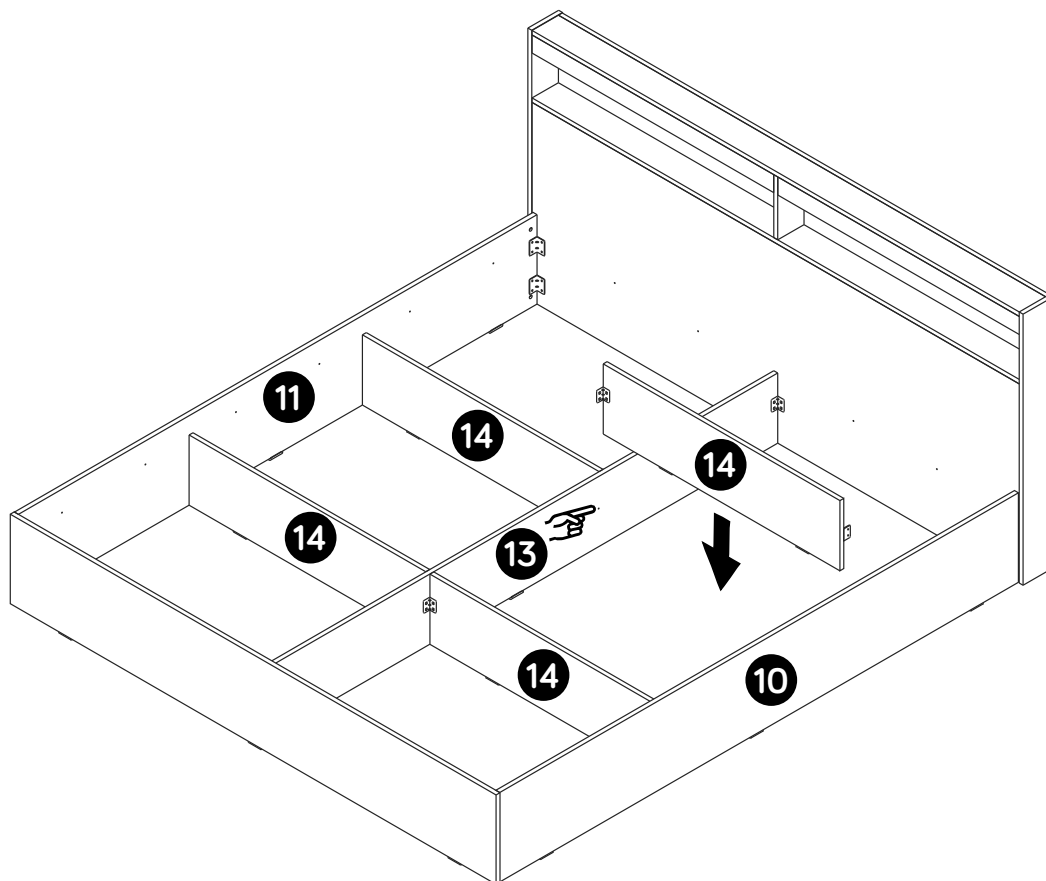

8.

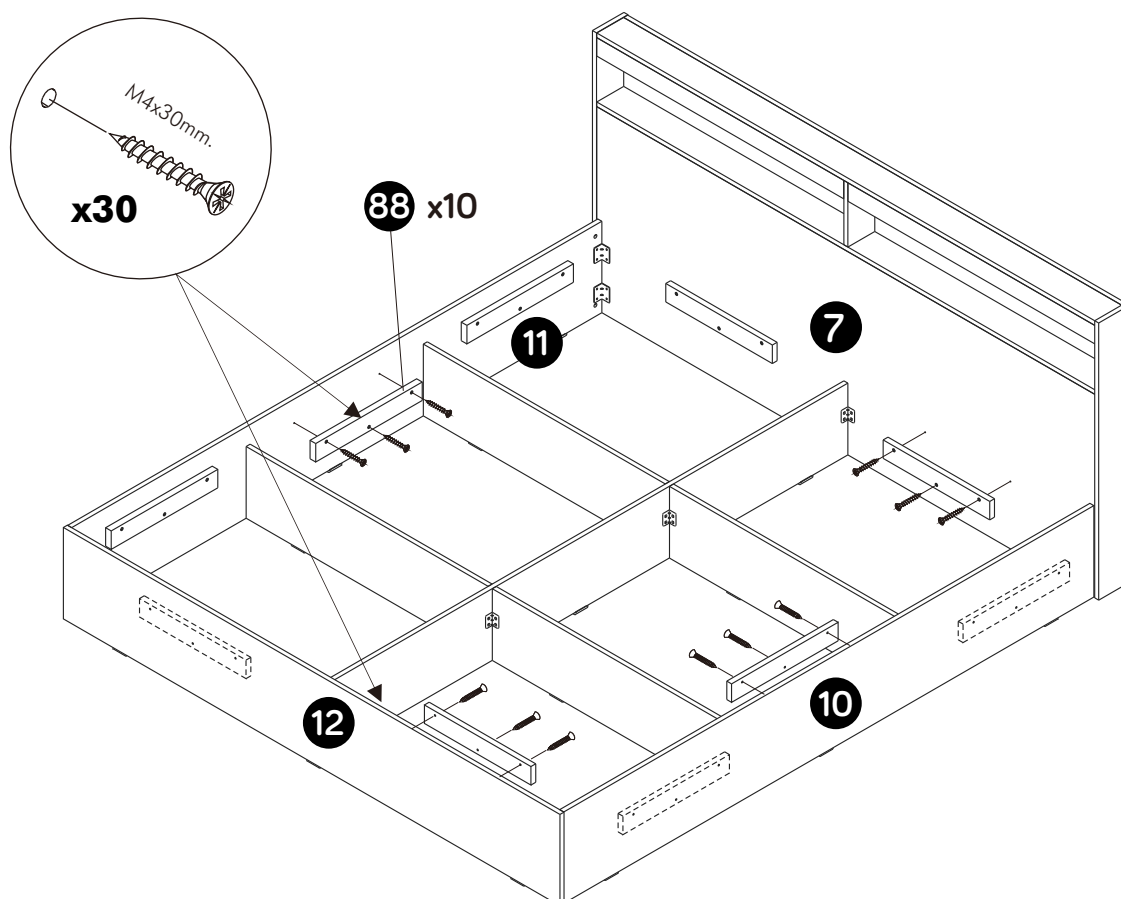

9.

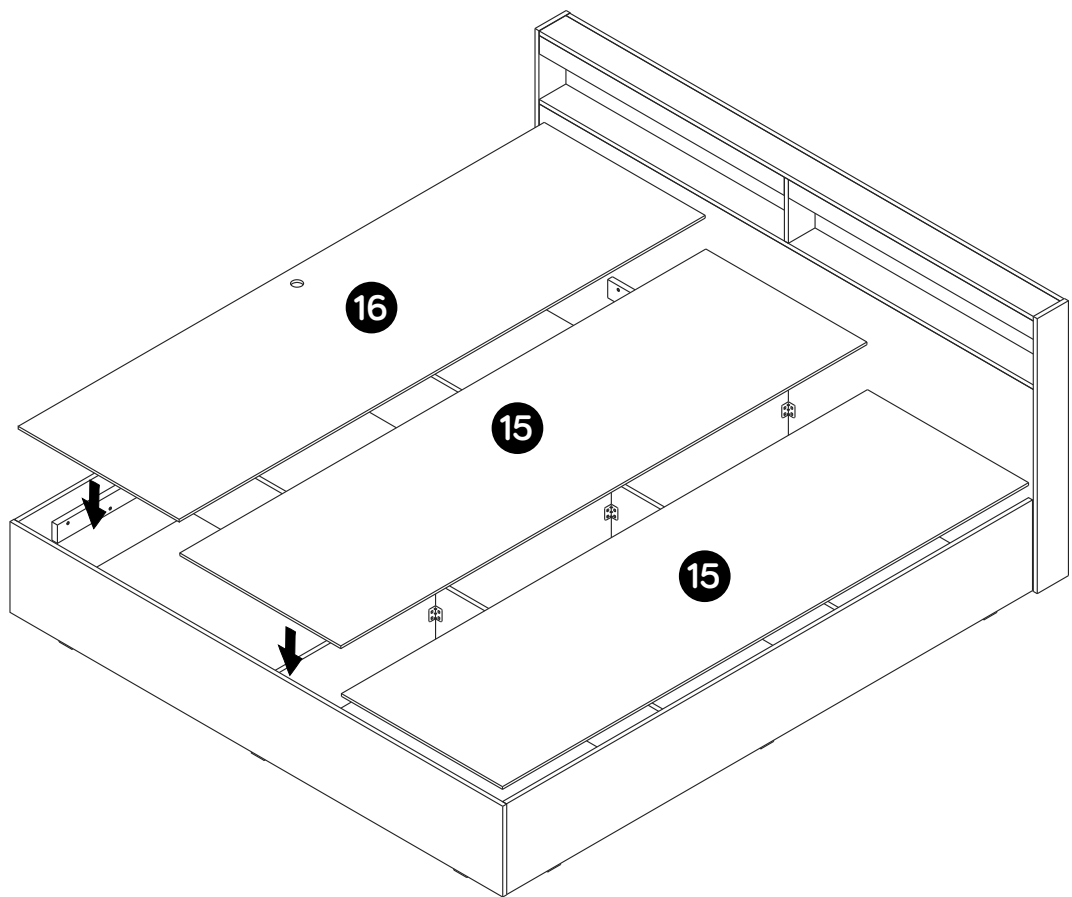

10.

