


ROTTERDAM

BED 6 ft.

BED 5 ft.

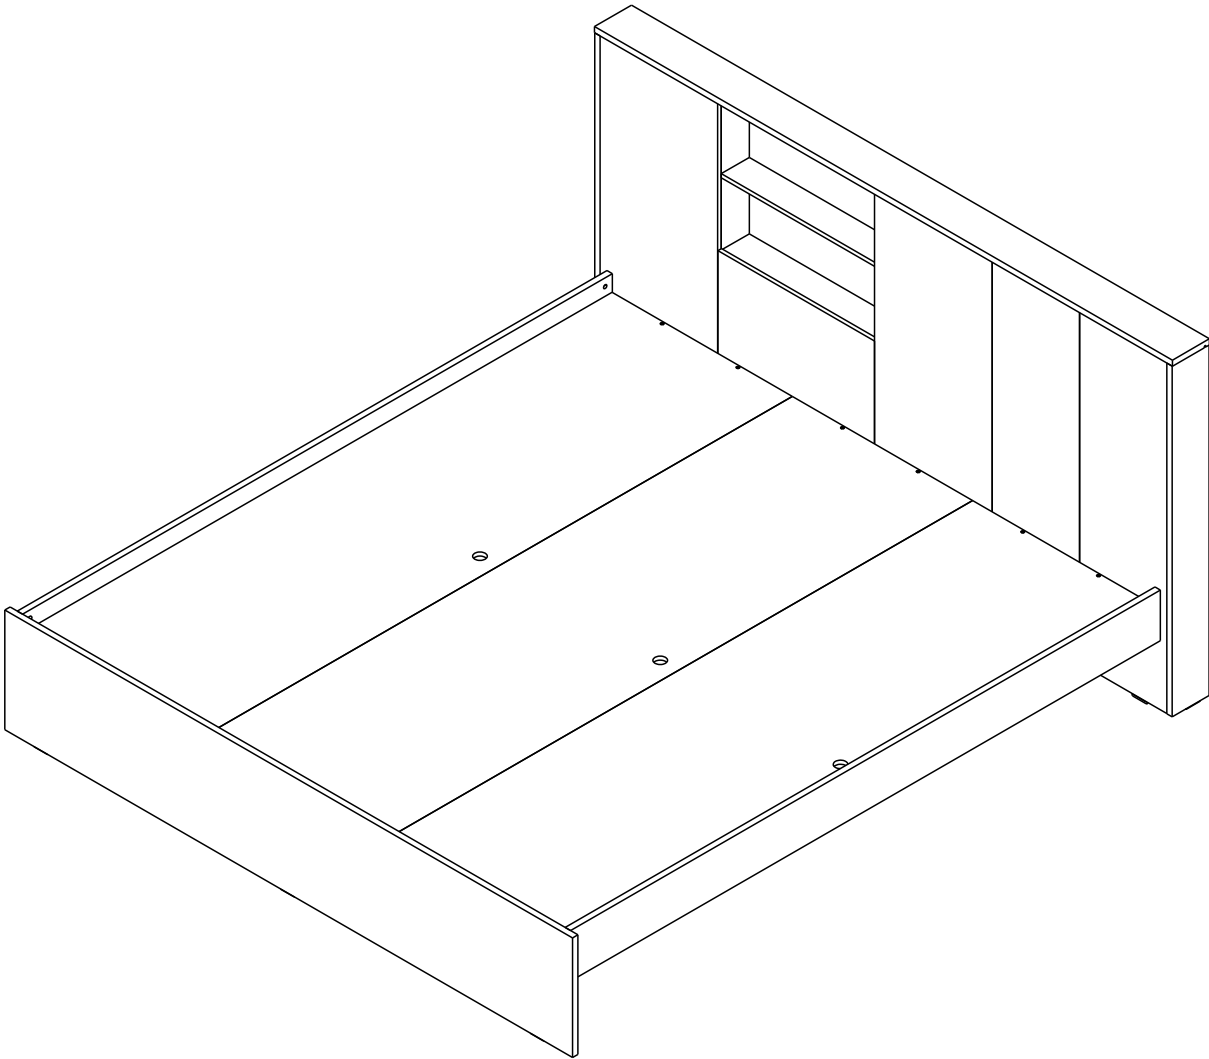

CONNECT SYSTEM

1

3

2

(Connecting bolts)

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
↑				
CORRECT		WRONG		

M6x45mm.

M6

M6

M4x16mm.

M4x16mm.

i

40mm.

☹️

☒


EQ

☺️

☑️

HARDWARE


-BODY SET



x 4




x 4




#8x35

x 8

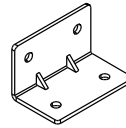

x 4



x 11



x 3




M6

x 4



M6

x 4



M4x30mm.

x 39



M4x16mm.

x 22




M4x25mm.

x 9




M4x13mm.

x 16




M4x16mm.

x 11



M6x45

x 4



M6x60


x 4




ASSEMBLY

-BODY SET


1.

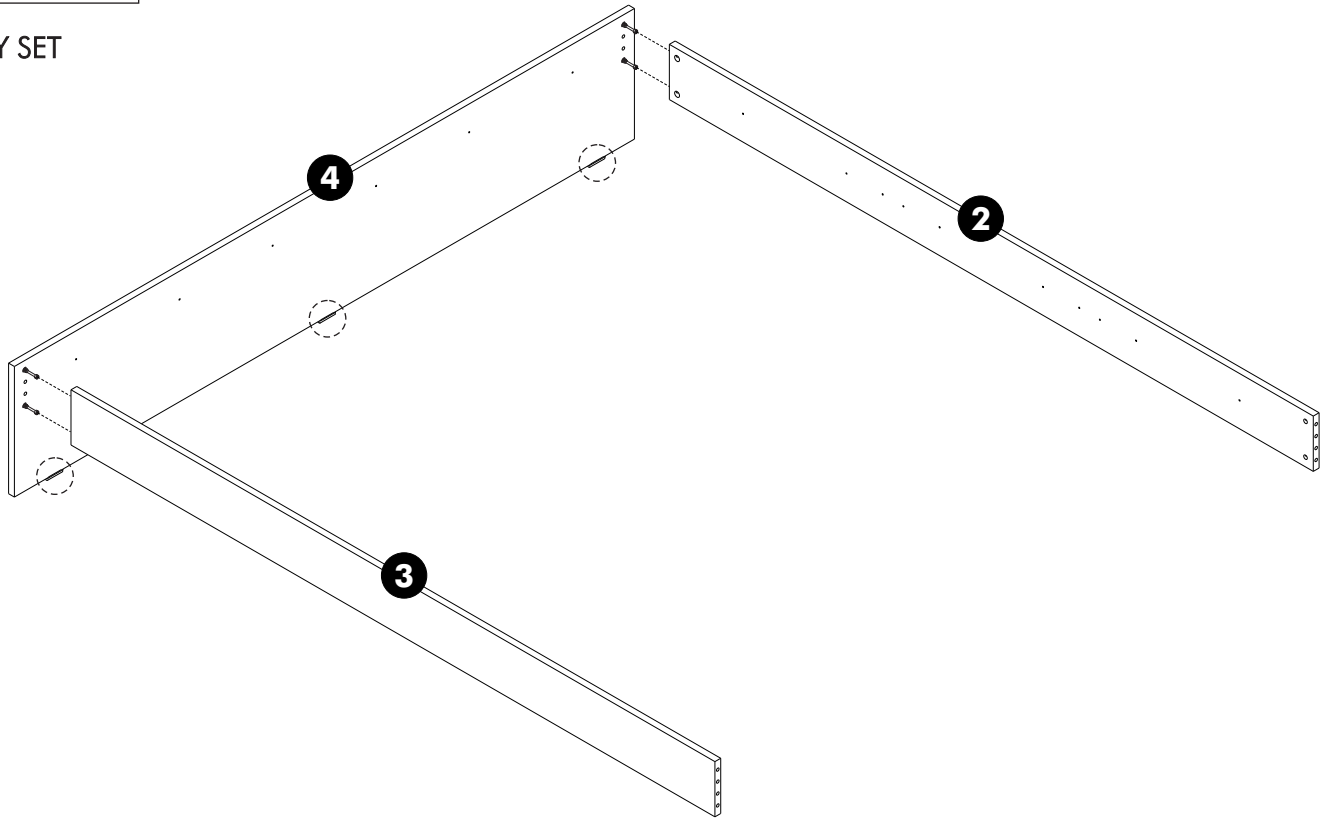


2.

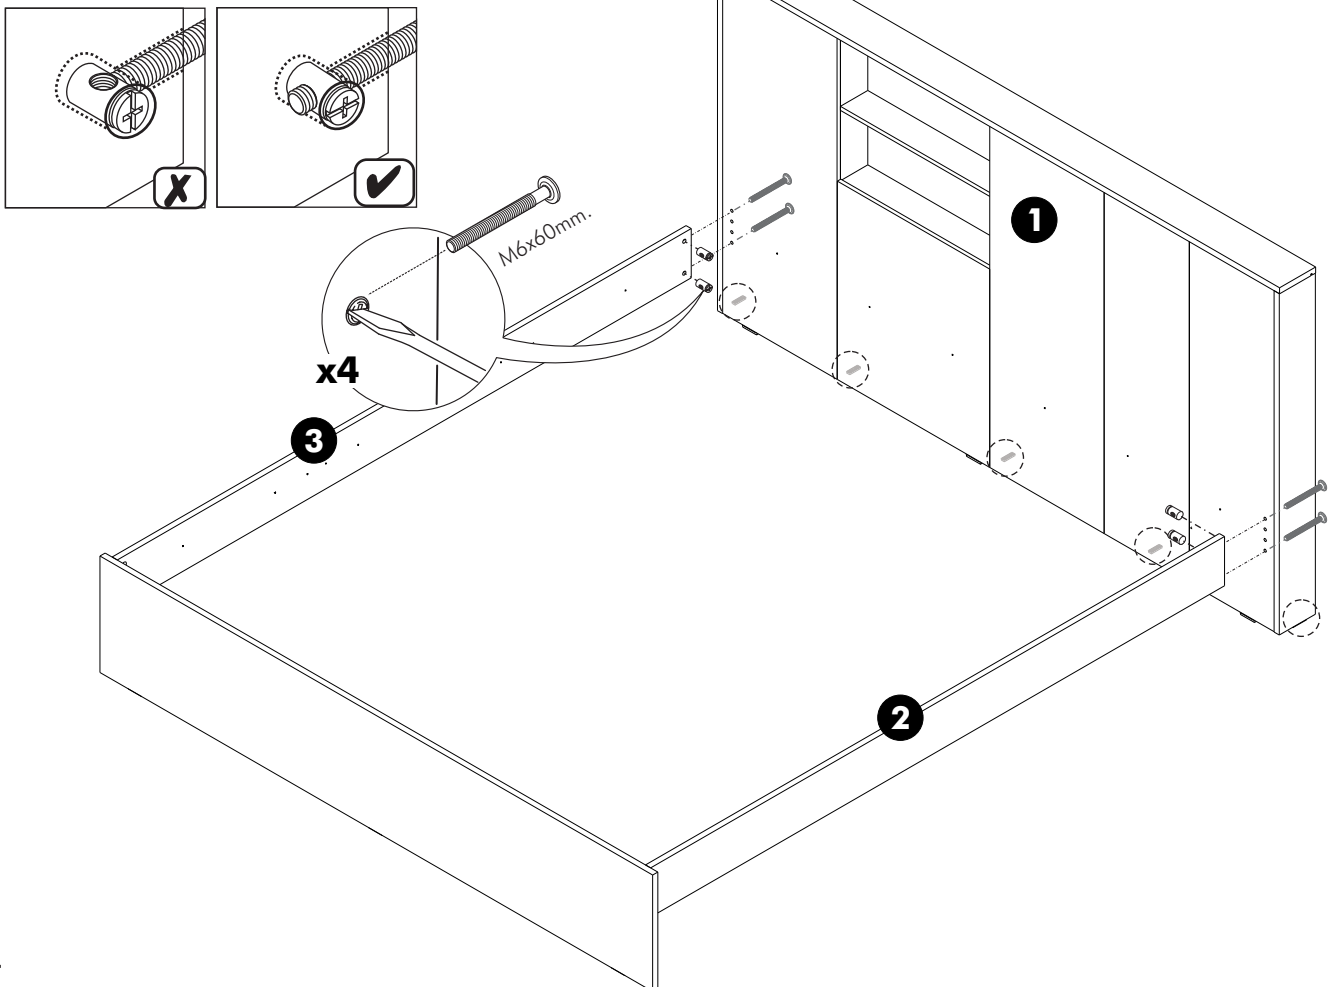

3.

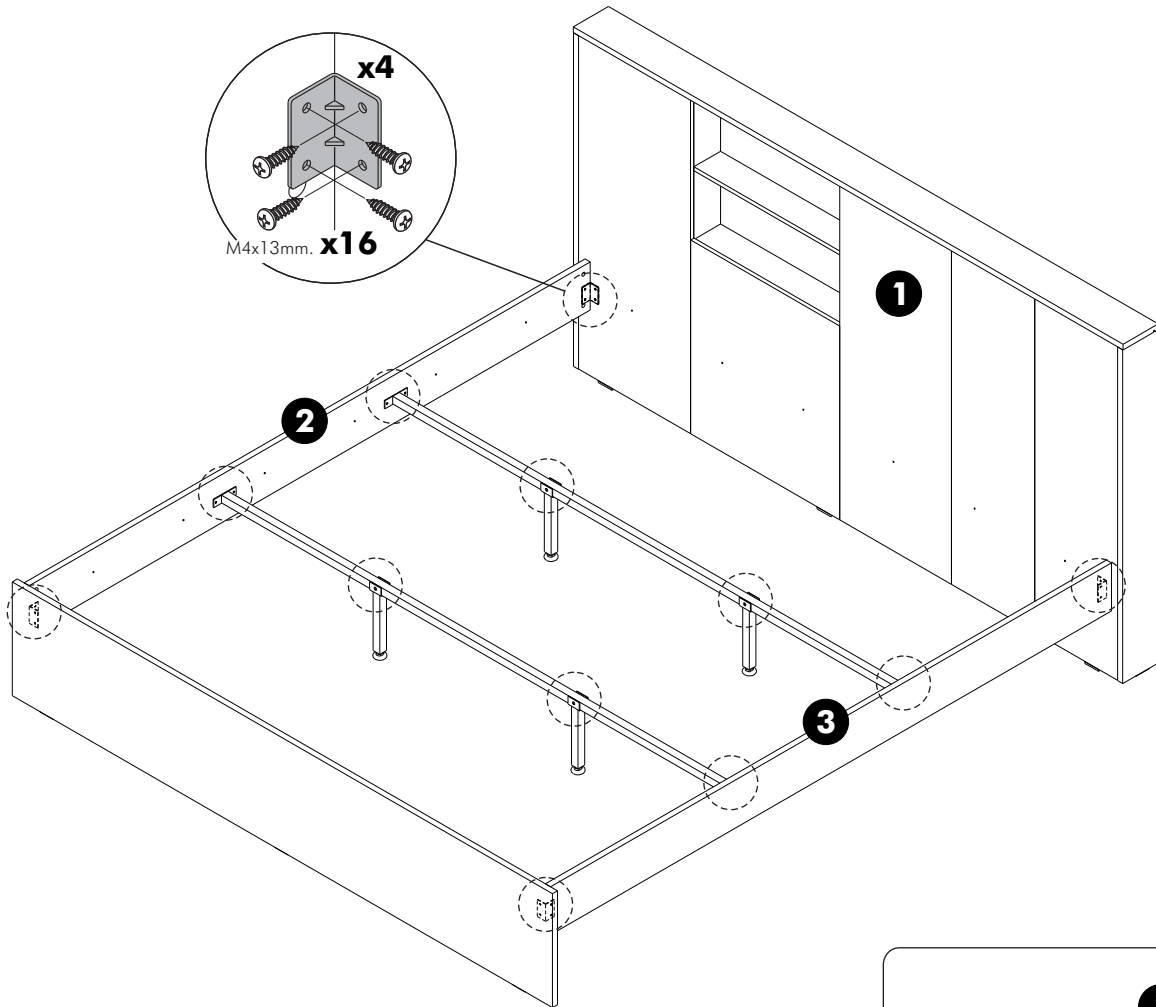

4.

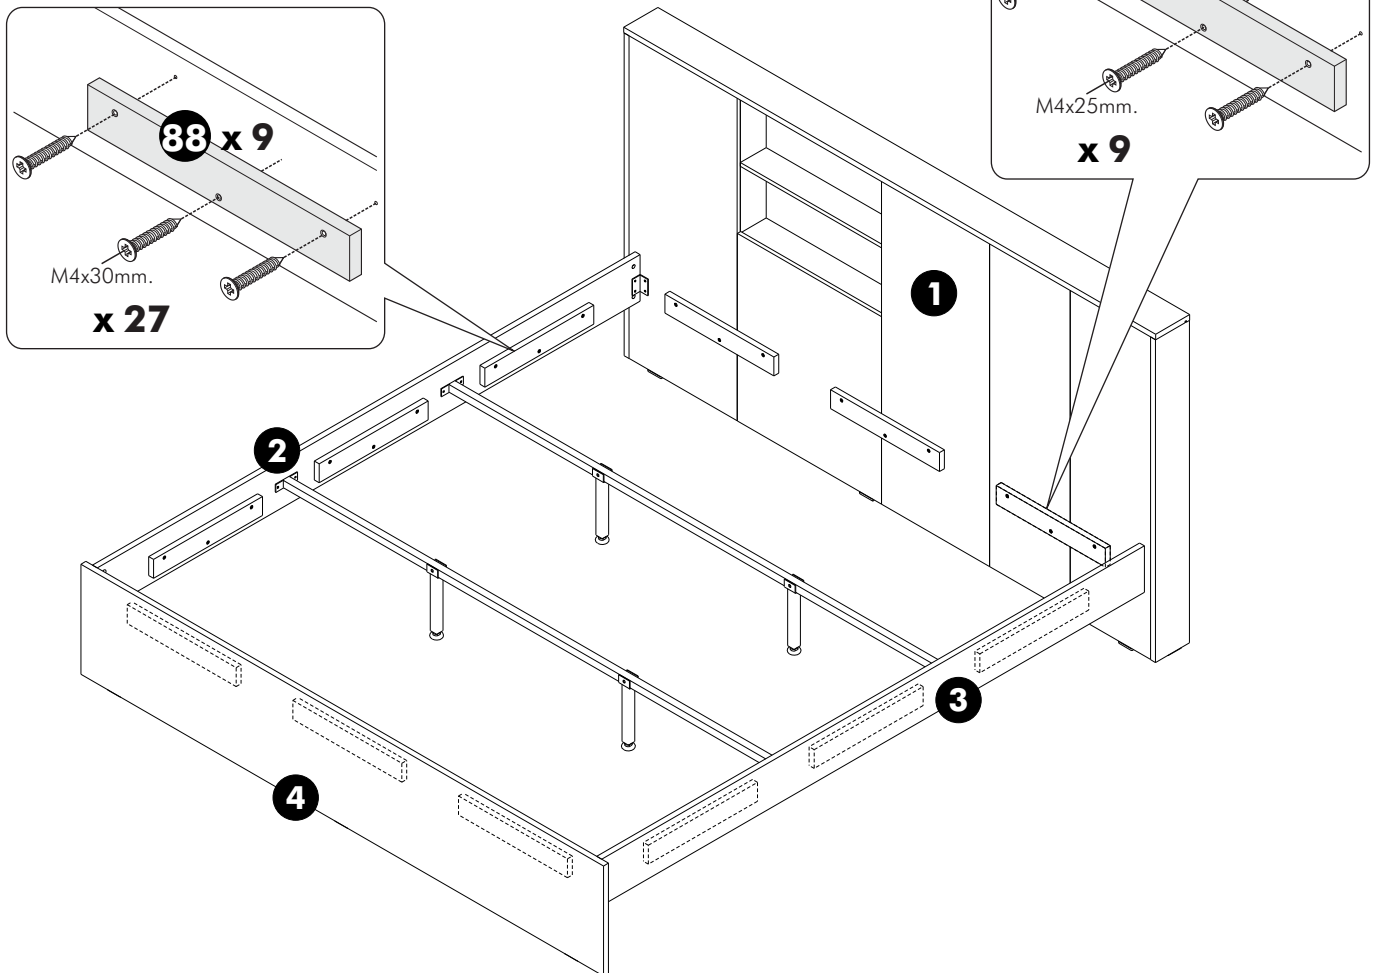

5.

